

TECKNET

TeckNet Door Bell WA628



Note:


German and French language user manuals can be downloaded from our website: www.tecknet.co.uk.

Welcome

Thank you for choosing this TECKNET product. To ensure optimum performance and safety, please read these instructions carefully before operating this product. It is strongly recommended you keep this manual for future reference.

The TECKNET WA628 Wireless Doorbell features 32 classic music chimes with an adjustable volume control to suit your needs. This wireless doorbell kit includes one battery operated transmitter and three batteries operated receivers with up to 150 meters transmission range between the doorbell transmitter and receivers.

Product Layout

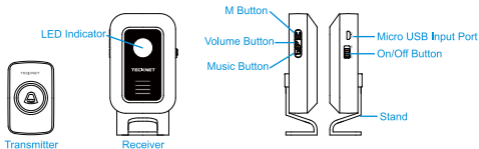

Product Features

- Stylish, sleek exterior design.
- Powerful transmitter provides an amazing 150 meters range for remote control.
- 32 optional music chimes. You can easily select and change chimes to suit your taste or occasion.
- Four-level adjustable volume control.

Product Specification

Power Supplied:	Battery or Micro USB
Receiver Battery Type:	3 * AAA Battery(Not included)
Transmitter Battery Type:	12V/27A Battery
Transmitter Working Voltage:	12V
Receiver Charging Voltage:	5V(Micro USB Port)

Receiver Charging Current: 0.5-2.5A(Micro USB Port)
Receiver Working Current: <1mA
Sound Volume: 85db
Working Frequency: 433MHZ±2MHZ

Package Contents

1 x TeckNet Door Bell WA628
2 x Screws
2 x Screw-joint Coupling
1 x 1M Micro USB Charging Cable
1 x Double-Side Adhesive Tape
1 x Stand
1 x User Manual
1 x Warranty Card

Instructions

Install Batteries


Insert the 3×AAA batteries(not included) into the battery jar of the receiver or insert the micro USB with 5V/0.5-2.5A current into micro USB port(the adapter is not included). Turn on the receiver, there will be a warning tone "Ding-Dong".

Note: 1)3×AAA batteries is alternative scheme, the batteries would not be damaged while charging through the micro USB cable.

2)For longer micro USB cable, please visit our website:www.amazon.co.uk/dp/B00WMCIMZ4

3)For adapter charger, please visit our website:
www.amazon.co.uk/dp/B00J7QVKWU

Transmitter Battery installation

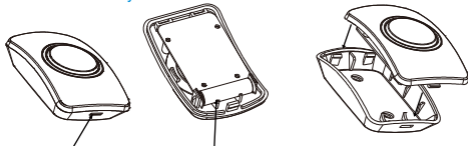

1.Hole for battery case opening;
Use small flat blade screwdriver
to remove the transmitter cover.

2.Before relacing the
transmitter cover,
insert 12V 27A battery.

3.Then close the rear cover.

Note:when the battery is low , please use this method to change the battery.

Music Selection

Press the "Music" button to choose a favorite chime, every time you press the button, it would play the next chime for your selection. Once choose a chime, stop press the "Music" button.

Volume Adjustment:

There are 4-level volumes for TeckNet WA628. Press "Volume" button to increase the volume. When the volume reaches its maximum, press the button again it would turn to minimum volume.

Enter/Exit Pairing

Turn on the receiver, press "Music" and "Volume" button simultaneously to activate the LED light, and to start pairing. Press the transmitter button, the LED of receiver would flash once, which means the pairing is completed. Press "Volume" button or just waiting for 20 seconds to exit pairing.

Delete Pairing:

Turn on the receiver, press "Music" and "Volume" button simultaneously to activate the LED light of receiver. Release "Music" button and hold "Volume" button for 3seconds until the LED light turns off, now the last pairing would be deleted.

Delete all pairing

1. Turn off the receiver
 2. Press and hold "Volume" button
 3. Turn on the receiver, the LED would flash then turn off, together with warning tone "Dingdong"
 4. Release the volume button
- All the pairing are deleted

LED Lighting:

Press "M" button for 3 seconds to activate the LED light. The LED light would last for 2 minutes.

Receiver & Transmitter Installation

Method 1: Adhesive Tape for Transmitter

Apply the double-sided adhesive tape on the back of transmitter case. Remove the outer side of tape, attach the transmitter to the position you need and press hard for 30 seconds.

Method 2: Screw for Receiver

There is a screw hole at the rear of the receiver. Firstly tighten a screw on the position you need, obligate about 2mm to hang on the receiver. Then just simply put the receiver on the screw.

Method 3: Assemble the Stand for Receiver

Assemble the included stand on the rear slot of receiver, then you can put the receiver to the position you need.

Note: It's advised to complete the music selection and pairing before installing the receiver and transmitter, to make sure that the doorbell works properly.

Maintenance

1. Ideally, use high quality alkaline batteries which will last longer and reduce the chance of electrolyte leakage.
2. In order to protect the precision internal electronic components, it's advisable that unqualified users should not attempt to open the unit for maintenance.
3. Do not exposure to continuous direct sunlight or humid environment - this will adversely affect the unit.
4. Correct use of the products helps to effectively extend the service life of the unit.

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

Warranty

We warrant that products purchased from authorized distributors will meet the applicable product specifications and be free from all defects in design, assembly, materials and workmanship. Please contact retailers or visit our website(www.tecknet.co.uk)for more information.

TECKNET

TeckNet
P.O. BOX 122
Liverpool
L9 7WQ
www.tecknet.co.uk