

Action Camera

Wi-Fi - Waterproof - Ultra HD



Wide Angle
Lens



HDMI



Ultra HD

 
 


 
Waterproof
to 30m



Long-lasting
battery

THE BASICS

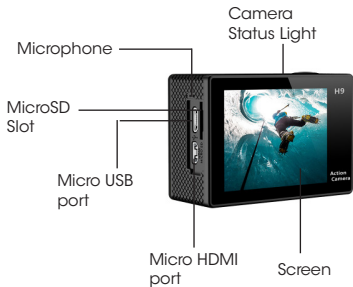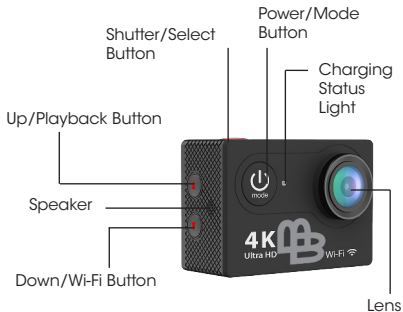

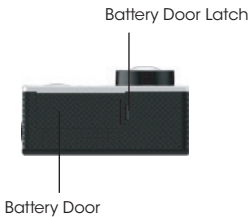

WATERPROOF HOUSING



ACCESSORIES



Waterproof
Housing



Handle Bar/
Pole Mount



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Mount 7



Clip 1



Clip 2



Helmet
Mounts



Bandages



Battery



Lens Cloth



Tethers



Protective
Backdoor



 
USB Cable





Charger

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

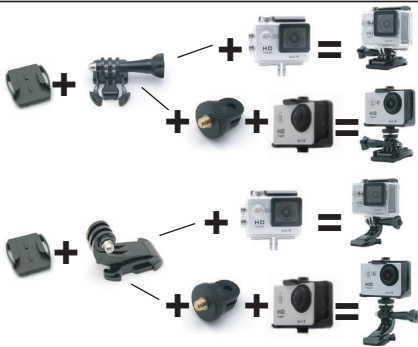

HELMET MOUNTING

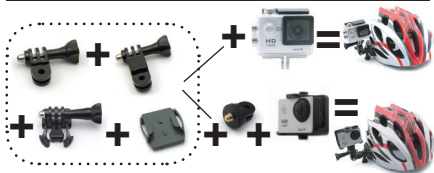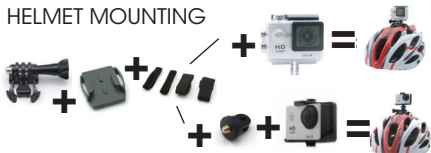  

HANDLE BAR / POLE MOUNTING



GETTING STARTED

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:





Video

Record Video



Photo

Capture a single photo.



Burst Photo

Capture photo bursts.



Time Lapse

Shoot a series of photos
at set time intervals.



Settings

Adjust camera settings,
resolution and more.

SETTINGS



Press the **Shutter/Select Button** in **Settings**-mode to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Video resolution: 4K 10 fps, 2.7K 15 fps,
1080p 60/30 fps, 720p 120/60 fps

MicroSD Card	4K10 / 1080p60	1080p30	720p60
32 GB	120 mins	240 mins	320 mins
16 GB	60 mins	120 mins	160 mins

Looping video:

Off / On (4K & 2.7K not supported)

Time Stamp:

Off / Date / Date&Time

Exposure:

± 2.0 / ± 1.7 / ± 1.3 / ± 1.0 / ± 0.7 / ± 0.3 / 0

Photo Resolution:

12 M / 8 M / 5 M / 2 M

Burst Photo:

3 Photos

Time Lapse:

2s / 3s / 5s / 10s / 20s / 30s / 60s

Continuous Lapse:

Off / On

Power Frequency:

50 Hz / 60 Hz / Auto

Language:

Englanti / Perinteinen Kiina / Italia / Espanja /
Portugali / Saksa / Hollanti / Ranska / Tsekki /
Puola / Turkki / Venäjä / Japani / Korea / Thai

Date&Time:

MM/DD/YY, DD/MM/YY, YY/MM/DD

Sound Indicator:

Shutter On/Off, Start Up 1/2/3 None, Beep On/Off,
Volume 0/1/2/3

Upside Down:

On / Off

Screen Saver:

Off / 1 min / 3 min / 5 min

Power Saver:

Off / 1 min / 3 min / 5 min

Format:

No / Yes

Reset:

No / Yes

Version

VIDEO MODE



Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

**Photo**

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE



Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE



Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse (Settings)** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2, 3, 5, 10, 20, 30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

PLAYBACK

Playing Back Videos and Photos.

To enter the Playback menu:

1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button** or **Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button** to play the video.
7. To return to the **Playback menu**, press the **Power/Mode Button**.
8. To **exit**, hold down the **Up/Playback Button** for two seconds.

STORAGE / MICROSD CARDS

This camera is compatible with **32 GB & 64 GB** capacity **microSD**, **microSDHC** and **microSDXC** memory cards. You must use a **MicroSD** card with a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging the Battery

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The **Charging Status Light** remains **ON** while the battery is charging.
3. The **Charging Status Light** will turn OFF when the battery is fully charged.

*Charging Time 3. hours

CAMERA APP

Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**ICAM-H9**", followed by a series of numbers.
6. Enter the password "**1234567890**".
7. Open the **Ez iCam App** on your smartphone or tablet.

*Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

For Apple iOS

- iPhone 5, 5S, 6 & 6 Plus (iOS 8)
- iPad Air & Mini (iOS 8)

For Android

- Android 4X Quad-core devices



iOS / Android
App Download

COMPATIBILITY

*Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.