

Sports Cam

Waterproof · Full HD



Wide Angle Lens



HDMI



1080P H.264 Full HD

 
 
 


Waterproof to 30m




1.5 Hours

Features

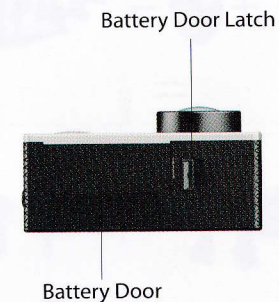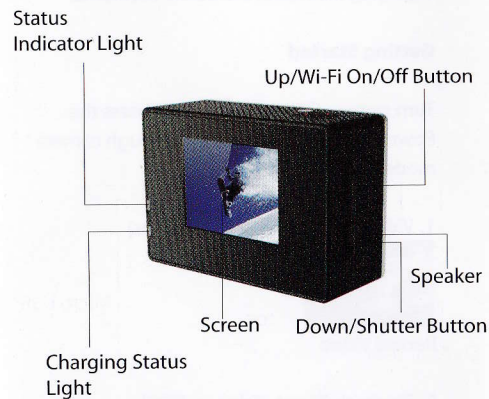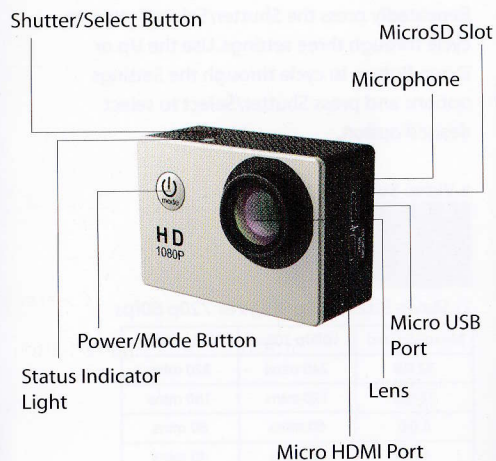

Waterproof Housing

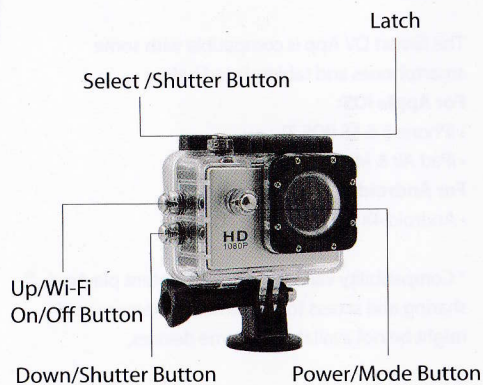 


Accessories



Mounting Your Camera

 Attach your camera to helmets, gear and equipment.

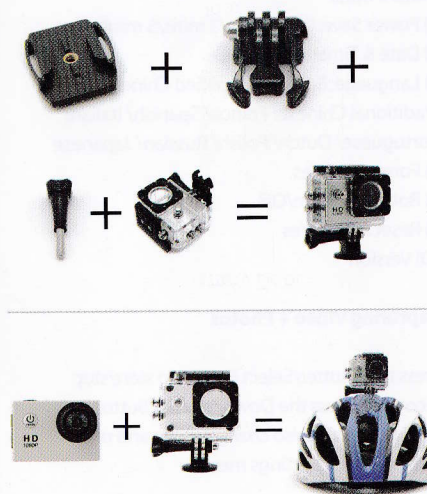



Hello

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

Getting Started

 
Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes.

1. Video (1080p 30fps/ 720p 60fps)



Record Video

2. Playback (Event, Video or JPEG)

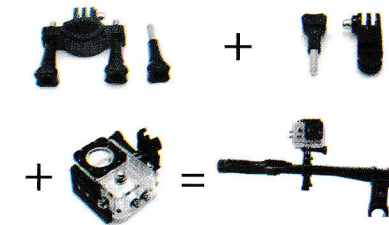

- 1) Sounds: On/Off, Start-up 1/2/3/None, Beep On/Off, Volume 0/1/2/3
- 2) Power Frequency: 50Hz/60Hz/Auto
- 3) Panel Protect (Screen Saver): Off/1 mins/3 mins/5 mins
- 4) Power Save: Off/1 mins/3 mins/5 mins
- 5) Date & Time: YY/MM/DD
- 6) Language: English/Simplified Chinese/ Traditional Chinese/ France/ Spanish/ Italian/ Portuguese/ Dutch/ Polish/ Russian/ Japanese
- 7) Format: No/Yes
- 8) Rotate: 180 On/Off
- 9) Reset All: No/Yes
- 10) Version

Capturing Video + Photos

Press the Shutter/Select Button to start/stop recording. Press the Down/Shutter Button to take a picture. You can also change video and photo settings in the Settings menu.

Storage/MicroSD Cards

This camera is compatible with 4GB, 16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

Charging the Battery

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light remains ON while the battery is charging.
3. The Charging Status Light will turn OFF when the battery is fully charged.

View your videos and photos on the screen

3. Settings (Video Settings, Photo Settings, and System Settings)

Repeatedly press the Shutter/Select Button to cycle through three settings. Use the Up or Down Button to cycle through the Settings options and press Shutter/Select to select desired option.

a. Video Settings:



1) Movie Size: 1080p 30fps or 720p 60fps

MicroSD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins
4 GB	30 mins	40 mins

Connecting to the iSmart DV App (Wi-Fi Edition Only)

The iSmart DV App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the iSmart DV App to your smartphone or tablet at the Apple App Store or Google Play.
2. Press the Power/Mode Button to power camera ON.
3. Press the Up/Wi-Fi On/Off button to turn on Wi-Fi*.
4. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Sports Cam 8" followed by a series of numbers.
5. Enter the password "1234567890".
6. Open the iSmart DV App on your smartphone or tablet.

- 2) Loop Record: On/Off
- 3) Date Stamp: Off/Date/Date & Time
- 4) Exposure: +2.0/+1.7/+1.3/+1.0/+0.7/+0.3/0

b. Photo Settings:



- 1) Resolution: 2M
- 2) Single Shot: On/Off
- 3) Treble Shot (Burst Photo 3 photos): On/Off
- 4) Selftimer (Time Lapse): OFF/5 Seconds/ 10 Seconds/ Double Shoot a series of photos at set time intervals
- 5) Continuous (Burst Photo): 2, 3, 5, 10, 20, 30 or 60 second intervals

c. System Settings:



* Press and hold the Up/Wi-Fi On/Off button for three seconds to turn off Wi-Fi.

Compatibility

The iSmart DV App is compatible with some smartphones and tablets listed below.

For Apple iOS:

- iPhone 5 & 5S (iOS 7)
- iPad Air & Mini (iOS 7)

For Android:

- Android 4X Quad-core devices

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.