

G-TiDE



Vans



Vans 8

Young Vans. Young Choice

Contents

1 Getting Started	1
1.1 Getting to know your touch phone	1
1.2 Installing the SIM card, battery, and storage card	1
1.3 Charging the Battery	1
1.4 Starting up the device.....	1
1.5 Status Icons	2
2 Using phone features	3
3 Setting on your device.....	3
4 Browser	4
5 Experiencing Multimedia.....	4
5.1 Camera & Picture.....	4
5.2 Music.....	5
5.3 FM Radio	5
5.4 Search.....	5
5.5 Sound record	5

1 Getting Started

1.1 Getting to know your touch phone

1.2 Installing the SIM card, battery, and storage card

You need to remove the back cover before you can install the SIM card and battery. Also, make sure to always turn off the power before installing or replacing the SIM card and battery.

1.3 Charging the Battery


New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

1.4 Starting up the device

Power on/off: To power off your phone, press & hold POWER. On release, the Phone options menu opens. Select 'Power off' and confirm.

CE 0359

To power on again, press & hold POWER.


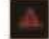 














Silent mode: To silence your phone quickly, press & hold the – volume button to zero volume. Or on the Home screen, touch  and select Settings > Audio profiles. Select ‘Silent’ check box.

Screen sleep: After a period of inactivity, your screen will go to sleep (display will turn black). In sleep, your phone uses less battery power.

Home screen: The Home screen is your starting point for using all the applications on your phone. You can customize your Home screen to display applications, shortcuts, and widgets as you like.

1.5 Status Icons

Connection status icons: Along the top of your phone screen is the status bar. On the left side, icons will appear, notifying you of a new message, upcoming calendar event, or something else you should notice. On the right side of the status bar, you’ll see connection status icons.

	network signal		Sign-in/sync error
	Ringer is off (Silent mode)		Song is playing
	Edge service connected, data flowing		Wi-Fi service connected
	SMS/MMS		loud-speaker
	Call in progress		Battery is charging
	Missed call		Battery is very low
	Connected the PC		Alarm is set
	Connected the earphone		Screenshot

Notes: On the home screen, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window, you can touch the icon on the bottom of the screen to open or close the selected function, sliding your finger left or right to select more functions.

2 Using phone features

2.1 Turning the phone function on and off

To enable or disable Airplane Mode: When you enable Airplane Mode, all wireless radios on your device are turned off, including the phone function, and Wi-Fi.


Adjusting the volume

You can press volume buttons on the side of the phone and the volume slide screen shows.

2.2 Making a call

On Home screen, touch  -> Phone to enter the dial screen.

Touch the on-screen dial pad to enter a number, touch 'Delete' button to delete numbers you've entered. Touch & hold to delete all the numbers in the field.

To dial a number, touch 'Call' button (Green icon ) to select SIM1 card or SIM2 card to make a call. To end a call, touch 'END' button (Red icon).


2.3 Answering and Ending a call

When you receive a phone call, the incoming voice call screen will appear, allowing you to either answer or ignore the call.


2.4 In-call options

While on a call, reveal the in-call options: Record, Hold, Mute, Add call, Dialpad, Hands-free and End.


2.5 Using call history

The missed call icon  appears in the title bar when you missed a call.

2.6 Messaging

Your device enables you sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). On Home screen, touch  and then select Messaging. You can create a message, receiving and managing messages. You can also reply to a text message or a multimedia message.

3 Setting on your device

Control phone-wide settings from the Home settings screen: touch  and select Settings.

3.1 Wireless & networks

SIM management: Check SIM information, default settings and general settings.

Wi-Fi on/off: Select this check box if you prefer to use Wi-Fi for your data connection.

Data usage: Check data usage of this mobile.

More: You can set airplane mode, VPN, tethering & portable hotspot, mobile networks, USB Internet in this menu.

3.2 Device

Audio profiles: You can set predefined profiles as general, silent, meeting and outdoor;

you can also set sound enhancement with BesAudEnh.

Display: Set Personalize and display for your phone. Such as brightness, auto-rotate screen, animation and screen timeout.

Storage: You can check SD card storage and Phone storage.

Battery: You can check battery usage.

Apps: You can manage downloaded/all/ SD card/running applications.

3.3 Personal

Location access: Click to use wireless networks or data connection to locate.

Security: Set screen security, SIM card lock, passwords, device administration and credential storage.

Language & input: Set language settings, keypad & input methods, speech and mouse/trackpad.

Backup & reset: Set backup and restore and check personal data.

3.4 Accounts

Add account: Touch to add account.

3.5 System

Date and time: Set date and time and its format and automatic update with network.

Schedule power on & off: Set schedule power on/off time.

Accessibility: Set Services and System accessibility for your phone such as power button ends call.

Developer options: Tap About phone for several times to show Developer options.

About phone: Check phone information like model number, android version.

4 Browser

To open the Browser, touch  and select the Browser icon.

5 Experiencing Multimedia

5.1 Camera & Picture

All the pictures you can capture or view on your phone are stored on memory card, which must be installed in your phone. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed.

Load pictures onto your memory card

Read the instructions to add pictures to your Memory card.

Take a picture

Captured pictures are saved to the “DCIM” folder on your memory card.


View your pictures

To view the pictures you’ve captured

Picture options

Press menu key to operate the corresponding options while in Pictures.

5.2 Music

To open your music Library, on the Home screen, touches  and select Music icon. Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play.

5.3 FM Radio

This device provides radio function.

Note: Within doors or shielded environment, the receiving effect of radio may be affected. You can improve the effect in the following ways: Near window, adjust the position of earphone cable or adopt manual adjustment.

5.4 Search

When data connection or WIFI network is connected, input the keywords on the input field to search the web page that matched keywords.

5.5 Sound record

The phone can be as sound record.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Photo for reference only

(This user manual for reference only and may found some difference between the phone options mentioned in user manual and the phone options in fact)