
 





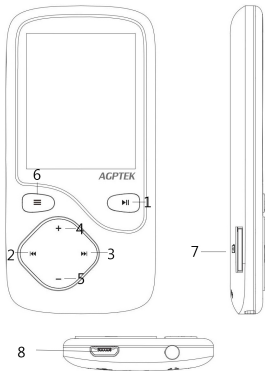
AGPTEK











User Manual

Quick Guide

1. Press the button  for about 3 seconds to turn on/off the device, tap the button  /  to choose its 9 different functions on main interface, and tap  to enter it, tap  for back.
2. Plug Earphone into the jack on bottom left of your device, tap the icon "Music" to access to its function. Tap the + / - button to adjust the volume.
3. Charge the Device: Plug one end of the micro USB cable into the device, plug the other end into the charger (or into the USB port of a computer).
4. Keys definition



1		Play/Pause/Power On-Off /Enter
2		Previous, moving up and fast forward playing
3		Next, moving down and fast backward playing
4		Volume+
5		Volume-
6		Menu button, exit to superior menu/back
7		Micro-SD socket
8		Micro-USB jack

Play Your Music

Select music application on main menu to enter it, and then play your songs according to a related list including “All songs”, “Artists”, “Albums”, “Genres”, “Playlists”, “Album art”, “Audiobooks” and “Update card data”.

❶ Rewind/forward

When it's on main playing interface, long press the ⏮ / ⏭ for rewind/forward, and tap it to the previous/next song.

Note: the rewind/forward function is not supported under Bluetooth mode.

❷ Shuffle/repeat

● Shuffle your music through the button submenu

When it's on main playing interface, long press the button ≡ and then a related list will show, select the item "Shuffle" and "Repeat" under the choice "Play mode". Then choose the shuffle and repeat mode you want.

● Shuffle your music through "Setting"

You can also shuffle your songs under play mode by tap the icon "Setting" on main interface, then select the item "Shuffle" and "Repeat" under the choice "Play mode".


Note: if you play the song through "Music", it will only shuffle the songs in the folder which your music is included. If you play the song through

“Folder”, it will shuffle songs by folder;

If you play songs through “Music”, it will only repeat in the folder which your songs is included. If you play songs through “Folder”, it will repeat by folder with the option “Repeat all”.

③ Playlist

- To use the preset playlist


Long Press the button  and then choose the option “Add to playlist” for the song you want to operate. There are 3 items prepared for you, including “Playlist on the go [1]”, “Playlist on the go [2]” and “Playlist on the go [3]”, you can add the song to any one of these three as you like.

- To create the playlist by yourself

There is a free program called Media Go. It's the easiest program to use for transferring playlists to the AGPTek. . Just create your playlists in Media Go and then right-click its name and select 'Add playlist to X:(Which is your MP3 player's disk) '. (You can download it at <http://mediago.sony.com/chs/download>).

Note: Playlist is not supported under Bluetooth mode.

④ Add bookmark for your audio book

Long Press the button  and then choose the option “Add bookmark” under “Bookmarks”.

It is marked by the stopping time as “hh:mm:ss”. So you can set the stopping time before you add it for continues playing next time conveniently.

Maximum number of bookmarks supported by each audio file is 10. You can also cover the previous bookmark with new bookmark, and then the old one will be replaced by the new.

You can find the bookmarks you saved with the option “Go to bookmark” under item “Bookmarks”, and you can delete them with the option “Delete bookmark”.

Bluetooth Function

Select Bluetooth application on main menu to enter it.

1. Please make sure your BT device is on pairing mode before you search it, which means the green and red light flash at the same time for most BT devices.

2. Your device will be connected with the player automatically be with “Bluetooth connected” for the first time.

3. If it's not connected automatically, you can take the following steps

- Please make sure you BT device is on pairing mode
- Choose the item “Bluetooth Search”, when your BT device is showed on player, choose it with the option “Connect Bluetooth”, it will be connected successfully.

4. In Bluetooth mode, the shuffle option only works in an individual folder, it will shuffle each folder one by one. And you can put all of your songs into one folder (Music) to get them to shuffle if you need.

Note:

- Make sure the previous paired device is under pairing mode.
- Playlist is not supported under Bluetooth mode;
- The rewind/forward function is not supported under Bluetooth mode.

Folder/Recordings/Tools

❶ Folder

Select folder view application on main menu to enter it, then you can browse all the files saved in the player, including files of recording, music, video, pictures etc.

Note: the player supports AMV and AVI video file, and you can use the Video Tool to transfer the formats to the correct.

② Recordings

There are 4 items under “Recordings” including Start voice recording, Recording library, Record format and Record setting. Tap the button ▶|| for entering. In the meantime please note:

1. During recording, only ▶|| and ≡ can be effective. You can adjust the volume by tapping +/–
2. Tap ≡ to save present recording file, or choose “yes” when you back to the main menu.

③ Tools

There are Calendar, Stopwatch, Alarm and Video included in this item. Choose according to your need.

Pictures/E book/ FM radio

① Pictures

Tap the button for enter/play, tap the button « / » to choose up and down.

When it's on main playing interface, long press ≡ to access to sub-menu, including "Brightness", "Backlight timer", "Slideshow settings", "Delete picture" and "Update card data". Choose according to your need.

❷ E book

You can read and edit the article in the device. The device only can recognize the article in "txt." format.

❸ FM radio

Select Bluetooth application on main menu to enter it, and then a related list will show including "Presets", "Manual tune", "Auto tune" and "FM recording".

● Presets

The frequency points of radio station are displayed with 30 frequency points reserved at most.

● Manual tune

Press » to enter manual search mode, you can search programs

manually through pressing ⏮ / ⏭ button.

- Auto tune

Press ⏭ to enter Auto tune mode, it will show “Do you want to auto-tune the presets”, press ⏭ to confirm Yes or No. If choose Yes, it will be searching automatically and automatically save searched station in Presets.

- FM recording

When listening to the broadcast station program, long press ≡ to appear sub-menu, including Bluetooth link, Start FM radio recording, Save to preset, Clear preset and Tuner Region.

Note: the player is defaulted with command band, if you are in Japan, you need to change to Japan Band.

Trouble Shooting

Media player doesn't work or screen doesn't display the content:

- Check battery power Unable to download files
- Check the connection between USB port of the computer and USB cable.
- Format the media player.

Why it can't be connected with my BT device

-Please make sure your BT device is under pairing mode before you search it, which means the green light and red light flash at the same time for most BT devices.

If you have any question about this product, please you can contact with e a g p e .

Specifications

Screen	1.8 inch 128*160 TFT screen
Flash memory	8GB
Audio format	MP3/WMA/ OGG,APE,FLAC,WAV,AAC-LC,ACELP
Video format	AMV /AVI
Recording format	FM/MIC record and WAV
Photo format	JPG,BMP and GIF
Charging time	2.5 hours
BT playing time	4 hours