


Instructions

Steam iron, Mini

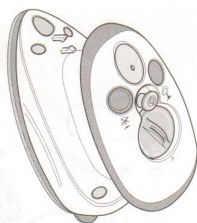


Pym Quality – Made in China
Pym Consumer Europe GmbH, Zweifaller Strasse 130
52224 Stolberg, Germany / Германия
www.pym-consumer.com

Safety instructions

- The appliance complies with the directives 2006/95/EC and 2004/108/EC.
- This appliance is for domestic use only.
- Connect the appliance only after ensuring that the voltage in your home is 100V or 240V and to an earthed socket. If you use an extension cable make sure it is minimum 10 A. Any connection mistake may damage the appliance and void the guarantee.
- If the power cord gets damaged it must be replaced by a qualified electrician.
- During use, the iron soleplate reaches very high temperatures. Do not touch it: danger of scalding!
- Never direct the steam towards persons or animals. Danger of scalding!
- Do not touch the power cord with the iron soleplate.
- Keep the appliance out of the reach of children.
- Do not leave the appliance unattended while plugged in or if it has not cooled down.
- Unplug the appliance when not in use.
- Do not put the iron under running water.

- Always store the iron horizontally.
- For any maintenance or replacement contact Pym Consumer Europe or an electrical dealer. Any attempts of repairing the appliance by unauthorized persons will render the guarantee void.
- Travelling iron is not intended for regular use.
- The iron must be used and rested on a stable surface and when placing the iron on its stand, ensure that the surface on which the stand is placed is also stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The iron is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Characteristics

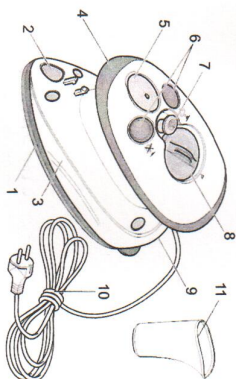

1. Non-stick soleplate
2. Iron temperature light indicator
3. Iron body
4. Ergonomic grip
5. Water tank cap
6. Water tank glass
7. Steam button
8. Temperature control knob
9. Voltage selector 100-240 V
10. Power cord
11. Filling measuring cup

Technical Specifications

Electrical supply:

100-127V 50/60Hz
220-240V 50/60 Hz

Power:

375 Watt
65-200°C

Iron system:

steam

Water tank capacity:

40 ml
0,42 kg

Weight:

73 cm
135 x 76 x 79 mm

Size:

This appliance fulfils the requirements of the EU Directive 2004/108/EC „Electromagnetic-compatibility directive“ and 2006/95/EC „Low voltage directive“. The appliance bears the CE symbol on the nameplate.

Preparing the iron

Attention:

Before connecting the iron, check the voltage of the electrical supply. Select the voltage corresponding to that of the mains socket by using the voltage selector on the back of the iron.

1. Place the iron on a flat heat-resistant surface.
2. Before connecting the iron, fill the water tank using the measuring cup. Lift the cap and fill the water tank with water.

M.B.: It is possible to use tap water. However, if it is too hard we suggest to mix it with distilled water. Do not use pure distilled water as this can cause a premature wear of the appliance and does not allow for a good performance.

3. After filling the water tank with water, close the cap and plug the iron into the socket.

How to use

Set the iron temperature control to the required position for the fabric you want to iron:



- synthetic fibres and delicate garments (low temperature)
- wool (medium temperature)
- linen and cotton (high temperature)

When the indicator light on the iron goes off, the soleplate has reached the set temperature and you can start ironing.

To steam iron

To steam iron set the temperature control to position 0.



- steam selector off
- steam selector on

To emit steam press the button on the iron grip. After use, allow the iron to cool down. Then empty the water tank. When the iron has completely cooled down, wrap the power cord around the grip and fix it with the hook at the front of the iron.

Filling the water tank

1. Unplug the appliance.
2. Open the cap on the grip and fill the water tank with water using the measuring cup.
3. Close the cap.
4. Insert the plug into the mains socket. Wait for the indicator light to go off and carry on ironing. While ironing it is possible to check the water level in the water tank through the two glasses on the grip.

Cleaning and maintenance

- Before any maintenance unplug the appliance and make sure the soleplate has cooled down.
- Do not clean the iron with detergents or descalers.
- Do not put the iron under running water.
- Do not place the iron on metal stands. Use heat resistant surfaces.
- After ironing empty the water tank.
- To clean the soleplate we recommend the Pym Iron Cleaner Art. No. 987 057. Do not use any abrasive or corrosive products which may scour the soleplate.
- Clean the plastic parts with a damp cloth.