

Thanks for purchasing STERREN, this product designed for clock and light usage. It could bring you a more relaxing night atmosphere. Please read the following contents and ensure use it properly.

Product Description

This is a star projector clock. It can project the stars sky with different color stars under the dark environments. The clock shows with LCD display with blue back light. There are 10 lullabies sound and 5 natural sounds for your selection.


Functions

- ★ Clock
- ★ Count Down Timer
- ★ Room Temperature
- ★ Calendar with Date and Time
- ★ Alarm/ Snooze
- ★ Stars light
- ★ Music box



Key Functions

Mode Key:
To switch the display of Time, Alarm 1, Alarm 2 and Count down.

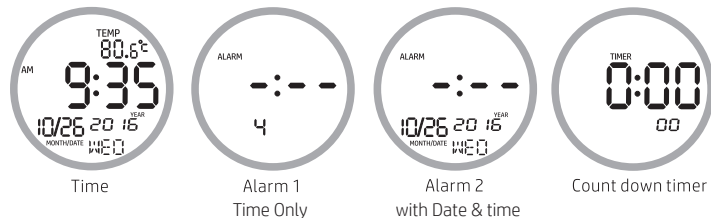

Key Functions

Set Key:
Press and Hold the SET key for 2 seconds to enter the time, alarm, timer setting correspondingly.
Press SET keys once to turn the back light on for 3 seconds.

Timer Key:
A count down timer. Press it and enter into Timer mode; press it again to start or stop the timer.

Light On/Off Key:
Press it to turn on the star light, the color of the light is randomly change.

Up, 12/24 key:
Press it for Up under setting mode.
Press it to change between 12 or 24 hour display mode.
Press it to select the alarm under the alarm setting mode:
alarm ON → alarm and snooze function ON → alarm snooze Off, under the alarm mode

Down, °C/°F key:
Press it for Down under setting mode.
Press it to change the index of temperature between °C and °F under the time mode.
Press it to start or stop the timer under the timer mode.

Sound On/Off Key:
Switch on the sound On or Off.

STERREN wekker

INSTRUCTION MANUAL

STAR PROJECTOR CLOCK 



- ☒ VERLICHT DISPLAY
- ☒ PROJECTOR MET STERRENHEMELMOTIEF
- ☒ MUZIEKFUNCTIE MET 10 SLAAPLIEDJES EN 5 NATUURGELUIDEN

Key Functions

Volume Key:
There are 5 level of volume. It preset at level 3 when the unit on.

Music Select Key:
Press this key to select from 10 lullabies and 5 natural sounds sequentially.

Timer Key for Sound/Music: (At the back)

Timer ON - The sound will be always playing.
30 Mins - It will turn off after sound played 30 mins.
15 Mins - It will turn off after sound played 15 mins.

Battery and Caution

HOW TO CLEAN: Wipe with a clean damp cloth.

CAUTION: As with all batteries, the batteries used with this unit should be kept away from small children who still put things in their mouths. If swallowed, promptly seek medical attention at the nearest doctor or hospital, and have them call the poison control center immediately.

WARNING: Do not use rechargeable batteries. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


PLEASE NOTE: For best results, always use alkaline batteries. Be sure to check the expiration date because fresh batteries will ensure uninterrupted usage/enjoyment of the product. Remove the batteries if the product will not be used for an extended period. If the product does not perform as expected, check for proper battery charge and correct battery installation, or try a fresh set of batteries.

CAUTION: BATTERIES SHOULD BE REMOVED AND REPLACED BY ADULTS ONLY. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries. Be sure to insert batteries with the correct polarities and always follow the product and battery manufacturer's instructions. Remove batteries and store them in a cool, dry place when not in use. Always remove old and dead batteries from the product. The supply terminals are not to be short-circuited.

Information contained herein is subject to change without prior notice.



3 X AA (1.5 Volt) batteries

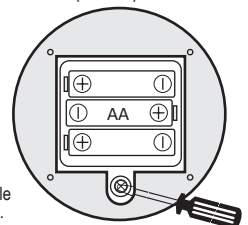

M410

MILLENNIUM
INNOVATIVE CONSUMER PRODUCTS

Made in China