



Part	Operation
① <b>VOLUME</b> buttons	Press to increase or decrease volume.
② <b>REAR SRC</b>	Press to cycle through all the available rear sources. Press and hold to turn the rear source off.
③ <b>SRC/OFF</b>	Press to cycle through all the available sources. Press and hold to turn the source off.
④ Source mode select switch	Use to switch the source mode between the front source and the rear source.
⑤ Thumb pad	Use to select a menu on the DVD menu.
⑥ <b>RETURN</b>	Press to display the PBC (playback control) menu during PBC playback.
▶/	Press to pause or resume playback.
◀◀	Press to perform fast reverse. Press to change the fast reverse speed.
▶▶	Press to perform fast forward. Press to change the fast forward speed.
⑦ ◀◀	Press to return to the previous track (chapter).
▶▶	Press to go to the next track (chapter).
■	Press to stop playback. If you resume playback, playback will start from the point where you stopped. Touch the key again to stop playback completely.
⑧ ▲/▼(FOLDER/P.CH)	Press to select the next/previous disc/folder. Press to recall radio station frequencies assigned to preset tuning keys.
⑨ <b>BAND/ESC</b>	Press to select the tuner band when tuner is selected as a source. Also used to cancel the control mode of functions. Press to switch between modes when playing from discs or external storage devices (USB, SD) with compressed audio and audio data (CD-DA) such as with CD-EXTRA and MIXED-MODE CDs.
<b>AUDIO</b>	Press to change the audio language during DVD playback. Press to switch the audio output mode for Video CD/DivX/compressed video.
⑩ <b>SUBTITLE</b>	Press to change the subtitle language during DVD/DivX/compressed video.
<b>ANGLE</b>	Press to change the viewing angle during DVD playback.
<b>MENU</b>	Press to display the DVD menu during DVD playback.
⑪ <b>TOP MENU</b>	Press to return to the top menu during DVD playback.
⑫ ◻/MUTE	Press to mute. Press again to unmute.