

Wireless Controller

Manual



TABLE OF CONTENT

- 2 Important Safety Instructions
- 3 Introduction
 - Thank you very much!
- 4 Specifications
- 5 Installation
- 5 Operating Instructions
- 8 Troubleshooting
- 10 Contact and Support
- 10 Terms of guarantee
- 11 Certifications

Important safety instructions

- Before using your °G WIRELESS Controller please read this manual thoroughly. If you comply with all instructions and tips, using the WIRELESS Controller is easy and comfortable. Please retain this manual for future reference.
- If you don't want to lose your warranty please refrain from opening the WIRELESS Controller – there are no user serviceable parts inside. Inappropriate handling does

invalidate the warranty and often leads to malfunctions of the device.

- Keep your WIRELESS Controller away from liquids and liquid containers such as vases, bottles, hot baths, jacuzzi tubs, etc. Any damage occurring from liquids invalidates the warranty.

Introduction

Thank you very much!

Congratulations for purchasing the °G WIRELESS Controller. We really appreciate your trust in our fine products. This controller was thoroughly produced under constant quality inspection and according to international quality and safety standards. Have fun with this controller.
If you follow this manual, set up, operation, and basic maintenance of the WIRELESS Controller is simple. In case you encounter any problems understanding this manual please contact your dealer or our friendly customer support under support@sunflex-europe.com.

Specifications

- Official PlayStation® licensed Wireless Controller
- Compatible with PlayStation®2
- State-of-the-art 2.4 GHz wireless technology for comfortable gaming within a range of up to 10 m
- Digital-, Analogue-, and optional Turbo-Mode
- Vibration feedback supported (please refer to game manual to find out about game compatibility)
- Vibration on/off Button
- Fully analogue pressure-sensitive action buttons (only with PlayStation®2, please refer to game manual to find out about game compatibility)
- Low latencies (< 16 ms) – virtually no transfer times
- 300 h battery life (w/o vibration; 100 h battery life with vibration)
- Requires 2 AA batteries (not included)

Technical data is subject to change without notice.

Installation

Connect your WIRELESS Controller's receiver to your PlayStation®2 console only when it is deactivated.

Pay attention to the correct placement of 2 AA batteries in the controller, incorrect polarisation may render the WIRELESS Controller defective. Turn on your PlayStation®2 console. To ensure correct calibration of the analogue thumbsticks and the action buttons, make sure that sticks and buttons remain in their natural position when the controller is turned on using the Vibration ON/OFF Button. Moving the sticks and/or pressing the action buttons while the console starts up may result in incorrect calibration and requires you to restart your PlayStation®2 console and repeat the above steps.

Operating Instructions

Your WIRELESS Controller offers three operating modes, Digital, Analogue and Turbo Mode. The LED entitled "ANALOG" indicates the currently activated mode.

Use the ANALOG Button to switch between Analogue and Digital Mode.

DIGITAL MODE: Thumbsticks are deactivated and buttons work digitally only. There is no pressure sensitive functionality whatsoever.

ANALOGUE MODE: Thumbsticks are operational and buttons offer analogue, pressure sensitive functionality when used with a PlayStation®2 console. Please refer to your game's manual to find out whether analogue functions are supported.


TURBO MODE: The WIRELESS Controller features a Turbo Mode that comes in really handy in fast action games. It can be assigned to any button of the WIRELESS Controller including the D-Pad and L3/R3, making sure that the respective button's command is executed 16 times a second when the player presses and holds this button. To program an action button please press and hold the TURBO Button and then press the button you would like to assign the turbo function to. You may do this with as many buttons as you wish at once. To reset all action buttons to normal operation, please hold Select and Turbo simultaneously. The Analogue Mode LED also acts as an indicator for TURBO Mode, flashing rapidly when TURBO Mode is in use.

The °G WIRELESS Controller also features an advanced Turbo Mode that goes even beyond regular Turbo operation: the Turbo Hold function. This function allows you to not only program action buttons to carry out their commands 16 times

a second when pressed, but also when the button is not pressed. In order to achieve this, repeat the above programming steps once. The WIRELESS Controller will then perform the buttons' commands constantly until deactivated.

Please refer to the graphics below for a summary of the above.

Available Controls: [O, X, Δ, □, L1, L2, L3, R1, R2, R3, up, down, left, right]

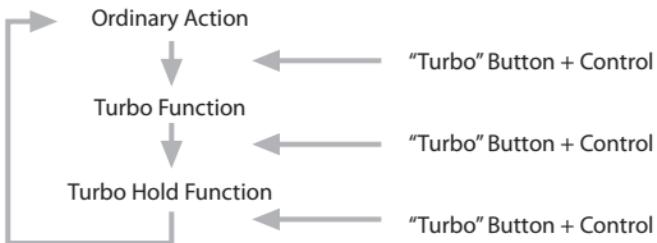

Note: When the WIRELESS Controller is set to Turbo Hold it will enter Sleep Mode after an idle time of three minutes.

Vibration ON/OFF: When starting your PlayStation®2 console the red LED of the WIRELESS Controller's receiver will be lit up while the green one flashes slowly, indicating that there currently is no connection. Press the Vibration ON/OFF Button once for less than one second to activate the controller. Within a few seconds the green LED will stop flashing and light up constantly, indicating a synchronised connection between console/receiver and WIRELESS Controller. Your WIRELESS Controller is now ready

for use. To deactivate your WIRELESS Controller manually, please press and hold the Vibration ON/OFF Button for two seconds. Your WIRELESS Controller features a battery-saving sleep mode which turns off the controller after 30 seconds in case a receiver can't be detected. Furthermore, the controller will also turn off after three minutes without any operation, even if a wireless connection with the receiver is established or the controller is in Turbo Hold Mode. To continue playing please reactivate the controller by pressing the Vibration ON/OFF Button once.

In-game-vibration can be turned on and off at any time using the Vibration ON/OFF Button. Vibration is activated by default. To (de)activate please press the button twice in quick succession. The WIRELESS Controller will vibrate for one second to indicate the (de)activation of the Vibration Mode.

Troubleshooting

If you encounter any problems using the °G WIRELESS Controller please read this section carefully before contacting our customer support or your dealer.

1. My WIRELESS Controller does not work correctly at all.

Turn off your PlayStation®2 console and make sure your WIRELESS Controller is properly connected. Make sure you're within range of the console and the controller's receiver. Turn on the console and try again.

2. My game seems to receive input signals although I do not even touch the controller.

Turn off your PlayStation®2 console and make sure your WIRELESS Controller is properly connected. Turn on the console and try again ensuring that the thumbsticks remain in neutral position and the action buttons are not pressed during the console's boot phase.

3. My WIRELESS Controller does not offer vibration feedback although the game's manual specifically mentions its vibration compatibility.

Please make sure you did not deactivate the vibration of your WIRELESS Controller by accidentally pressing the Vibration Button.

Contact and support

If you still encounter problems that can not be solved by reading the section "troubleshooting", please contact us:

Support:

Sunflex Europe GmbH

Corunnastr. 6

58636 Iserlohn

Germany

Tel: +49-2371-9357-0

Fax: +49-2371-9357-11

support@sunflex-europe.com

Distribution:

Endor AG

Seligenthalerstr. 16

84034 Landshut, Germany

sales@zero-g.eu

Product Information:

www.zero-g.eu

Terms of guarantee

We issue a guarantee of two years after purchase of the °G WIRELESS Controller. Please preserve your invoice together with this manual.

In order not to invalidate the warranty and to protect your health never try to repair and/or open the device. There are no user serviceable parts inside. Furthermore, the danger of electric shock or even fire is reduced considerably.

The guarantee is limited to defective parts or faulty assembly of the Controller exclusively, i.e. it only covers manufacturing defects.

Amongst others the following defects can not be asserted:

- basically all defects resulting from violation of this manual
- defects resulting from improper use or cleaning
- mechanical and optical flaws (e.g. scratches, broken casing caused by brute force or carelessness)
- defects caused by force majeure
- any defects caused by components that are not themselves parts of or the Controller itself

Certifications

- ROHS
- WEEE
- CE
- C-Tick



www.fanatec.com

©2007 Endor AG. Fanatec is a trademark of Endor AG. °G is being registered by Fujiwork Ltd. , "PlayStation" and   are registered trademarks of Sony Computer Entertainment Inc.

This product is not designed or manufactured by Sony Computer Entertainment. All other trademarks are the marks of their respective owners. All rights reserved.

