



Text & Learn



**On-the-go learning
and pretend play in one!**

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Fun next steps on your child's path to learning!

From pretend play...



Text & Learn*
3+ years



**ClickStart™
My First Computer***
3-6 years

To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. From pretend play to gameplay, toys like Text & Learn let children use their imaginations to develop skills they'll use in real life.



**Zippity™
Learning System***
3-5 years



**Leapster2
Learning Game System***
4-8 years



...to gameplay!

Get more ideas to support
your child's learning at:
leapfrog.com/learningpath

*Products sold separately. All products may not be available in all countries. Actual products may vary.



Learning Path™

See the Learning.™

Learning experiences are never one-size-fits-all. That's why we created an online Learning Path that can be custom-tailored to shape and inspire each child's unique learning journey. Connect and see what they're learning, how they're growing and, most importantly, who they're becoming.

leapfrog.com/learningpath



The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning progress updates, articles, product news and special offers from LeapFrog.

leapfrog.com

Learning Stones

Lets little learners play in a grown-up way!

QWERTY Keypad Navigation

Children become familiar with QWERTY keypad layout as they pretend to text with Scout and play letter games.

The Alphabet

Letter mode helps children identify the names, sounds and uppercase and lowercase forms of all the letters in the alphabet.

Pretend Play

Children pretend to text with Scout and explore Scout's calendar and music in the play browser.

Following Directions

Children can learn to follow directions and help Scout find his way home.



Instructions for Play



Getting Started

To turn on Text & Learn, slide the volume switch on the side to the desired volume setting. To turn it off, slide the switch to OFF.

Note: Text & Learn will turn off automatically after a period of inactivity. You can wake it up again by pressing any button.



The Paw button is similar to an Enter button. Press the Paw Button when you finish making a selection.

Learning Modes

Text & Learn offers three learning modes. When you turn it on, it will begin in Letter mode.



Letter Mode

Press a letter key to hear the letter's name and sound. The letter will appear on the screen with a funny animation of a phrase beginning with that letter.



Game Mode

- Letter Bubbles: Scout is getting a bath! When you see a bubble with a letter on it, pop the bubble by pressing the matching letter on the keypad.
- Lost Puppy: Scout is lost! Find the shapes in order to help Scout navigate his way home!



Pretend Internet Mode

- Scout's Calendar: Listen to the *Days of the Week* song and explore what Scout has scheduled for each day.
- Scout's Tunes: Listen to different types of music and dance with Scout.
- Text Messages: When Scout sends you a text message, you can reply by pressing letters and then pressing the Paw button.

Instructions for Care

For indoor, dry-location use only. Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

- CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.
- ATTENTION:** Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée des enfants.
- CAUTION:** If for any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact LeapFrog Consumer Services for replacement if under warranty.
- ATTENTION:** Si pour quelque raison que ce soit, l'écran (d'affichage) est brisé ou fendu, mettez immédiatement ce produit hors de portée des enfants. Contactez ensuite le Service à la clientèle LeapFrog pour qu'il soit remplacé (si ce produit est sous garantie).
- WARNING:** It is rare but possible for seizures to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, play/watch in a well-lit room and take 10- to 15-minute breaks every hour.
- AVERTISSEMENT:** Il peut arriver que certaines personnes soient sujettes à une attaque sous l'effet d'une lumière vive ou d'un jeu de lumières provenant de l'écran d'un téléviseur ou d'un ordinateur. Pour réduire ce risque, utilisez le téléviseur dans une pièce suffisamment éclairée, installez-vous à une distance raisonnable de l'écran et faites une pause toutes les heures, pendant 10 à 15 minutes.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

- Open the battery door with a screwdriver.
- If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
- Replace battery door securely.

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT** incinerate used batteries.
- DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).
- DO NOT** use rechargeable batteries.
- DO NOT** recharge non-rechargeable batteries.
- DO NOT** short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- NE PAS** incinérer les piles usagées.
- NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.
- NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS** utiliser des piles rechargeables.
- NE PAS** recharger des piles non rechargeables.
- NE PAS** court-circuiter les terminaux d'alimentation.

Troubleshooting

Symptom	Try This
Toy does not turn on or does not respond	<ul style="list-style-type: none">Make sure the volume switch is not in the OFF positionMake sure batteries are correctly installedMake sure battery cover is securely attachedRemove batteries and put them back inClean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry clothInstall new batteries
Toy makes improper responses	<ul style="list-style-type: none">Follow the above instructions to clean battery contactsInstall new batteries

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Consult the dealer or an experienced radio/TV technician for help

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at www.leafrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at www.leafrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at www.leafrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funstastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leafrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leafrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

LEAPFROG, the LeapFrog logos, the LeapFrog Learning Path logo, SEE THE LEARNING, LEAPSTER and CLICKSTART are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2009 LeapFrog Enterprises, Inc. All rights reserved. ZIPPITY is a trademark of Disney Enterprises, Inc. Disney elements © Disney.

leafrog.com

For ages 3 years and up.
Convient aux enfants à partir de 3 ans.
Part number 605-11477-B