

Quick Start Guide

www.golfbuddyglobal.com

VER.1.7.0.5

BASIC OPERATION

WTX

Target / Hazard Information

- From the Play Golf Mode, tap the >> image or swipe the screen from right to left continuously to view the Hole Layout and Hazard Information.
- Tap the
 image or swipe the screen from left to right to return to the previous screen.
- From Hole Layout screen, Tap the >> image or swipe the screen from right to left to view Hazard Information.
- If more than 3 hazards are available, swipe the screen up or down to see more.



Quick Watch Mode(Sunrise/Sunset Time)

- In Play Golf Mode, tab the indication area at the top of the screen(outlined in red on the image) to switch the Quick Watch Mode for the current, sunrise and sunset time.
- The Quick Watch Mode will be displayed for 5 seconds and will automatically return to Play Golf Mode. Or, instead of waiting, tap the screen and it will return to Play Golf Mode immediately.



ΚO



DEVICE OVERVIEW

Overview of WTX





WTX

Main Menu

GolfBuddy

This feature runs "Golfbuddy GPS Golf Application" (*Refer to Play Golf for the detailed information)

Find Phone

Screen Description

This feature will be used to find the phone connected with WTX via Bluetooth, and needs to install the Golfbuddy application for use in

Setting

BT settings	Bluetooth On/Off, Visibility		
Display	Main Menu style, Brightness, Screen time out		
Clock	Clock type, Date, Time, Time format, DST		
Sport	Lap Len(Distance per lap)		
Language	Multi-lingual		
Motion	Wake-up gestures		
Style	3 theme styles		
Calendar	Calender		
Reset	Erase all user data from WTX		
About	Information(Device, S/N etc)		

BASIC OPERATION

Automatic Hole Recognition

- The WTX will automatically advance to the next hole as you play through the course.
- · Please note, in rare instances, it may be necessary to manually advance

Manual Hole Selection

- . To change from the current hole to the next hole in Play Golf Mode, swipe the screen from top to bottom.
- To change from the current hole to the previous hole in play Golf Mode, swipe the screen from bottom to top.

• From Play Golf Mode, press and hold anywhere on the screen for 4 seconds to exit the game. Tap the "Yes" button to end the round.



WTX

WTX

How to use the Demo Mode

• To view the function of GOLF mode while away from the golf course, you can put the WTX into "Demo mode". To enter the "Demo mode", tap the red area in numerical order continuously at the screen of searching the satellite







DEVICE OVERVIEW

Screen 설명





 (1) 홈 번호
 ⑥ 그런 center 까지

 (2) 고저채Stope)
 ? 다음 screen 표시

 (3) 배터리 전환 표시
 ⑧ 그런 front까지 남 ⑨ Dynamic Green \(\)

 (4) 파 정보
 ⑩ 조카(모그런 표시

 (5) 그런 back 까지의 남은 거리
 ⑩ 조카(모그런 표시
 그린 center 까지의 남은 거리

메뉴 설명

제품 설명

시계 화면을 오른쪽에서 왼쪽으로 밀면, WTX 가 제공하는 모든 앱들의 아이콘이 나타납니다. (1) GolfBuddy

골프 코스에 도착한 후, GolfBuddy 를 선택하면 골프 모드를 실행합니다.

(2) 만보계

___... (*모바일 디바이스에 GolfBuddy 어플리케이션을 설치하면 만보계 데이터와 활동 시간을 그래프와 함께 확인할 수 있습니다)

(3) 설정

WTX의 앱 기능 및 사용 환경을 사용자에 맞게 설정할 수 있습니다.

20-1111	
블루투스	블루투스 켜기/끄기, 검색 기능
디스플레이	메인 메뉴 스타일, 밝기, 화면 자동 꺼짐
시계	시계 타입, 날짜, 시간, 시간형식, 서머타임
스포츠	구간당 거리 알람 설정
언 어	다국어
무셔석전	통잔으로 하며 켜기 성전

스타일	3가지 테마 선택
캘린더	월간 달력 화면
알리미	연결된 모바일디바이스의 알림 수신 목록 및 내용
초기화	모든 사용자 데이터 삭제 및 초기화
정 보	모델명

GETTING STARTED

- Press and hold the power button for 4 seconds to turn the WTX watch ON/OFF.
- If you experience incorrect yardages or unusual behaviour on the WTX, we recommend to do a RESET. To RESET: turn the WTX off and then back on.

Charging

Power On/Off

- Place the WTX on the charging cradle with the charging terminals facing each other
- Connect the charging cradle with the USB power adapter by using the USB cable.
- Plug the USB power adapter into an electric socket.
- After fully charging the WTX, disconnect it from the charging cradle. Unplug the USB power adapter from the electric socket.

*Important: Do not use a quick charger ac adapter to charge the WTX watch. Doing so may cause damage and void the warranty. Ac adapters should not exceed 5.0v. Check your ac adapter prior to using.

Battery charging tips and precautions

- The "Data Sync" button may appear when using a power source other than the USB power adapter, such as a computer, which will be only used to update the firmware and courses via the GB Manager. Ignore this button when charging. Pressing the button may result in a
- slower charge or stopping the charge completely.

 Sweat or liquid on the charging terminals, may cause corrosion. Clean the terminals before charging the battery.
- If the battery is completely depleted, the WTX will not turn on immediately when the charging cradle is connected. Allow a depleted battery to charge for a few minutes before turning the WTX on
- When the battery is charged in a high temperature environment such as inside a car during the summer, the WTX may overheat and can cause serious damages to the battery.
- Connecting the charger improperly may cause serious damage to the WTX.
 Any damage caused by misuse is not covered by the warranty.

ADVANCED OPERATION

- You can access the Dynamic Green View and Pin Placement Mode by tapping on the green $\widehat{\mathbb{Q}}$. After the pin placement, you can return to the golf screen by tapping the screen.
- From Dynamic Green View screen, you may also change the placement of the pin on the green image by dragging the pin.

Measuring Shot Distance

DEVICE OVERVIEW

알람기능을 설정하고 관리합니다.

GETTING STARTED

- In Play Golf Mode, press and hold anywhere on the screen for 2 seconds to enter the Shot Distance screen.
- To start measuring your shot distance, tap the play button ▶ . The Shot Distance Mode will return to the Play Golf screen by tapping the screen or pressing the "Power/ESC" key and will measure the distances in the background.
- Once you have reached your ball, press and hold anywhere on the screen for 2 seconds and tap the pause button || to finish measuring and view the shot distance

(5) 사이클링

(8) 알람

(6) Sedentary

수 있습니다 (7) 내 폰 찾기

- In the Shot Distance screen, you can enter "SETTINGS" by tapping the image or swiping the screen from right to left.
- · From the Settings Menu, you can change the unit of measurement between Yards and Meters as well as switch the screen to Always ON/ OFF. **Note: If "Screen Always On" is set to ON, the screen will always be on in Golf Mode, but the battery life will decrease faster(Max. 6hours).

런닝 기능을 이용해 운동거리, 시간, 페이스를 확인, 기록할 수 있습니다.

연결된 모바일디바이스를 잃어버릴 경우, 디바이스를 찾도록 도와줍니다.

• 전원버튼을 4초이상 길게 누르면 WTX 시계가 켜지거나 꺼진다.

눌러 전원을 껐다가 다시 켜서 리셋하는 것을 권장합니다.

사이클링 기능을 이용해 이동시간, 거리, 속도 등을 확인, 기록할 수 있습니다.

Sedentary 기능을 이용해 앉아있는 시간을 30분 간격으로 '30~600분'까지 설정 할

• 야드로 표시된 거리가 정확하지 않거나 WTX가 비정상적으로 작동할 경우, 전원을 길게

WTX

WTX

Play Golf

WTX

BASIC OPERATION

- Once you are at the course, swipe the screen to the left to view the Main Menu.
- From the Main Menu screen, tap the "GolfBuddy" icon to enter Golf Mode. The WTX unit will automatically search for the golf course.



• By tapping the distance number on the screen (see images below), you will be able to



FCC Statement (USA)

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

1. NOTE: This equipment has been tested and f 1. NUI: 1 Inis equipment has been tested and round to comply with the limits ror a class broightal device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television occur in a particular installation. It this equipment does cause harmful interference to ratio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help
 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

GolfBuddy products come with a limited warranty against defects in materials and workmanship when used under nomal consumer use for a period of one (1) year ("Limited Warranty"). The Limited Warranty begins to run from the date of original retail purchase. GolfBuddy, as its sole and absolute discretion, shall either (i) replace or repair the defective part(s) or the unit with a new or reconditioned part(s), or (ii) issue a credit for the parts or products that are covered under the Limited Warranty.

To obtain warranty repair service, visit http://help.golfbuddyglobal.com or email GolfBuddy technical

support at support@golfbuddyglobal.com to obtain a Return Authorization Number. All returned products must be accompanied by an original purchase receipt and the Return Authorization Number. Any products that are returned without the requisite information shall be returned at the purchaser's

GETTING STARTED

WTX

WTX

WTX

배터리 충전

• WTX를 구입한 후 처음 사용하기 전에 배터리를 충분히 충전하여 사용하십시오.

*반드시 GolfBuddy에서 제공한 정품 WTX전용 충전 크래들을 사용하시기 바랍니다. 잘못된 사용으로 인한 피해는 보증서비스가 적용되지 않습니다.





PC에 연결 전원 어댑터로 충전

- 전원어댑터로 충전할 때 : 급속충전 어댑터를 사용하면 제품에 손상을 줄 수 있으니, 반드시 5V를 초과하는 어댑터는 사용하지 마시기 바랍니다.
- 을 누르면 PC에서 WTX를 USB장치로 인식되어 PC에서 충전할 때 : 충전이 안될 수 있으니, 주의하십시오.
- 충전완료 : 위 화면과 같이 100%가 표시되면 충전이 완료되었으니, 제품을 크래들에서 분리해 주십시오.

배터리 충전 시 알아두기

- 충전 단자에 땀이나 물기가 묻으면 제품에 부식이 발생할 수 있습니다. 반드시 땀이나 물기를 제거한 후 충전하세요.
- 배터리가 거의 남아 있지 않을 경우 충전기에 연결하여도 WTX의 전원이 켜지지 않습니다. 전원을 켜기 전에 최소 몇 분간 배터리를 충전하세요.
- 여름철 차 실내와 같이 온도가 높은 밀폐된 곳에서 충전을 하면 충전 중 발생하는 열로 인해 화재가 발생하거나 WTX가 변형될 수 있습니다.

VER.1.7.0.5

BASIC OPERATION

WTX

- 골프장에 도착하면 화면을 오른쪽에서 왼쪽으로 밀어서 메인 메뉴로 이동합니다
- 메인 메뉴에서 "GolfBuddy"를 선택해서 골프모드로 이동합니다 * 골프 모드는 골프장(티박스 주변)에서 GPS위성을 수신 후 이용할 수 있으며, 위성 검색 -코스 검색 - 티 박스 순으로 화면이 나타납니다.



골프 모드



그린까지 거리 및 타겟/헤저드 정보

• 플레이화면에서 그린까지의 F/C/B 거리정보와 그린 모양을 확인할 수 있으며, 거리를 표시하는 숫자를 터치하면 큰 숫자로 거리 정보를 확인하거나 듀얼 그린까지의 거리 정보를 동시에 확인할 수 있습니다.





• 플레이화면에서 "⊷"를 터치하거나 옆으로 밀면 '홀 뷰 -〉 타켓/헤저드 정보' 순으로 확인할 수







CH



快速入门指南

www.golfbuddyglobal.com

VER.1.7.0.5

WTX

基本操作

目标/障碍 信息

- 在 打高尔夫 模式下,点击 👀 图标或者从右至左连续滑动屏幕,可以看到球洞布局 和障碍信息。
- 点击 图标或者从左至右连续滑动屏幕可以回到之前的屏幕。
- 在球洞布局屏,点击 👀 图标或从右至左连续滑动屏幕可以查看障碍信息。
- 如果多于3个障碍,可以上下滑动屏幕查看







快速查看模式(日出/日落时间)

- 在 打高尔夫 模式下,点击屏幕顶部的指示区(图红框标出的区域)可切换快速查 看模式,显示当前时间,日出和日落时间。
- 快速查看模式会显示5秒然后自动返回至 打高尔夫 模式。或者如果不想等待,直 接点击屏幕即可回到 打高尔夫 模式。





BASIC OPERATION

좌우그린 변경하기

• 플레이화면에서 "LP"을 터치하면 좌 또는 우그린으로 변경할 수 있습니다<u>(</u>투그린이 있는 홀에서 나타납니다)





 플레이화면에서 "→ "를 터치하거나 옆으로 밀어 "홀 뷰"로 변경한 후, 화면 어느 곳이나 터치하면 그린언듈레이션을 확인할 수 있습니다.





퀵 와치 모드(일출시간/일몰시간)

- 플레이 중 시간을 확인하고 싶다면, 플레이화면 상단을 (아래 그림 빨간색 네모 표시 부분) 터치하면 시계화면을 실행할 수 있고, 현재시간과 일출/일몰시간을 확인할 수 있습니다.
- ╸ 퀵 와치 모드는 약 5초 후에는 자동으로 골프 모드로 돌아갑니다. 화면을 터치해도 바로 골프



设备简介







主菜单

此图标为Golf Buddy下场打球应用程序 (*详细信息参看 打高尔夫 小节)

此功能可连接到已搜索到的手机,手机上需 要安装有 Golf Buddy 移动应用。

设置	
蓝牙设置	1

牙设置	蓝牙开关,可见性	动作	唤醒手势
显示	主菜单样式,亮度,熄屏时间	样式	3种主题样式
护	时钟样式,日期,时间,时间格式	日历	日历
动	周长(毎週的长度)	重置	清除 WTX 中所有的用戶
音音	多种语言	关 于	相关信息(设备,串号等

基本操作

自动球洞识别

• 当在球场打球时, WTX 会自动移至下一洞,少数情况下可能需 要手动选择移至下一洞。



WTX

手动选择洞

- 在 打高尔夫 模式中要从当前洞移至下一洞,可以从上向下滑动

在 打高尔夫 模式中要从当前洞移至前一洞,可以从下向上滑动



• 在 打高尔夫 模式,按住屏幕任意位置4秒可以退出赛局。点击 "Yes" 按钮结束此局。



BASIC OPERATION

- WTX 는 골프장에서 GPS위성수신이 안정되어 있다면, 자동으로 다음 홀을 인식해서 사용하기 편리합니다
- 만약, 위성수신이 불안정하여, 자동으로 홀을 인식하지 못할 경우, 수동으로 홀변경을 할 수 있십니다.

흘 자동인식

WTX

• 플레이화면에서 화면을 위 또는 아래로 밀면, 다음 홀 또는 이전 홀로 손쉽게 변경할 수 있습니다.

골프 모드에서 나가기

- 플레이화면에서 화면 아무 곳이나 4초 이상 누르고 있으면 골프 모드를 종료할 수 있습니다.
- 골프 모드를 종료하려면 오른쪽 화면에서 "Yes"를, 아니라면 "No"를 터치하십시오.

데모 보기

• 위성수신이 안 되는 실내에서 WTX의 기능을 사용해 보고자 할 때, 아래와 같은 '골프모드'의 위성수신 화면에서 붉은 색 영역을 번호 순서대로 터치하면 '데모보기' 모드를 사용할 수 있습니다.



开始使用

电源开/关

- 按住电源按钮4秒来开/关 WTX 手表
- 如果码数不正确或 WTX 工作不正常,建议您重置一下设备。要重置设备只需关

- 将 USB 充电板对准手表背面的触点进行连接充电。充电信息会在屏 幕上显示,充满时显示 100%。
- 移除充电板以断开它于 WTX 的连接

*注意: 请不要用快速充电器对 WTX 充电,否则有可能造成设备损坏以及影 响保修。充电器电压不可超过5V。请在充电前检查您的充电器参数。

ADVANCED OPERATION

• 그린 이미지를 터치하면 다이나믹 그린 뷰 화면이 나타납니다. 이 다이나믹 그린 뷰 화면에서 🔐 핀모양 아이콘을 드래그하면 원하는 위치로 이동할 수 있으며 새로운 핀 위치까지의 거리를 확인할 수 있습니다.



WTX

화면을 터치하면 플레이 화면으로 돌아갈 수 있습니다.



비거리 측정모드

WTX

- 플레이화면에서 어느 곳이나 2초 이상 누르고 있으면 비거리 측정 화면으로 이동할 수 있습니다
- 비거리 측정을 시작하려면 ▶ 버튼을 터치하고, 측정하고자 하는 지점으로 이동하면 비거리를 확인할 수 있습니다. 새로운 비거리를 측정하고자 한다면, (1) 버튼을 터치하면 새로운 비거리 측정을 시작할 수 있습니다.
- 버튼을 제외한 어느 곳이나 터치하면 비거리 측정 모드를 빠져나와서 플레이 화면으로 돌아갑니다.



• 비거리 측정 화면에서 화면을 우->좌로 밀면 골프모드의 환경설정인 "SETTING" 화면으로 이동할 수 있습니다. 'SETTING' 화면에서는 아래의 내용을 변경할 수 있습니다

*UNIT: Yard 또는 Meter

*Screen Always On: ON 또는 OFF

*중요 : 'Always Screen On' 에서 'ON'을 선택할 경우, 화면은 골프모드에서 항상 켜있게 되므로 배터리가 빨리 소진될 수 있습니다.(최대 6시간 정도 가능)



基本操作

- 当您在球场,向左滑动屏幕可以查看主菜单。
- * 在主菜单中点击 "GolfBuddy" 图标可以进入 Golf 模式。WTX 设备会自动搜索高



• 点击屏幕上的距离数字(见下图), 可以切换打球界面。





WTX

放置旗杆

高级操作

- 点击果岭 🕧 可访问动态果岭视图及旗杆定位模式。放置旗杆后,点击屏幕可回到 Golf 界面。
- 在动态果岭视图界面, 可以拖动旗杆改变旗杆在果岭图上的位置。



- 在打高尔夫模式下,按住屏幕任意位置2秒可进入击球距离屏幕。
- 点击 ▶ 按钮开始测量击球距离。点击屏幕或按住 "Power/ESC" 按 钮回到 打高尔夫 屏,会继续在后台测量距离。
- 当到达高尔夫球所在位置,按住屏幕任意位置2秒并点击暂停按钮来 结束测量,可查看此次击球距离。

• 在击球距离屏幕,可以点击 (1)图标或从右至左滑动屏幕来进入"设置"。

• 在设置菜单,您可以切换测量单位码/米,以及切换背光的开/关。 *注意: 如果 "屏幕常亮"设置为开启, 屏幕在 Golf 模式下常亮,此时比较损 耗电池电量。



WTX

远离高尔夫球场或找不到卫星信号的室内可以查看高尔夫模式的功能。 你可以把WTX在"演示模式" 进入"演示模式在搜索卫星的屏幕上按数值顺序连续点击红色区域。



GolfBuddy WTX自购买之日起1年以内(以发行收据的日期为准)可得到免费保证。 保证期间内根据本公司的判断免费予以替换或维修。如果是因消费者的失误而发生 的问题,即使在保证期间内也收取相应的费用。如果除GolfBuddy技术员以外的其 他人员擅自改造或变更仪器时,则无法得到赔偿。

