
HD Digital photo Frame



User guide

1, Power on/off

1.1 Press “Power” button for 0.5 seconds to start the machine and enter the main menu (Fig.1).

1.2 Press “Standby” button on the remote to enter the standby mode. Re-press to exit.

1.3 Press “POWER” button for 2 seconds to turn off the power.

2, Main menu

If “Auto play” is not in the state of “Off ” and no card is inserted at the power on, the main menu appears. If the card is inserted at the power on, the corresponding option of “Auto play” will be played directly when the main menu is entered. The USB content will be played in default when SD and USB are inserted at the same time. On the main menu, press “Left, Right, Up and Down” buttons to move the cursor to corresponding function options, and then press “ENTER” button to enter



Fig.1

3, Movie play

Press “Up and Down” button to choose the video file and repress “ENTER”button to play.



Fig.2
When

playing, press “Up and Down” buttons to play the previous or next file; “Left and Right” buttons to adjust the volume; “REW and FWD” buttons to go forward or reverse. Press “ Back” button to return to the previous menu. The video play help menu will appear if the “Back” button is long pressed for 1 second and then released. (Fig.3)

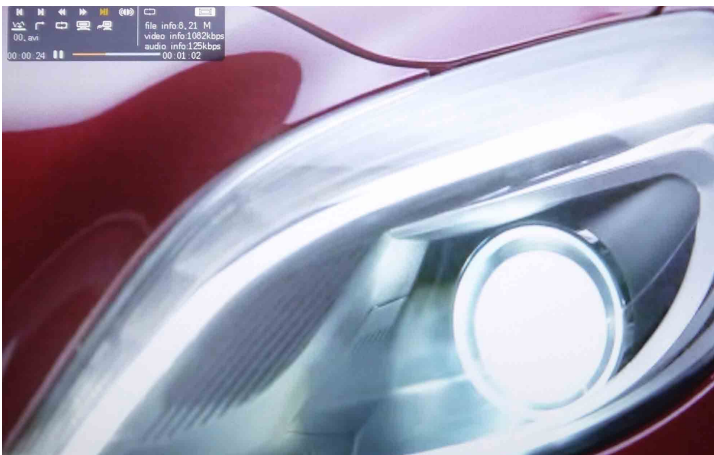 


Fig.3

The video play help menu shows the current job information. Press “Left and Right”button to move the cursor of the function option on the upper left. Press “ENTER”to choose the help functions.

help function options are in turn:

“Previous”, “Next”, “REW”, “FWD”, “Play/pause”, “Track”, “Caption”, “Single play”, “Repeat”, “Brightness”, “Wide/narrow screen” and “Video output”.

“Previous”: to play the previous one.

“Next”: to play the next one.

“REW”: to reverse fast.

“FWD”: to move forward fast.

“Play/pause”: the switch of the play or pause.

“Track”: to switch the track if the video has many selectable tracks.

“Caption”: to switch the caption if the video has selectable captions of many nations.

“Single play”: to stop the play after the video is played.

“Repeat”: to play the video in circle.

“Brightness”: to adjust the brightness.

“Wide/narrow screen”: to select the screen proportion

“Video output”: to cut down the LCD screen and realize AV-out to the TV.

4, Photo play

Press “Up and Down” buttons to select the photo and press “ENTER” to play.


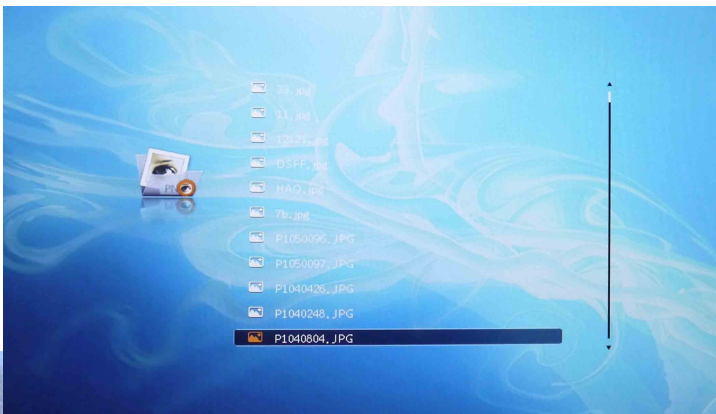 


Fig.4

 When
Press
appea

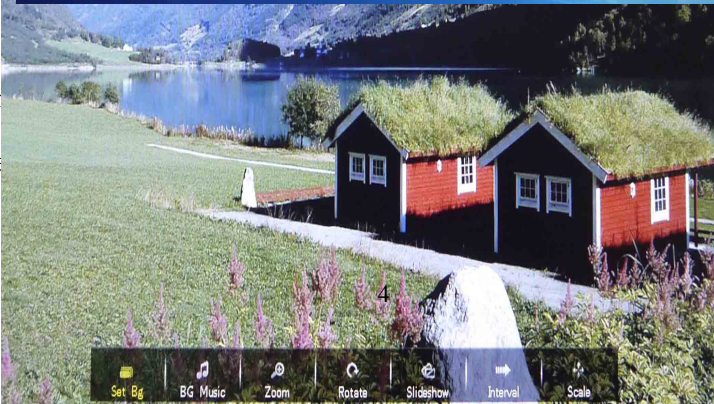

next one.
menu will
ased.

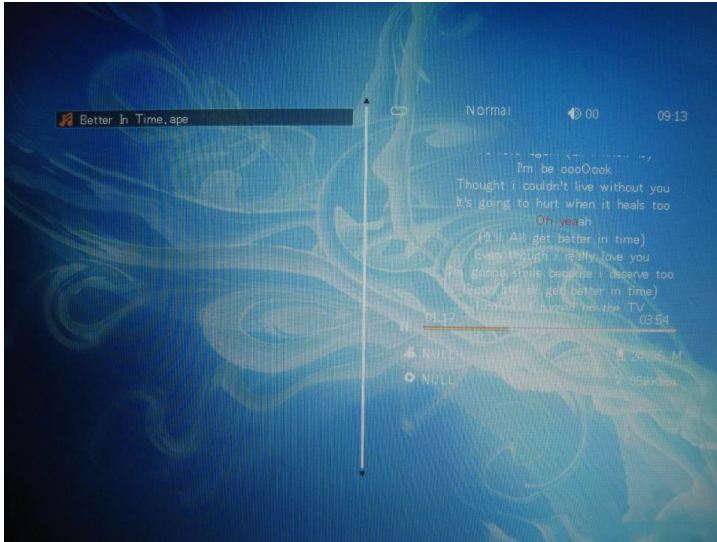 


Fig.5
Press
“Left,
Right,
Up or Down”

button to move the cursor. Press “ENTER”to choose the help functions.

“Background”: to set the favored picture as the background fo the main menu.

“Music”: to play or shut down the Music.

“Zoom”: to zoom the picture

“Rotate”: to rotate the picture.

“Brightness”: to adjust the brightness.

“Special effect”: to choose the effect when the picture is switched.

“Speed”: the time each picture is played.

“Scale”: the screen scale of the picture display.

5, Music play

Press “Up or Down”button to choose the music file and “ENTER” to play.

Support the song lyrics when the music is played. The lyric file is the LRC file with the name as same as the song.

Fig.6

The two lines messages on the bottom right in Fig.6 are respectively the singer and album name. (these messages can be displayed only when such a file contains these messages.)

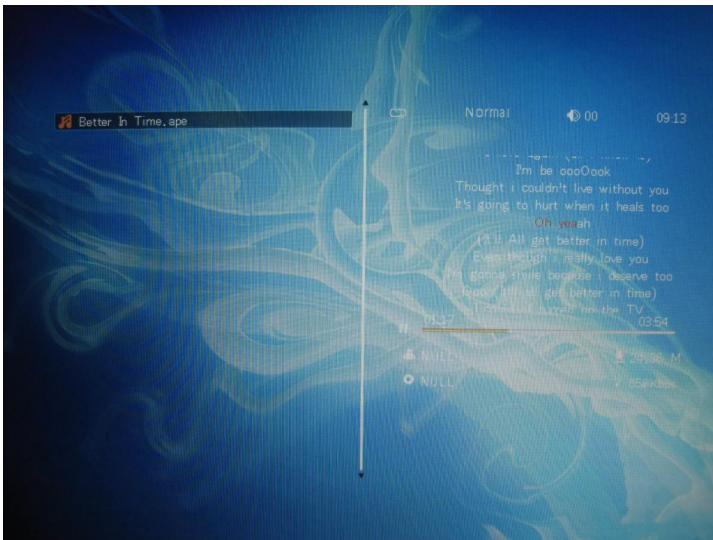 


Fig.7

Fig.7, when song with lyrics

In the

are played, the spectrum on the right will turn into the lyrics which is synchronous with the song.

When playing, press “Up or Down” buttons to play the Previous or next file; “Left or Right” buttons to adjust the volume; “FWD and REW” buttons to go forward or reverse. Press “ Back” button to return to the main menu. The music play help menu will appear if the “Back” button is long pressed for 1 second and then released. (Fig.8)

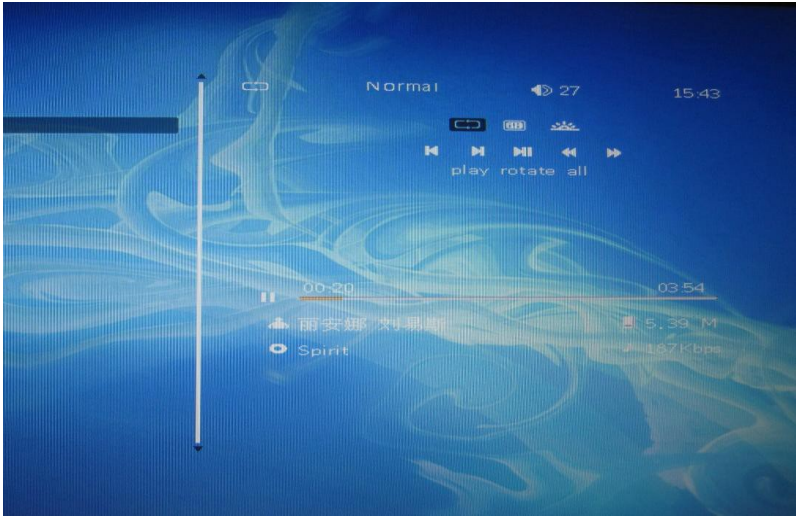 


Fig.8

Press “Left, Right, Up or Down”button to move the cursor. Press “ENTER”to choose the help functions.

“Repeat”: to set the repeat play.

“EQ”: to choose the pitch effect.

“Backlight”: to cut off the backlight option at fixed time.

“Previous”: to play the previous file.

“Next”: to play the next file

“Play/pause”: to switch play/pause.

“REW”: to reverse fast.

“FWD”: to move forward fast.

The music is still played if the main menu is returned directly. The music play may be exited after the music play help manu is paused.

6, E-book play

Press “Up or Down” to choose the text file and “ENTER” to play.

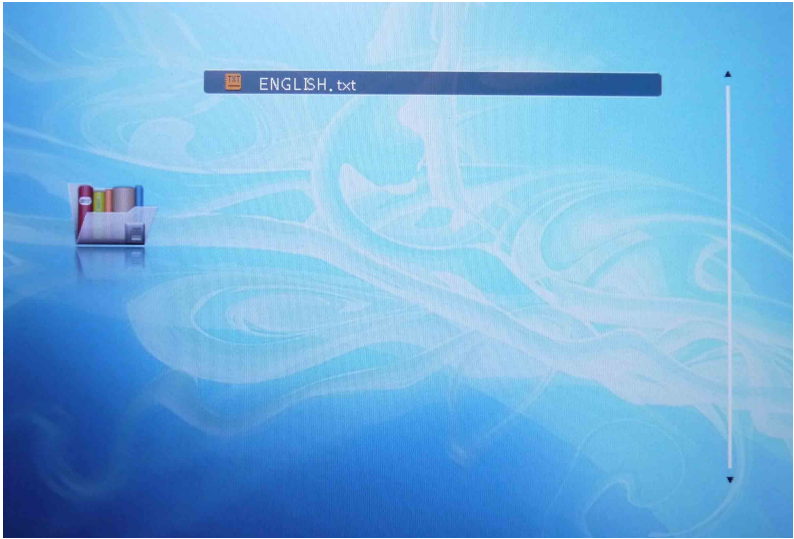 


Fig.9

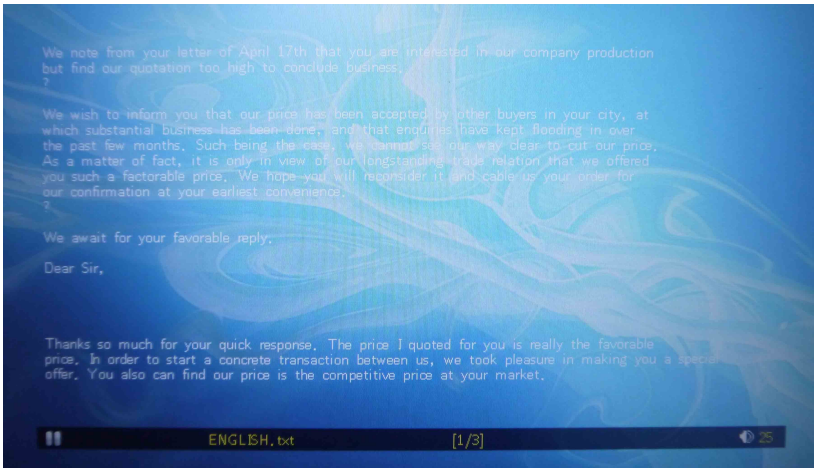 


Fig.10

When playing, press “Up or Down” to turn the page forward or backward. Press “Back” to return to the Previous menu. The e-book play help menu will appear if the “Back” button is long pressed for 1 second and then released. (Fig.11)

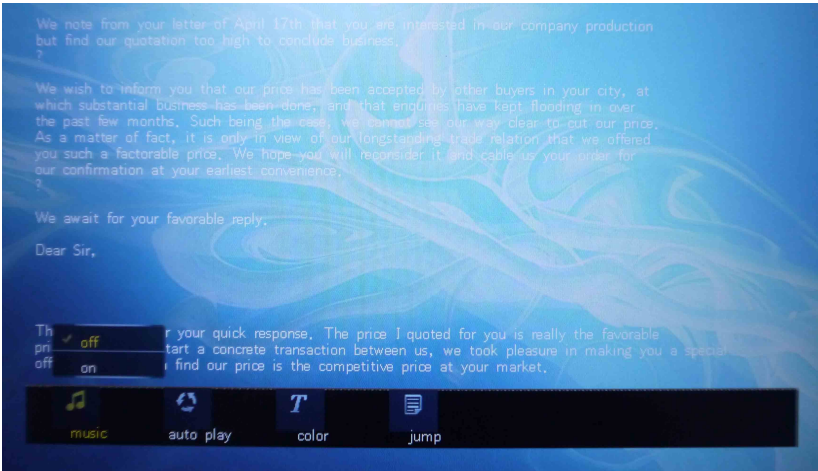 


Fig.11

Press “Left, Right, Up or Down”button to move the cursor. Press “ENTER”to choose the help functions.

“Music”: to play or cut off the music.

 
“Auto play”: to select the auto-play

“Color”: to set up the script color.

“Jump”: to jump to the required page directly.

7, Attachment

The attachment of the main menu involves such options as “setting”, “clock and calendar” and “file management”. Press “Up or Down” to move cursor to corresponding positions and “ENTER” to enter.

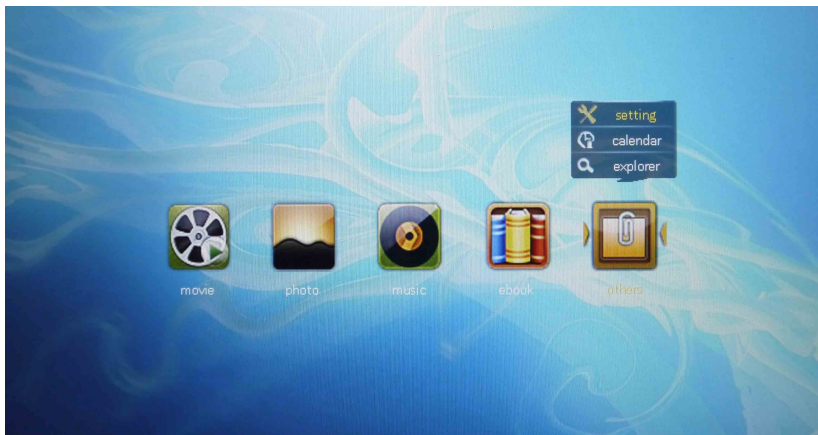

12

F
g

7.1 Setting

Press “Up or Down” to move the cursor and “Left or Right” to choose.

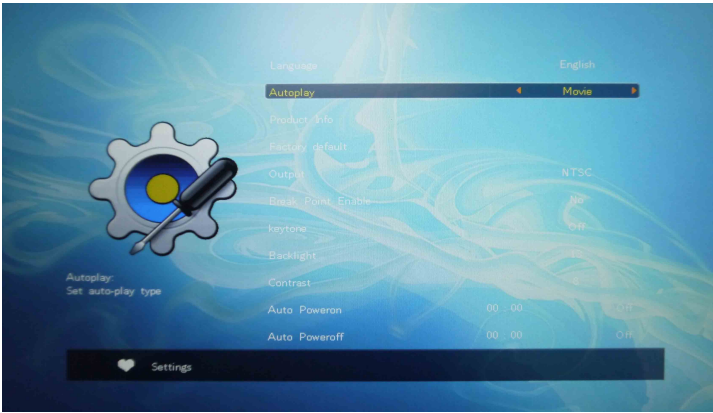 


Fig. 13

“Language”: to select the language.

“Auto play”: to select such auto play mode after inserting the card.

“Output”: to select the format of the composite video output.

“Key tone”: to power on/off the key tone.

“Backlight brightness”: to adjust the brightness.

“Backlight off”: to power off the backlight option at regular time.

“Power off”: to power off at regular time.

7.2

Clock & calendar



Fig.14

Press “ENTER” to select the display mode.



Fig.15




Fig.16

Fig.17

Press “Back” to return to the main menu. The clock setting menu will appear if the “Back” button is long pressed for 1 second and then released. (Fig.18)

Fig.18

 Press “Up or Down” to move the cursor, “Left or Right” to choose and “ENTER” to confirm.

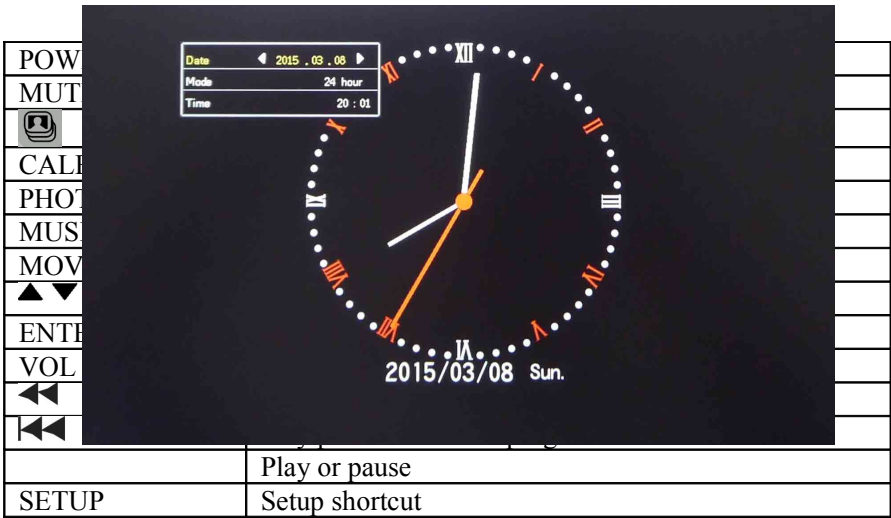

9, Specifications

1
DC adapter: 12V

2

Video format: RM, RMVB, MKV, MOV, M4v, MPG, FLV, PMP, AVI, VOB, DAT, MP4, 3GP.

3

Audio format: MP2, MP1, WMA, OGG, APE, FLAC, AC3, RA, AAC.

