

 
Notice

1. Before using the camera, please read the following safety precautions carefully.
2. Please follow the manual to operate the camera correctly, faulty operation may cause damage to the internal components.
3. Falling or hitting the product will damage the internal components.
4. For safety consideration, it must be kept away from the kids or animals to avoid accidents.
5. Do not leave the camera in wet or dusty environment for a long time, it may affect the normal operation of the camera.
6. Do not expose the camera under high temperature condition for a long time, it may cause damage to the housing and internal components of the camera.
7. To maximize the efficiency of the battery, we suggest you use the camera under -10 to 45 °C temperature.
8. Before plugging in/out the memory card, please make sure the camera is turned off to avoid damage to the memory card or stored data.
9. It is normal the camera temperature rises after an extended period of time.
10. Do not touch the lens when using, it may affect the video quality.
11. Please use the special lens cleaning tool to clean dust or fingerprints off the surface of the lens.

After using the camera under water, please use fresh water to wash the waterproof case in time.
Please dry it by a dryer and use a cloth to keep the camera clean and tidy.


Interface Introduction

Working indicator

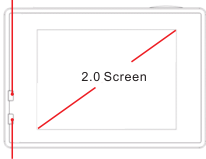


Charging indicator

 Lens

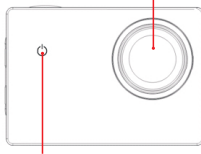


Power/Mode button

 


LED indicators

OK

 Buckle



Battery cover

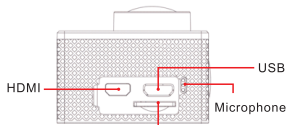 


HDMI

USB

Microphone

 Micro SD card slot

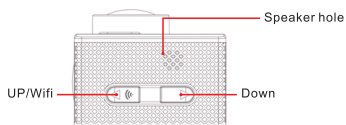




Speaker hole

UP/Wifi

Down

Operation Instructions

1. Button Function Introduction

 
- Power/Mode Button(): Turn on/turn off the camera; on standby mode, click this button to return to the interface of photo, video, playback or setup.
- OK Button(**OK**): Start or stop shooting or recording; start or stop playing video, enter/confirm menu choice in setup mode.
- Up button(): Press for a long time to zoom in while playing video; return to the previous file or menu in setup mode; fast backward playback while playing video; turn on/ off WIFI while on standby.
- Down Button(): Press for a long time to zoom out while taking videos; enter to the next file or menu in setup; fast forward playback while playing video.

2. Battery Charging (charger is not included)

Please connect one end of the USB data cable to the camera USB port, one end to the output of the power supply. The power supply can be: Output 5V/1A high-quality charger, conventional mobile phone charger, mobile power bank, emergency power supply, computer and other devices with USB output (Note: for environmental consideration, the camera does not provide a charger). The red light is on during charging, and the red light is off when it is fully charged.

How to take off the battery cover?

Please take the pic below as a reference.



- **Reminders**

- (1). Please charge the battery under the camera off condition in order to improve charging efficiency.
- (2). Please make sure that the socket and the charger are plugged in.
- (3). When charging the camera via the computer USB interface, the charging time will be longer if the computer USB interface output current is only 500MA.

3. Plugging in/out the Memory Card

- **Plugging in the memory card**

Please plug in the memory card before turning on the camera to ensure the camera can store data properly. Please make sure the card is plugged in the correct direction, incorrect direction may cause damage to the camera and the SD card.

- **Plugging out the memory card**

Press the memory card slightly, then it will pop out.



- **Reminders**

- (1). Please format the SD card in the camera when you use the card for the first time.

First please ensure the sd card inserted to the camera in the right direction. Second please turn on the camera and press the mode button to enter the settings page. Third please select formatting the sd card when the card in the camera.

- (2). Please use a good quality brand SD card of class 10 or above (Support capacity range: 8 -32 GB), otherwise it may cause the memory card to not work properly.

4. Turning on/off the Camera

- **Turning on the camera**

Press the “power” button for about 3 seconds, the camera will make a beep and the working indicator light will turn on, the camera is turned on after the LCD shows “Odrvm Action Camera”. (default is cyclic record), the LCD screen displays the record icon, cyclic record time, audio icon, the remaining recording time, resolution and battery icon, at the bottom it shows the date/time.

- **Turning off the camera**

Press the “power” button for 3 seconds, the camera makes a beep and shows “Odrvm Action Camera”, then it is powered off.

5. Video

- **Cyclic Record**

Press the “Power” button to turn on the camera, the camera automatically turns into cyclic record mode, press the “OK” button, then the camera starts recording, the top of the LCD screen shows the record icon and the recording time, after the set recording time (the default time is 3 minutes), the camera will automatically stop recording and save the file and continue to the next recording. Press the “OK” button when recording to stop the video and save the video, and the remaining recording time is displayed on the left top

of the LCD screen. When the memory card is full, the camera will automatically overwrite the earliest file and continue recording.

PS: Enter the Cyclic Record menu to select different cyclic recording time, please see the details on the menu settings.

- **Normal Record**

Turn off Cyclic Record on the menu, press the "OK" button to start normal recording and press the "OK" button again to stop recording and save the video files.

- **Time-lapse Record**

Set the interval time on the Time-lapse Record menu, press the "OK" button to start recording, and press the "OK" button again to stop recording. When playing back, the recorded video plays fast. (It will be faster than normal video). You can use this function to record the progress of a construction project, weather changes, the flower blossoming and so on. If you want to return to normal recording, please press the "OK" button to stop recording and turn off Time-lapse Record in the menu.

Note: Different time for time-lapse record can be set in the menu, please see the details in the menu settings. This function is only suitable for long-time (over 1 minute) recording.

- **Car Mode**

After turning on the car mode, please connect the camera with the external power supply such as the USB port of the car. The camera will automatically turn on and start recording after the car starts.

Note: In the car mode, once the camera connects with the external power supply, it will automatically turn on and start recording. Press the "OK" button when you want to stop recording.

- **Motion Detection**

Please turn off "Cyclic Record" and "Time-lapse Record", then turn on "Motion Detection", press "Mode" button again to exit the setup menu and enable the "Motion Detection" function, and the left top of the LCD screen displays a Motion Detection icon, the camera will

automatically start recording when it detects moving objects, and automatically stop recording once detecting no objects moving for 10 seconds.

To turn off "Motion Detection", please use a dark cloth to cover the lens and do not let any light reflect on the lens, then press the "OK" button to stop recording and press the "mode" button to the "setup" Mode, find the motion detection and turn it off.

Note: After turning on the Motion Detection, Cyclic Record is not effective.

6. Taking Photos

In standby mode, press the "power" button to switch to photo mode, the top left of the LCD screen shows the photo icon and pixel, the bottom left shows the amount of pictures that can be taken, the top right shows the battery icon. Press the "OK" button to take photos and photos will be saved automatically at the same time.

7. Zoom in/out

During photographing or recording mode, you can zoom in or zoom out (Maximum zoom: 4x) by long pressing the "▲ / ▼" buttons.

8. Playback

In standby mode, press the "Mode" button twice to enter playback mode, press the "▲ / ▼" button to preview the photos or videos, press the "OK" button to start playing the selected videos, then press the "OK" button again to pause, and press the "OK" button to continue playing.

During playing, press the "▲" button to fast forward play the video, maximum speed is 8x, press the "OK" button to pause; Press the "▼" button to fast backward play the video, Maximum speed is 8x, press the "OK" button to pause. Press the "Mode" button

to return to playback mode.

Reminder: It will cause damage to the last file when you suddenly power off the camera or plug out the card and the camera will show “no file”. To fix this problem please turn on the camera again and enter the playback mode to playback the last file, the camera will repair the file automatically.

9. Deleting Files

Select the file you want to delete by pressing the “▲” or “▼” button in playback mode, then press “mode” button to enter setup mode and select the delete menu option, press the “▲/▼” button to choose “delete current” or “delete all”, then press the “OK” and select “Cancel” or “OK” by pressing the “▲/▼” button, and then press the “OK” button to complete the “Cancel” or “OK” instruction execution. After this the camera returns to setup mode.

10. Setup

In standby mode, press the “Mode” button once to enter photo mode.

Press the “Mode” button twice to enter playback mode.

Press the “Mode” button three times to enter setup mode.

Press the “▲/▼” button to select setup options, press the “OK” button to confirm choice.

Recording Setup (please take the actual parameters as a reference)

- Resolution: 1080FHD 1920X1080 30fps 720P 1280X720 60fps
720P 1280X720 30fps WVGA 848X480 VGA 640X480
- TV out: Off/On
- OSD Mode: Off/On
- Time-lapse Record: Off/1 Second/2 Seconds/5 Seconds/10 Seconds/30 Seconds/1 Minute
- Capture Mode: Single/3S Timer/5S Timer/10S Timer/20s Timer
- Cyclic Record: Off/3min/5min/10min
- HDR: Off/On

- Motion Detection: Off/On
- Audio: Off/On
- Date Stamping: Off/On
- Image Size: 12M 4032 X3024 / 10M 3648 X2736 / 8M 3264 X2448 / 5M 2592 X1944 /
3M 2048 X1536 / 2MHD 1920 X1080 / VGA 640 X480 / 1.3M 1280 X960
- Quality: Fine/Normal/Economy
- Sharpness: Strong/Normal/Soft
- White Balance: Auto/Daylight/Cloudy/Tungsten/Fluorescent
- Color: Color/B&W/Sepia
- ISO: Auto/100/200/400
- Exposure: +2.0 +5/3 +4/3 +1.0 +2/3 +1/3 +0.0 -1/3 -2/3 -1.0 -4/3 -5/3 -2.0
- Anti-Shaking: Off/On
- Language: English/French/Spanish/Portuguese/German/Italian/Simplified Chinese/
Traditional Chinese/Mongolian/Japanese/Korean/Polish/Czech
- Date/Time: 2015/01/01
10: 10: 00
YY/MM/DD
- Auto Power Off: Off/3 Minutes/5 Minutes/10 Minutes
- Beep Sound: Off/On
- TV Mode: NTSC/PAL
- Screensavers: 30 Seconds/1 Minute/3 Minutes/5 Minutes/Off
- Frequency: 50 Hz/60 Hz
- Rotate: Off/On
- Car Mode: Off/On
- WIFI SSID: SportsDV
Return OK
A a 0 Del
- WIFI Password: 12345678
Return OK
A a 0 Del

- License No set: *****
Return OK
A 0 Del
- Delete: Delete Current/Delete All
- Format: Cancel/OK
- Default Setting: Cancel/OK
- Version: Version/Date

11. Wifi Function

Please download and install app on your smartphone.

- **APP Download**

1. Please scan the QR code on the back cover to download the app.
2. For Android: please download "ZSANYCAM" from Google Play.
3. For IOS: please search and download "ZSANYCAM" on App Store.

There will be a "ZSANYCAM" App icon on your phone after installation.

Note: Compatible with finalcam App. etc.

12. WIFI SSID Modification

In standby mode, press the "Mode" button three times to switch to setup mode, press the "▲ / ▼" button to select "WIFI SSID" menu, press the "OK" button to modify WIFI SSID (when modifying, press "mode" button to move the cursor, press the "▲ / ▼" button to modify letters, numbers, press "OK" button to confirm modification.), first move the cursor to "Del", press the "OK" button to delete one letter at a time, then move the cursor to letters or numbers (such as A,a,0), press the "▲ / ▼" button to select the letter and number, press the "OK" button to confirm and go on until fully modified, then move the cursor to "return" and press the "OK" button to confirm back to setup.

Note: The WIFI SSID can be set to at most 15 letters.

13. WIFI Password Modification

The operation of modifying the password is similar to modifying the WIFI SSID, the password should be at least 8 letters.(Default Password: 12345678)

Turn on WIFI

While in video mode press the “▲” button to turn on the WIFI.

The LCD screen displays the WIFI icon and shows the SSID.



 
and PWD: SSID: *****、PWD: ***** , press the “Up” button to exit WIFI.



14. Connecting WIFI

Please turn on the WLAN on your smart phone, find the camera WIFI name of the network, enter the new password or the default password to connect to the camera WIFI, the bottom right of the LCD screen shows the WIFI icon after successfully connected. Then open the App Zsanycam on your phone, you can take real-time videos and pictures via mobile phone.

Note: Different mobile phone systems take priority to the default networking signal. Sometimes the App cannot connect to the camera properly after connecting to the camera WIFI. If this happens please turn off the 3G or 4G network on your phone.

15. App Operation and Downloading Files

Open the App Zsanycam on your phone, the default mode is recording, press the  button on the bottom of your phone screen to start recording, press it again to stop recording and the phone will temporarily save the file automatically. Press the camera button  on the bottom right of your phone screen to switch to photo mode, then press the button  to take pictures and the phone will temporarily save the file automatically on your TF card.

If you need to save the files to your phone, press the button  on the left bottom of the phone screen to switch to the page of saving videos or photos, each file shows file name, file format, operation date, file size and download icon (MOV file format for the video file. JPG file format for the photo file). Press download  icon to download the files to your phone, the files will be saved on your phone automatically and you can preview and play it via file manager on your phone.

Reminder: When operating WIFI, please contact us if you have any question, we will offer you the solution within 24 hours. (Our contact information is displayed on the back cover of the instructions.)

16. Viewing Files on TV

- **Connect with HDTV**


Turn on the camera, connect one end of the HDMI cable to the HDTV, the other end to the HDMI output port of the camera, then adjust the TV to HDMI mode, then the camera operation can be displayed on TV.

17. Viewing Files via Computer

After connecting the camera to the computer via the USB cable, there is “Mass Storage” and “PC camera” displayed on the LCD screen, select “Mass Storage” by pressing the “▲/▼” button and press the “OK” button to confirm. Open “removable disk” on “my computer”, there is a folder named “CARDV”, double-click the folder to show the Movie and Photo folders, select a folder and view the files.

Note: Videos are saved in the Movie file, photos are saved in the Photo file.

18. Using the Camera as a Webcam

After connecting the camera to the computer via USB cable, the LCD screen displays "Mass Storage" and "PC camera" select "PC camera" by pressing the "▲/▼" button and press the "OK" button to confirm. Open  in "my computer".

19. Technical Parameter

LCD Screen	2.0" LTPS Screen
Image Resolution	12M 4032 X3024 10M 3648 X2736 8M 3264 X2448 5M 2592 X1944 3M 2048 X1536 2MHD 1920 X1080 VGA 640 X480 1.3M 1280 X960
Video Resolution	1080FHD 1920X1080 30fps/720P 1280X720 60fps/720P 1280X720 30fps/WVGA 848X480/VGA 640X480
Default Resolution	Video: 1080FHD 1920X1080 / Picture: 12M 4032 X3024
Video/image format	MOV/JPG
Digital Zoom	4xdigital zoom
Camera lens	170° wide angle fish-eye lens

Memory card	Please use a well-known brand Micro TF card at least class 10 (capacity range is 8-32GB)
Language	English/ French/ Spanish/ Portuguese/ German/ Italian/ Simplified Chinese/ Traditional Chinese/ Mongolian/ Japanese/ Korean/ Polish/ Czech
Output port	USB 2.0, HDMI (HDMI Certified)
Recording Time	720P 1280X720 60fps: 114 minutes 1080FHD 1920X1080 30fps: 138 minutes
Battery	1050mAh Li-ion battery
Size	60(L)×25(W)×41(H) mm
Weight	58g (without battery), 74g (with battery)
Applications	Extreme sports (surfing, ski, bike, parachute, etc.), outdoor sports activities: bicycles, car DVR, diving, family safety, etc.