 
 


# Digital MP3 Player X18

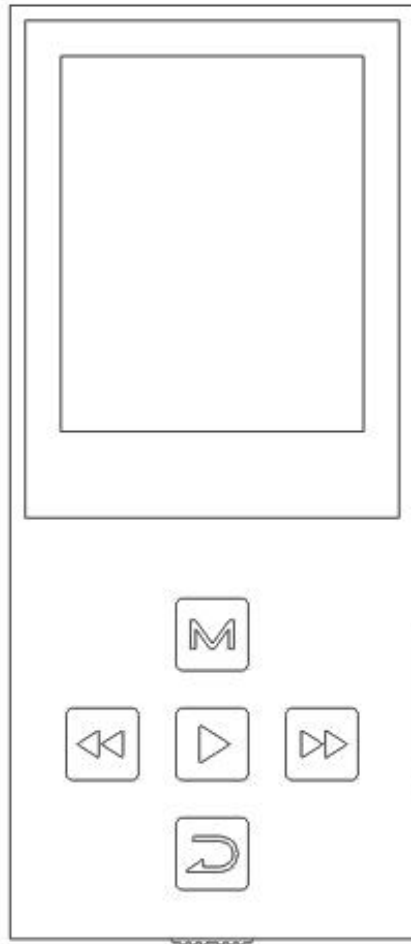

**Thank you very much for buying our product, before use the mp3 player please read the manual book carefully, specification of the products should be studied the real products provided this on for reference. And updated we will not give you notice.**

## (一) appearance

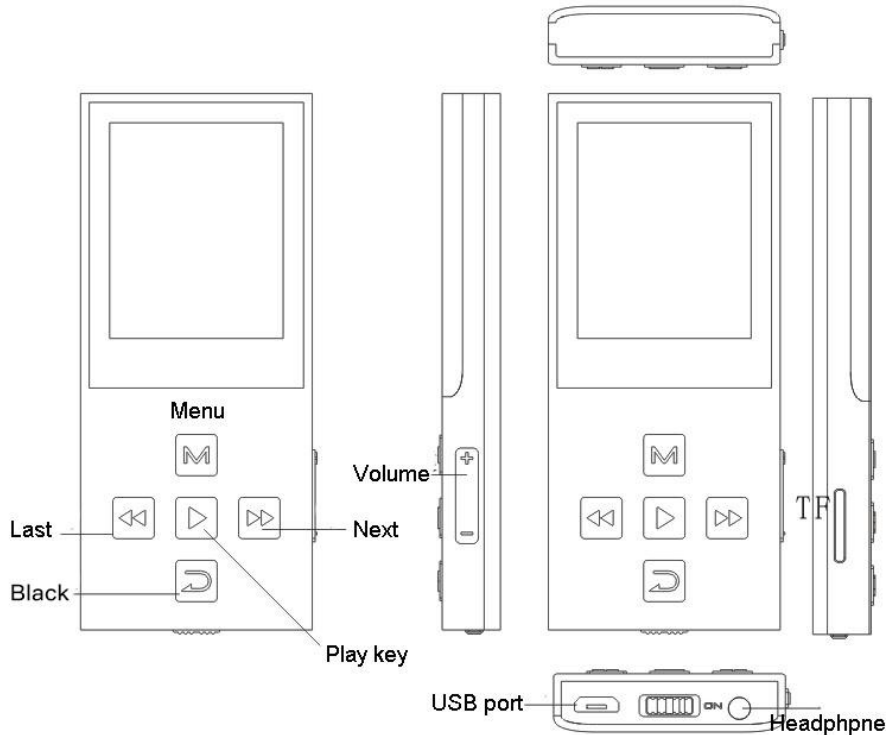

● Back button : Under playing status press back button for short and than press Last song button back to previous menu until to Main menu

● Last song /Next song: short time press Last/Next Song Button to choose last song and next song , long time press the buttons can fast play / fast reverse. On the main menu status press the Last/Next song button can choose the submenu

● Menu Button : When on the Music playing status short time press the button can got to the Playing setting menu

● Power on/off : turn on / turn off the player under any status

## (二) Data Transfer

By using USB cable connected the player with personal computer. And you can copy the files from computer to mp3 player or delete the files on the MP3 player Disk

### **(三) Charging**

#### **1 Using USB cable for charging**

USB cable can use for data transfer and charging for the MP3 Player

2. Use USB cable connected with computer to charge or use charge device charging for the MP3 player

**Remark:** the charging device use for the MP3 Player must meet following request Otherwise for any accident and failure our company will not take any responsibility

**input** : AC110-240V 50/60Hz Max: 100mA

**output** : DC5.0-5.5V 500mA-800mA

### **(四) Manual introduction**

#### **Turn on the MP3 player**

 
Push the power button to ON, and the MP3 player begin work you will see the Logo on the screen

## Main menu



Function selection : short time press Last song/Next song/ Menu button/ Back button, select each function you want

## Music

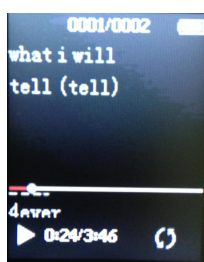

select Music than press Play button enter into the Music menu

Volume control: press Volume “+”/ “-” to turn up/down the volume

Play/Stop: when under music play menu short press the PLAY Button to play/stop the music

Fast play/Fast reverse :long time press the Last song/Next song button to fast play / fast reverse

Change track : short time press the Last song /Next song button to select play last song or next song

Playing setting : under music play menu short press the Menu button can setting the playing format /voice setting/ time setting / EQ setting

**Back :** Under any status short time press the Back button first than press the Last song button to go back to previous menu until to the main menu

## **Bluetooth :**

**Select Bluetooth Function press Play Button ► to enter into Bluetooth**

**Search Bluetooth device :** After press PLAY BUTTON “►” enter into Bluetooth, The MP3 Player will auto search for Bluetooth device surround, Press the PLAY BUTTON “►” to connected with Bluetooth device. After connected successfully. Select all music Folder and select music to play.

**Bluetooth device list:** press “►” enter into Bluetooth device list and press “►” to select the Bluetooth device .

When Bluetooth device under “available” status. You can connected the mp3 player with the Bluetooth device

When Bluetooth device under “connected” status. You can cancel to connected

## **4 Movie**

**Play/Setting :** select Folder view function on the main menu, go into Folder view menu, Choose “Video” and press “►” to go into video list, and select the video files to play



**Select last/next video :** press last/next song button to choose

**Remark: This device only support 160\*128 video files which is transfer by XMedia recode**

## **5 FM radio**

On the main menu select the FM radio function press “▶” to go into the menu. By press last/next song button select the sub-menu (stations /manual tune/Auto tune/FM recording)

## **6 Pictures**

Picture view :select pictures function on the main menu, press to “▶” go into the menu, Press last song/next song button to select last picture /next picture

## **7 Recording**

Select the Recording function on the main menu,by press go into the Sub-menu (start voice recording/recording library/record format/record setting ) press “▶” to go into sub-menu.

**Save the recording :** press Back button and you will see “Save recording YES/ON” press “YES ” to save the recording and press “NO”to cancel the recording

**Play recording :** select record library and select the record files to play

## **8 E-book**

**Last page /next page :** press Last song/next song button to select the last/next page

**Auto play setting** : after setting the right time the page will auto play

 
**Back** : Press last song Button go back to previous menu

## 9 Tools

On the main menu, select tools function and press “▶” go into sub-menu(calendar/stopwatch/alarm)

## 10 Set

On the main menu select the “Set ” function by press button go into the sub-menu (language /display settings/sleep timer /date and time /format device/factory settings/information) press last/next song button select the sub-menu, and press “▶” go into each sub-menu.

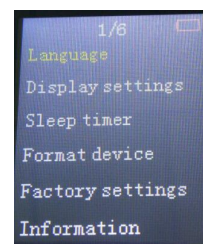

## (五) FAQ :

When using the mp3 in wrong way there will have anomaly problem . For example: black screen/ out of control. In this case you can turn off the power. Than turn on the power. The mp3 can using again

### ① The player can not turn on the power

◆ Check the if the device in low power condition

- ◆ Connect the mp3 player with the adapter check again

- ◆ If the player still can not turn on. Please keep in touch with after sell service center

## ② **Terrible Noise**

- ◆ Check the earphone, if there have dust in the earphone there will cause the noise

- ◆ Try to play other music files , once the music file was damage it will cause the noise.

## ③ **No voice**

- ◆ Check if the volume go to “0”

- ◆ Check the connected between player and earphone



## (七) Function list

No.	Model No.	Function list	
	X-18	content	
1	Play format	MP3/WAV/APE/WMA/ FLAC etc.	
2	Video format	AMV	
3	Picture view	Support JPG/JPEG/ BMP format	
4	E-book	Support TXT format	
5	FM radio	Support FM radio	
6	Music word display	Support LRC display	
7	Voice recording	Support	