 


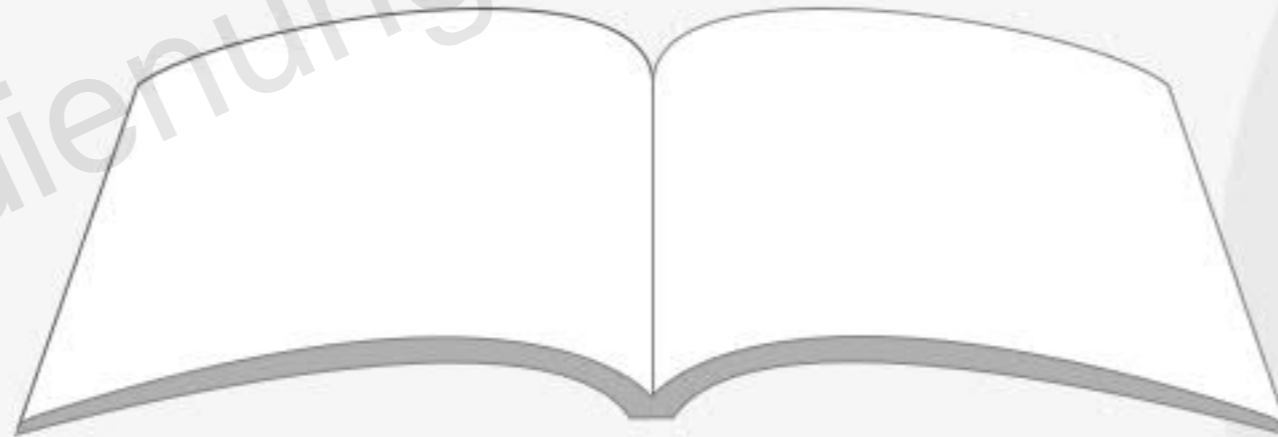

Bedienungsanleitung24.de

Android

※ This manual applies to a variety of UI, if there are differences in the icon of the actual operation, please refer to the text of the operation mode to complete.



# Android smart car multimedia system



Bedienungsanleitung24.de



Commonly  
used instructions




FAQ

# Common settings


Main interface	<a href="#">Wallpaper setting</a>	<a href="#">Mobile app icon, desktop widget</a>		
Settings	<a href="#">Language settings</a>	<a href="#">Time setting</a>	<a href="#">Radio zone settings</a>	<a href="#">LOGO settings</a>
Main function				
NAVI	<a href="#">Start / close</a>	<a href="#">Set the language</a>		
BT	<a href="#">Connect the phone</a>	<a href="#">Call / answer</a>	<a href="#">Download contacts</a>	<a href="#">Bluetooth music</a>
Radio	<a href="#">Search the radio</a>	<a href="#">Save the radio</a>	<a href="#">Band switching</a>	
Media	<a href="#">Play disc</a>	<a href="#">Play video</a>	<a href="#">Play music</a>	
Internet	<a href="#">WiFi connection</a>	<a href="#">APP download</a>	<a href="#">Web browsing</a>	

**BACK**

# Wallpaper setting

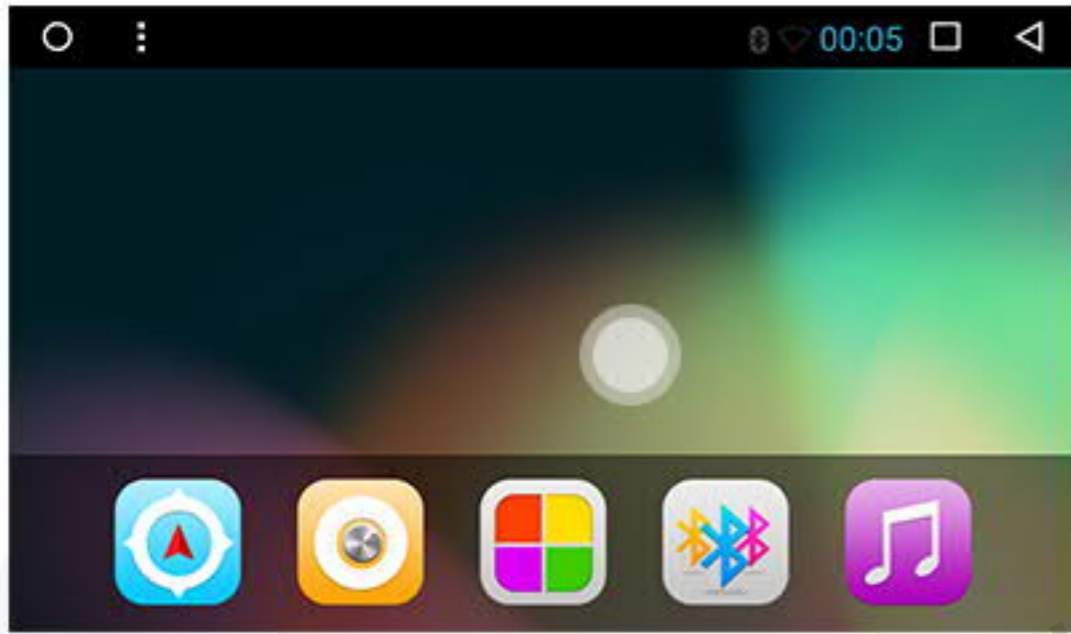


1

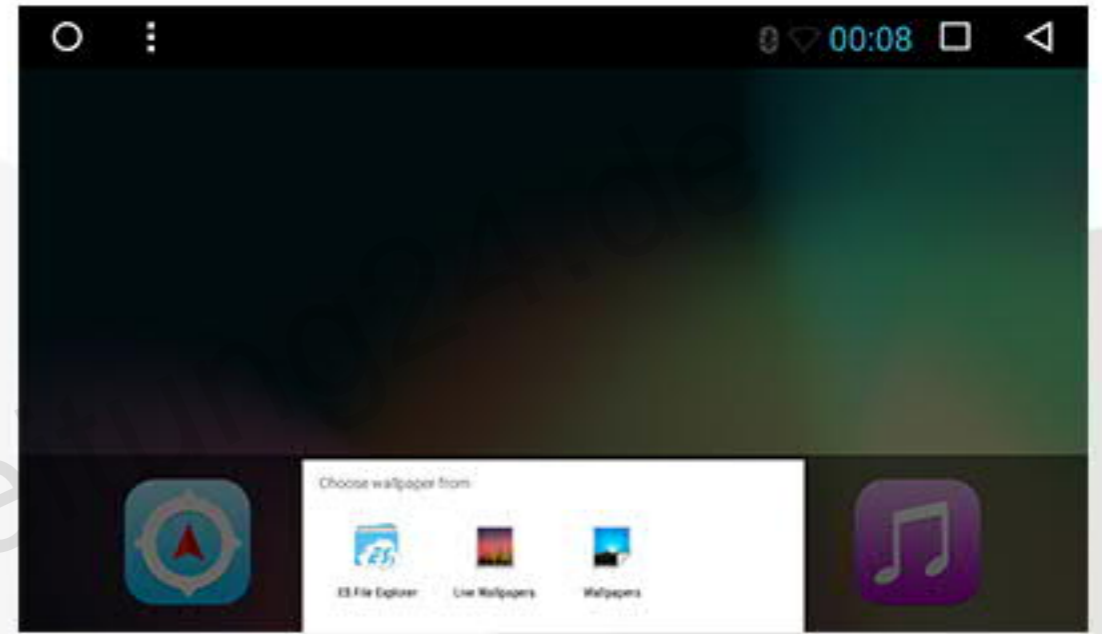


2

Long press the main menu space (as shown in Figure 1 white point), will pop up three icons.

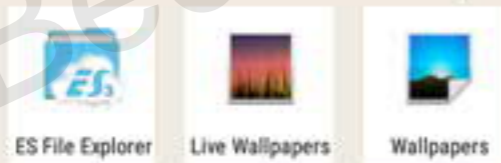


**BACK**


# Wallpaper setting

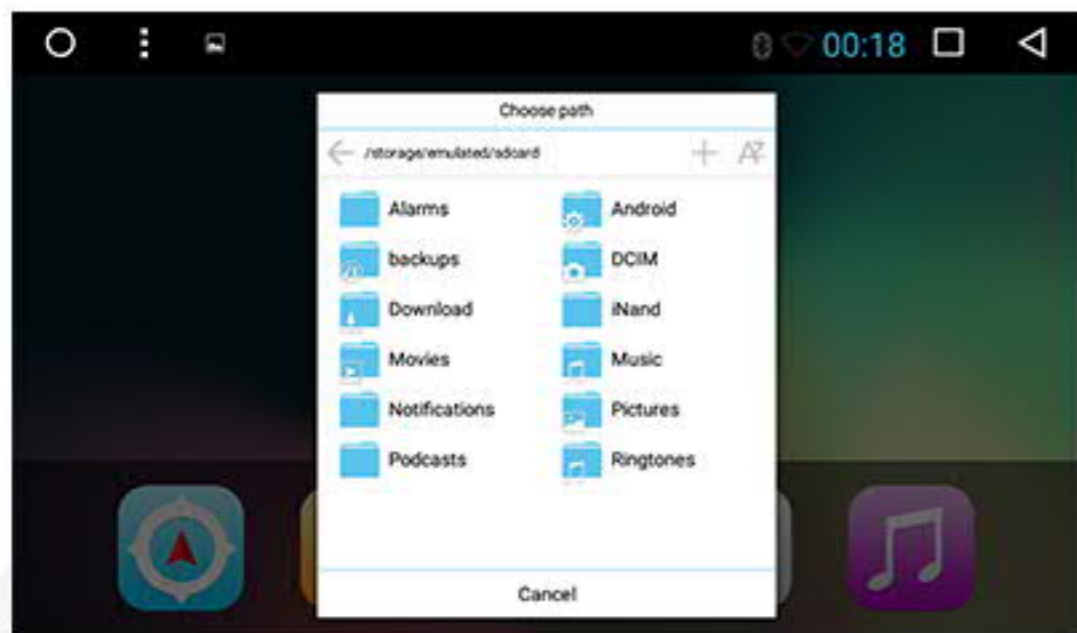


3

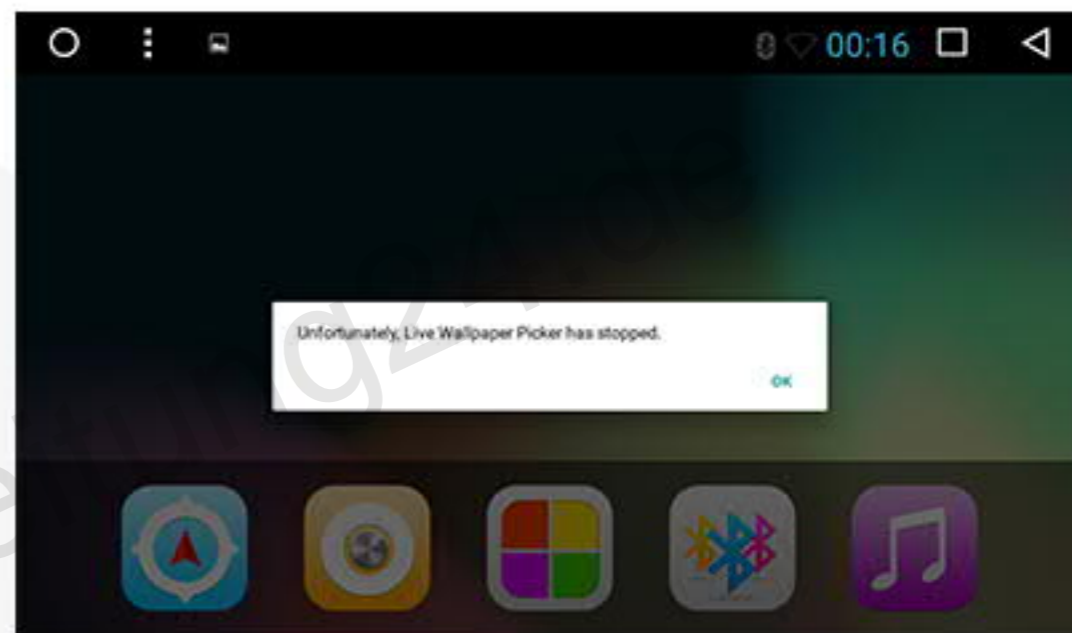


4

Click  the ES File Explorer icon will open the machine memory directory, you can find in the directory need to set the wallpaper as a wallpaper settings.


✘  Live Wallpapers is not supported in the current version, click will prompt can not be used.

**BACK**

# Wallpaper setting

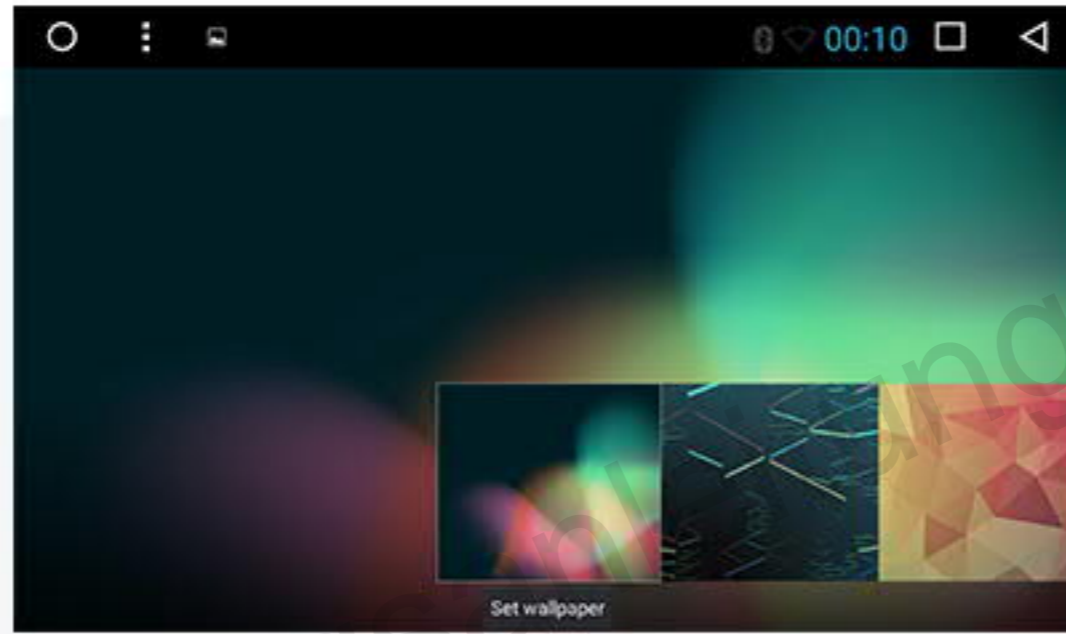

5

Click  the Wallpapers icon, will open the system comes with a list of wallpapers, slide left and right to select the favorite wallpaper to preview, click the Settings button below to complete the setting.

**BACK**

3/3

# APP download



1


When the WiFi signal is connected, click the Play store in the APPS list to access the Google Apps Store (this function must be connected to the Internet) to download the desired app.

※ Third party APP can also be downloaded through the web site, all third-party software on the machine caused by the adverse effects are not provided warranty.

**BACK**




# Navigation software on / off

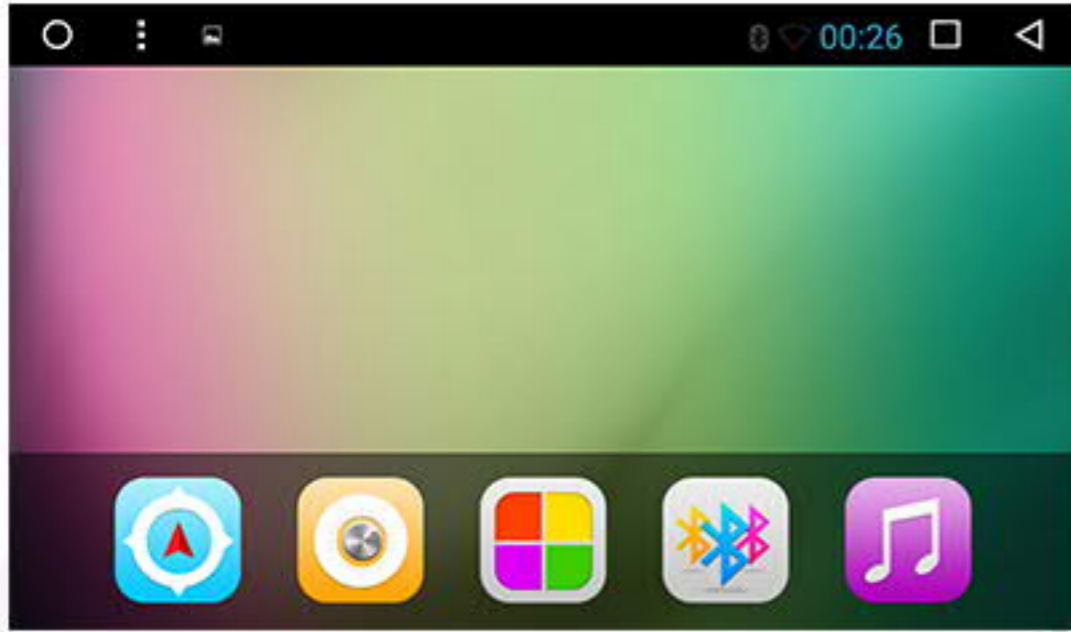

1



2


Click the  GPS icon in the shortcut bar of the main interface (or press the NAVI button of the machine panel button) to open the default navigation software.

**BACK**


# Navigation software on / off



3

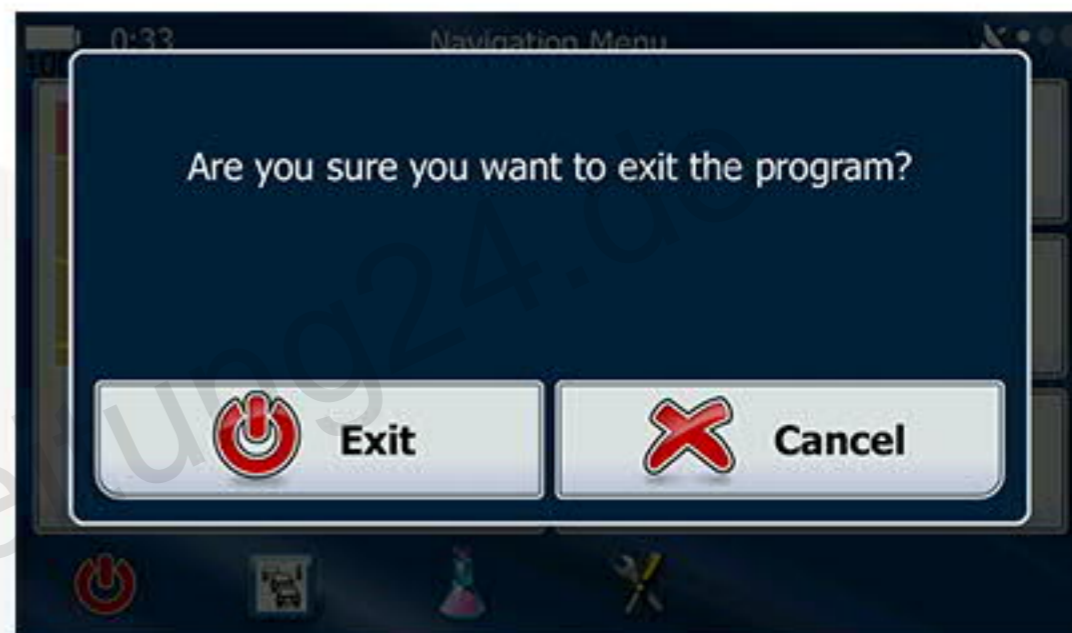

4

When the map software is running, when it needs to be closed, click  the icon in the main interface, and click "Exit" in the confirmation interface to close it completely.


※ If you do not close the above method, jump directly to other functions interface, navigation software will continue to run in the background.

**BACK**

# Boot LOGO settings



 
1

On the main page, click  the application icon in the middle of the common function bar to enter the APPS list.


**BACK**

1/4


# Boot LOGO settings

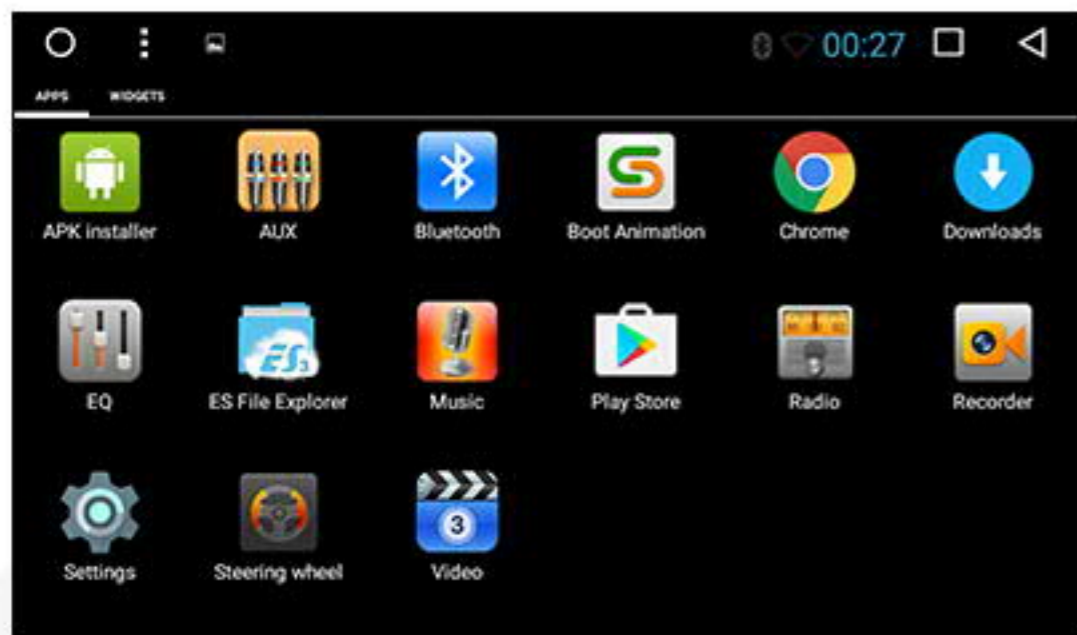

2

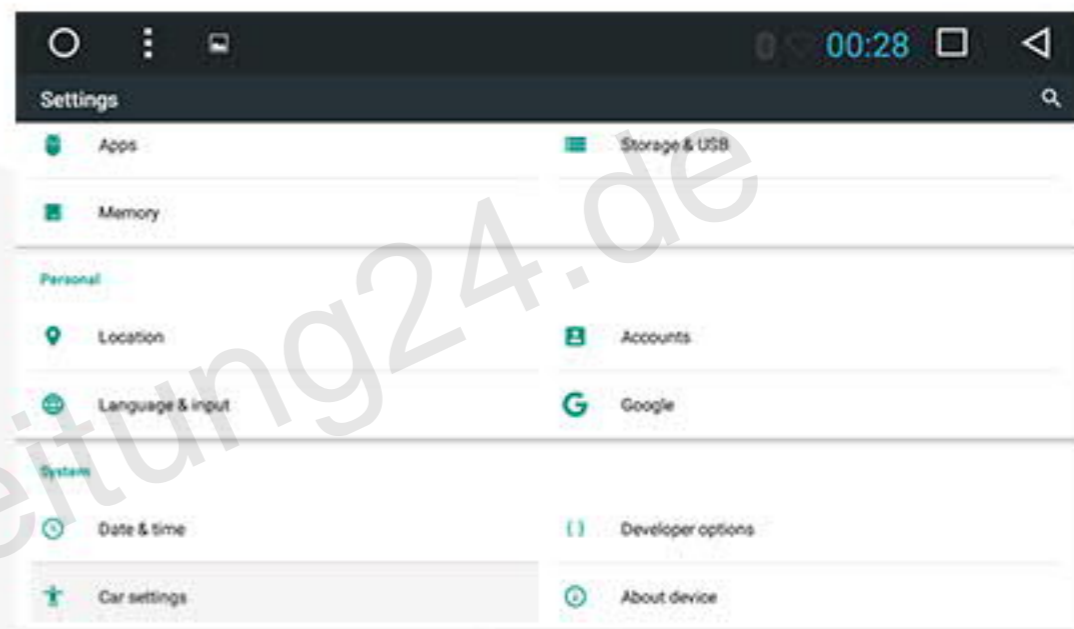 


3

Find and click  Settings to enter the system settings interface.

Pull down to find "Car settings" option Click to enter advanced settings options.

**BACK**

# Boot LOGO settings

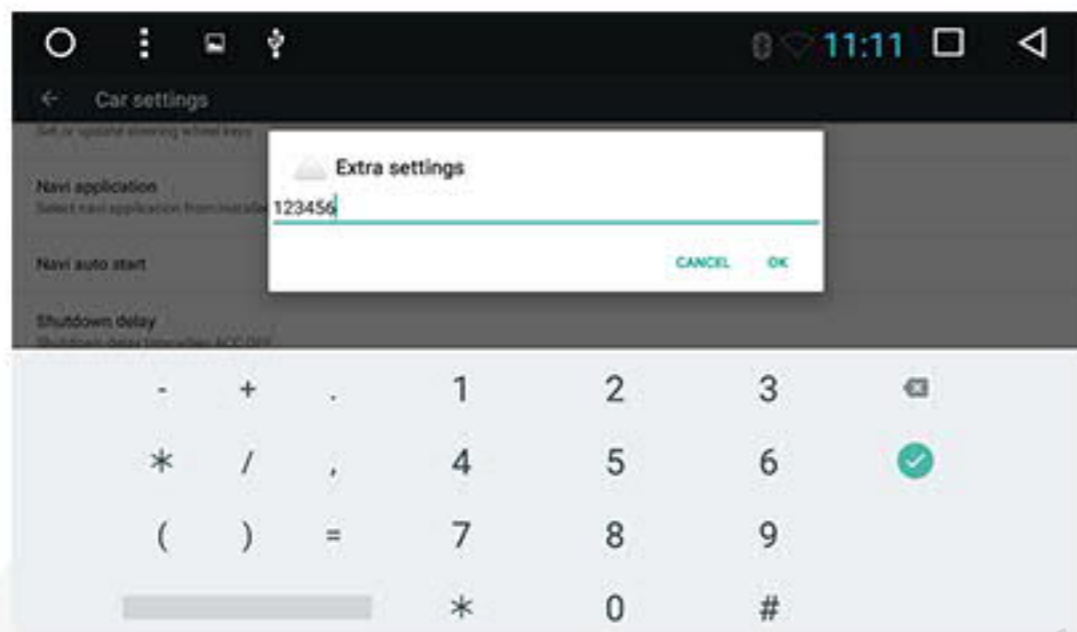

4




5

Pull down to find "Extra settings" option Click, enter the password "123456" to enter the common settings options. Pull down to the bottom to find the "LOGO setting" option Click to enter the setup LOGO switch interface.

**BACK**

# Boot LOGO settings

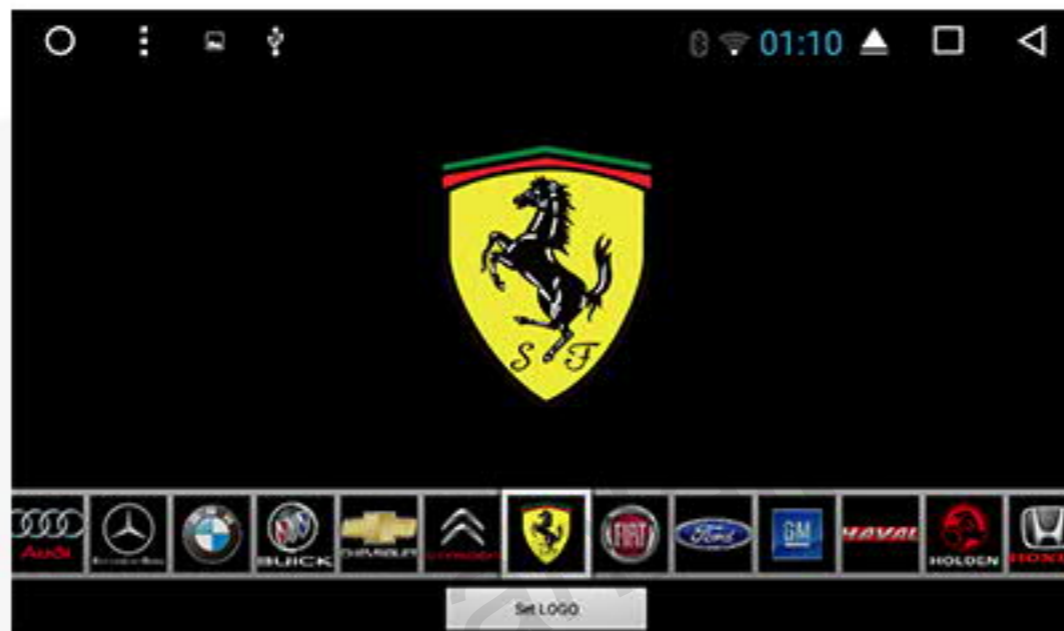

6


Swipe left and right to select pictures, click the set LOGO button below to complete the setup.

※ If you need to set a custom picture as the startup LOGO, adjust the picture resolution to 1024X600 and copy it into any folder stored in the machine. Follow the operation flow to enter the set LOGO page and slide to the rightmost end to set the custom picture.


**BACK**

4/4

# WiFi connection

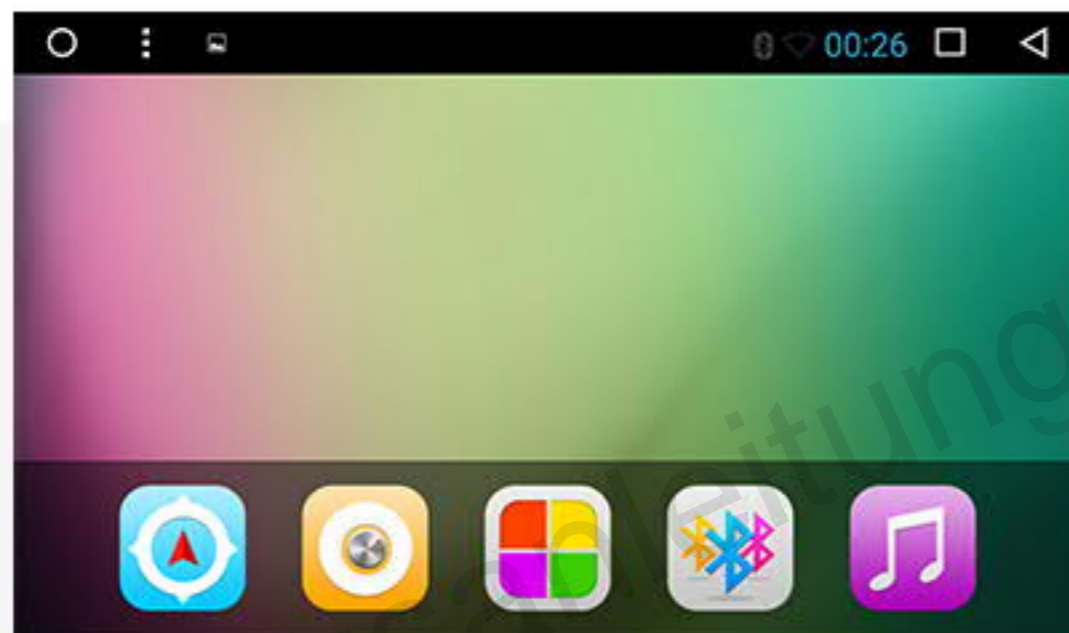


1

On the main page, click  the application icon in the middle of the common function bar to enter the APPS list.


**BACK**

 1/3


# WiFi connection

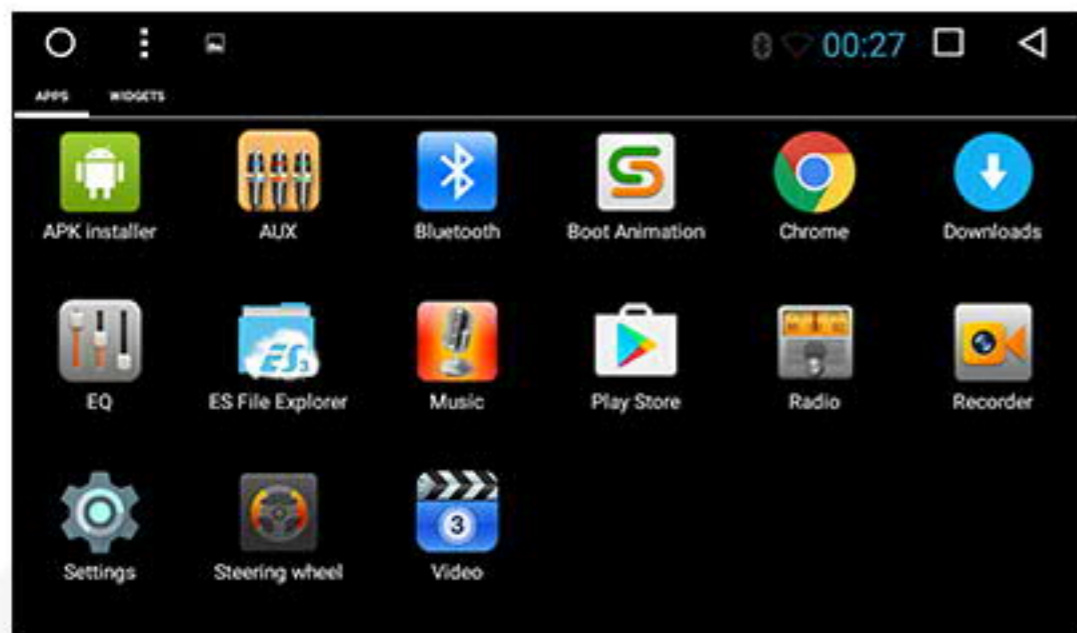

2

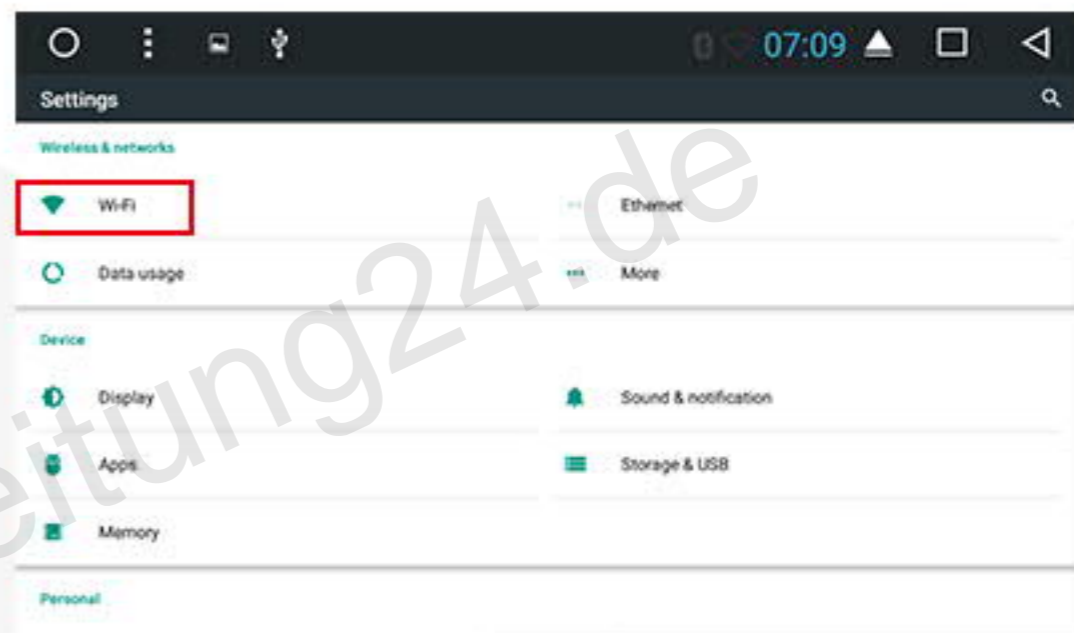

3


Find and click the  settings icon, enter the setting options interface, click the [WiFi] option to enter the wireless network settings interface.

**BACK**

2/3




# WiFi connection

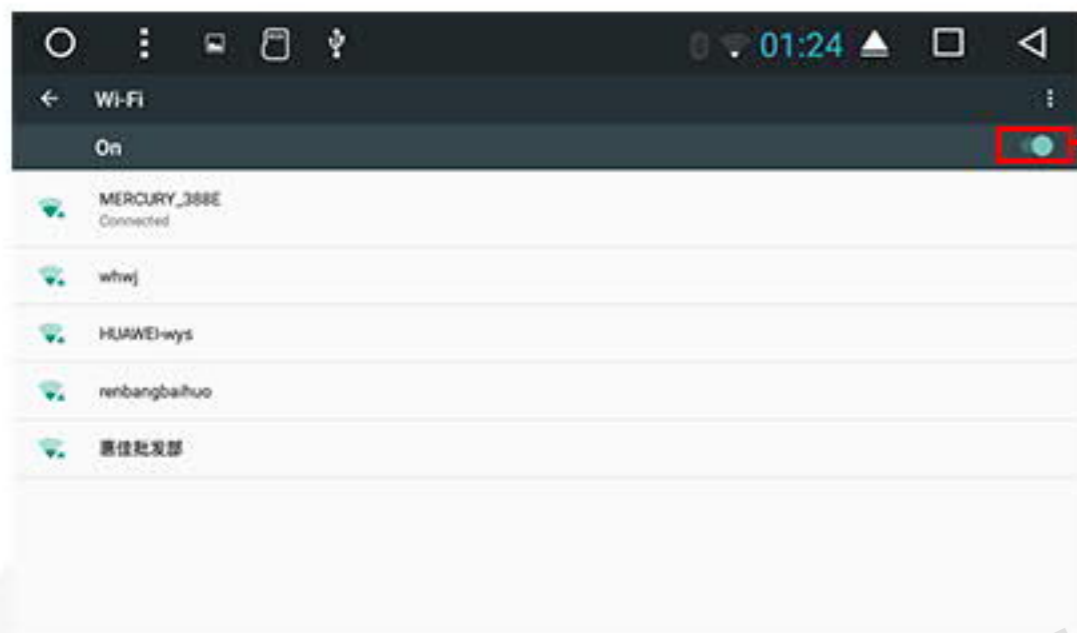

4

 Turn this switch on to search for wireless sources

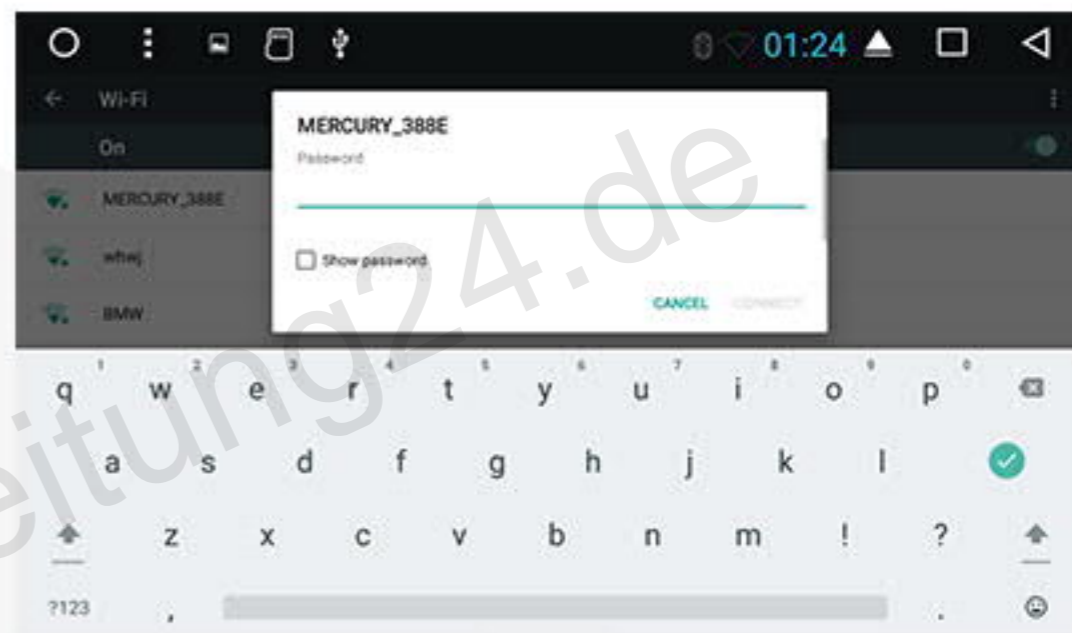

5

Enter the WiFi connection interface, the upper right corner of the WiFi switch to open, then in this interface will list the search for the wireless signal source, click the password to complete the connection.

※ A weak signal source may cause the connection to fail. Try to be close to the signal source and maintain a stable distance.

**BACK**

# Save the radio

Press and hold the button to save the current station



1

In the radio interface, long press the radio save list button can save the current frequency band, a total of 36 FM radio stations and 18 AM radio stations can be stored.


※ If you use AS to search the station automatically, the audible station to station save button list will be automatically saved.

**BACK**

# Set the language



1

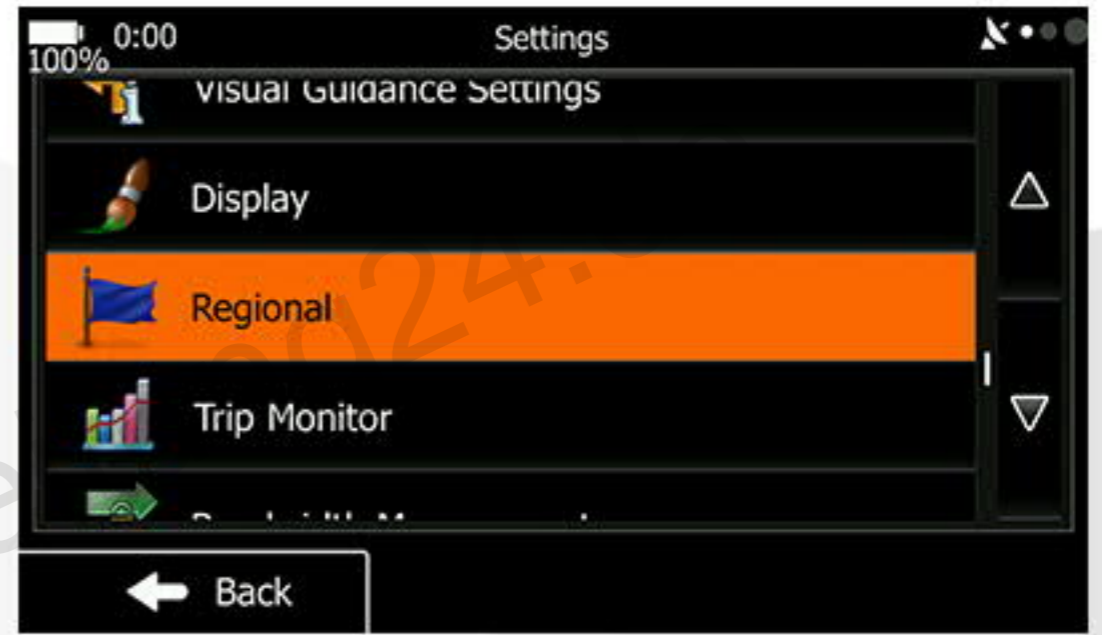


2

In the main interface of the map, click  the setting icon to enter the setting interface.

Pull down to find the "Regional" option click to enter.

**BACK**
 
# Set the language

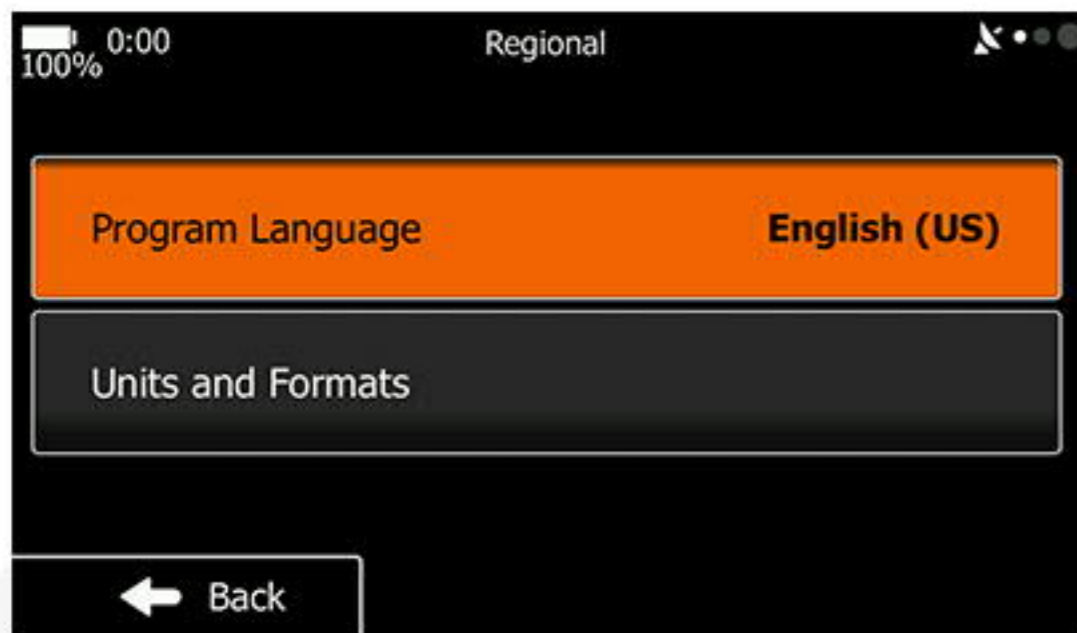

3




4

Then click on the "Program Language" option to enter the language list options, drop-down to find the need to set the national language selected, click on the lower right corner of the interface "Done" option.

**BACK**

# Set the language

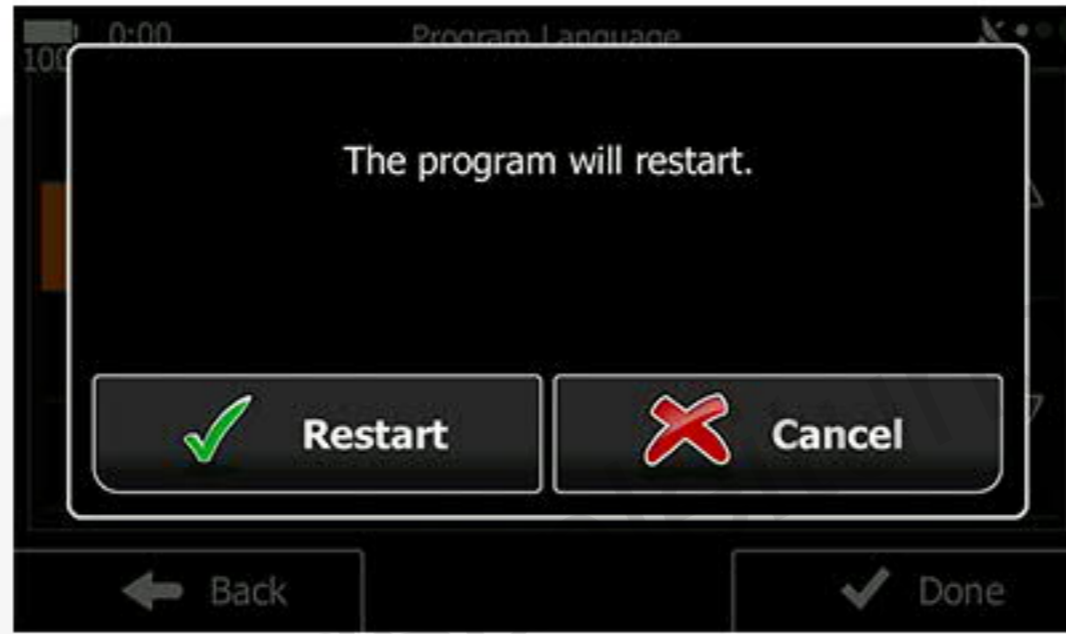

5

After the interface will pop up to confirm the restart dialog box, click the "Restart" option to confirm the restart, to be completed after the restart to complete the language settings.


**BACK**

3/3

# Mobile app icon, desktop widget




1

On the main page, click  the APPS icon in the middle of the common function bar to enter the APP list and the plug-in list page.


**BACK**

1/3

# Mobile app icon, desktop widget

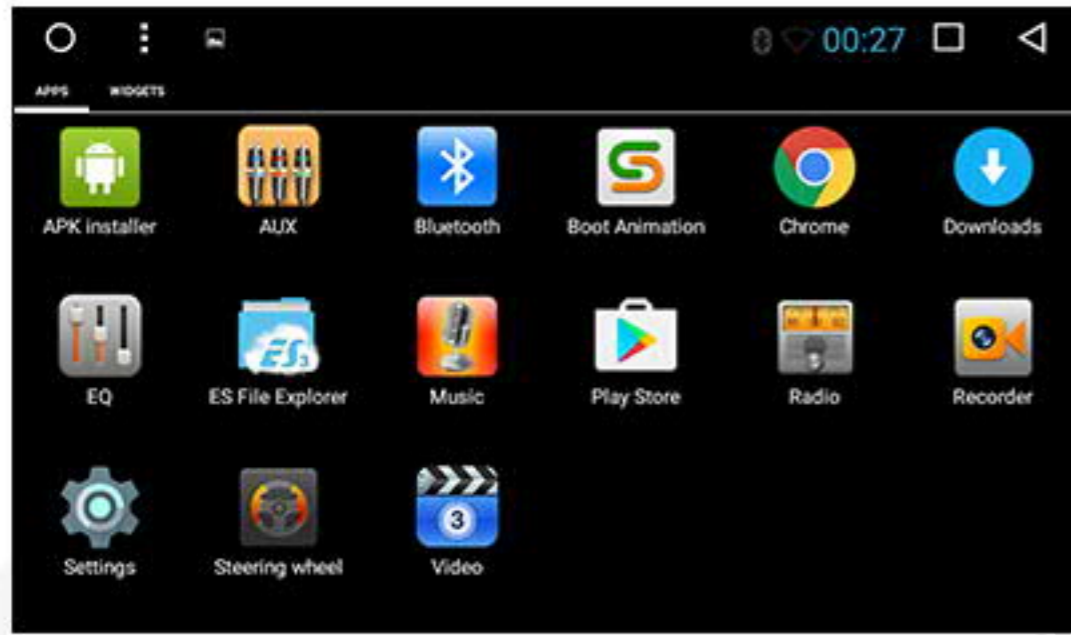

2

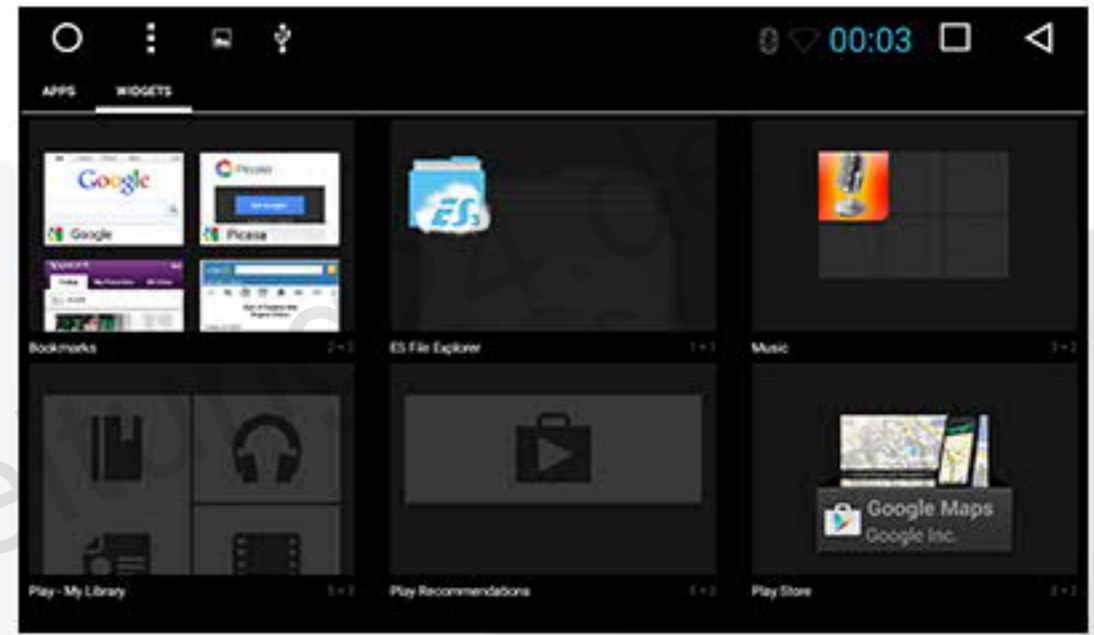


3

In the APPS interface, you can see the start icons of all the installed APP software (Figure 2). There are 18 icons on a regular page, and if there are more than 18 installed APPs, one page will automatically be expanded.

Plug-in page To the right of the APPS page, swipe left to switch the interface to the plug-in list (Figure 3, plug-in list screen).

**BACK**

# Mobile app icon, desktop widget

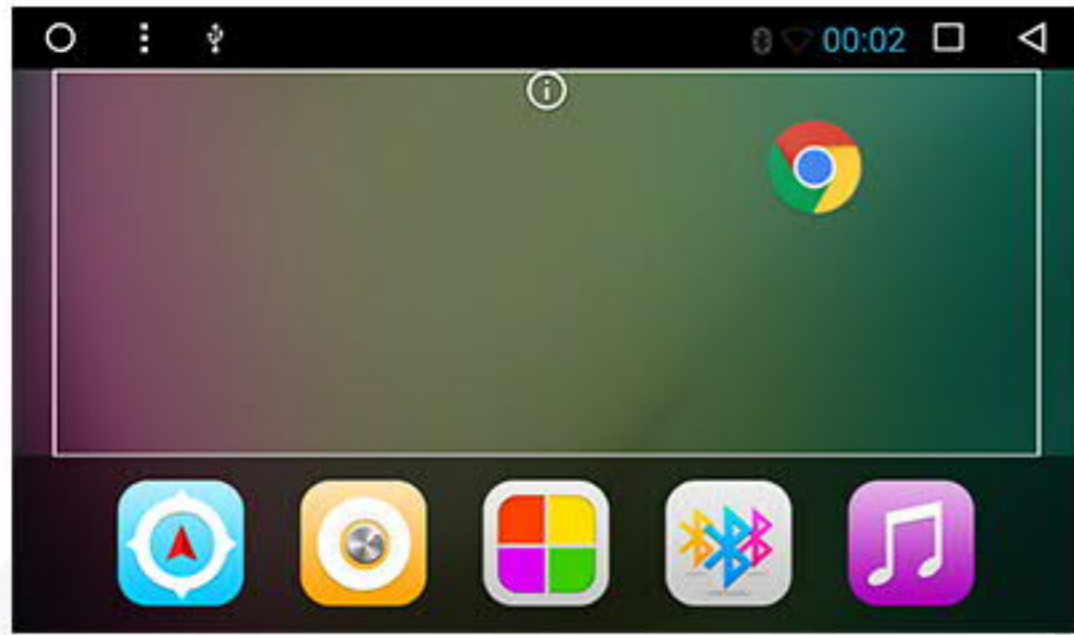

4



5

In the APPS list or plug-in list to find the need to move to the main interface of the icon, hold down, the page will automatically jump to the main interface, find the main interface blank place to release to complete the move.

※ The main interface is limited space, up to send 12 icons. Plug-ins that exceed the blank space in the main interface will not fit.


**BACK**



# Radio zone settings




1

On the main page, click  the application icon in the middle of the common function bar to enter the APPS list.


**BACK**

1/3


# Radio zone settings

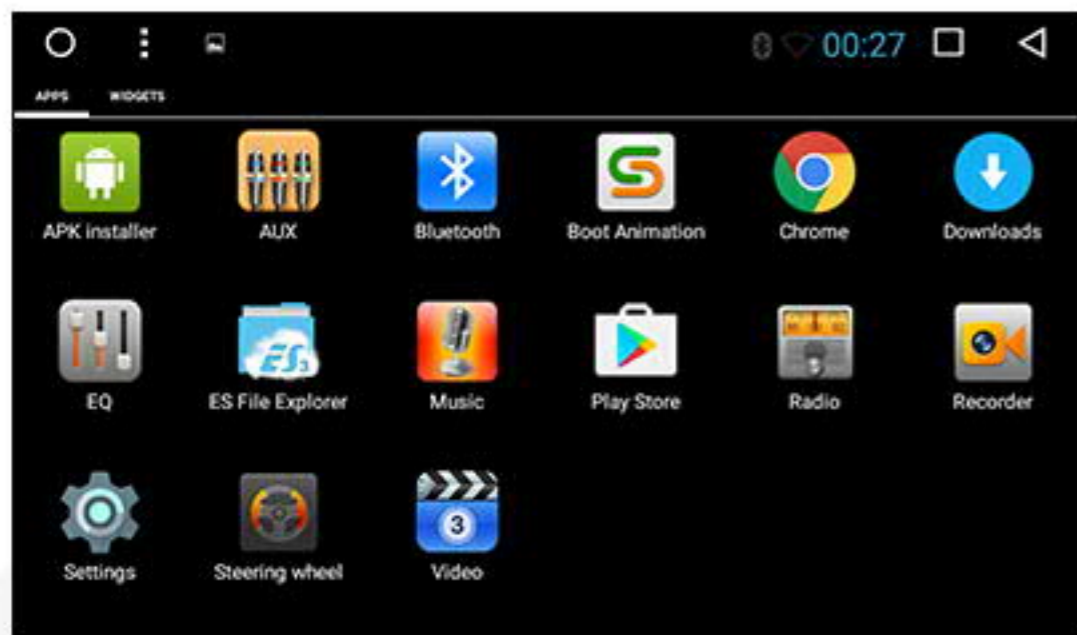

2

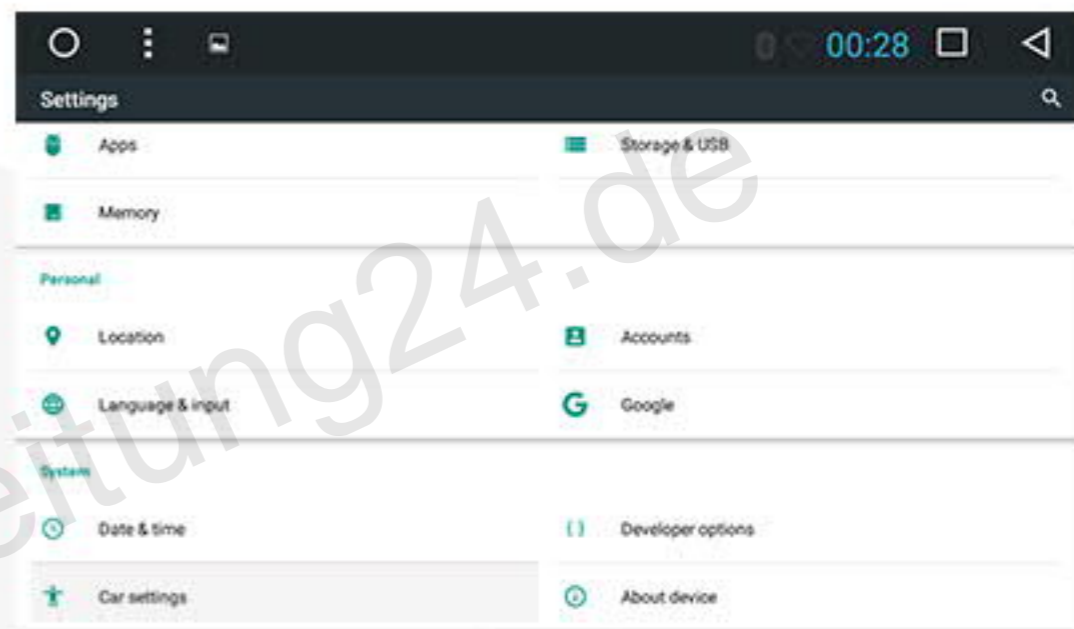

3


Find and click  Settings to enter the system settings interface.

Pull down to find "Car settings" option Click to enter advanced settings options.

**BACK**

2/3

# Radio zone settings

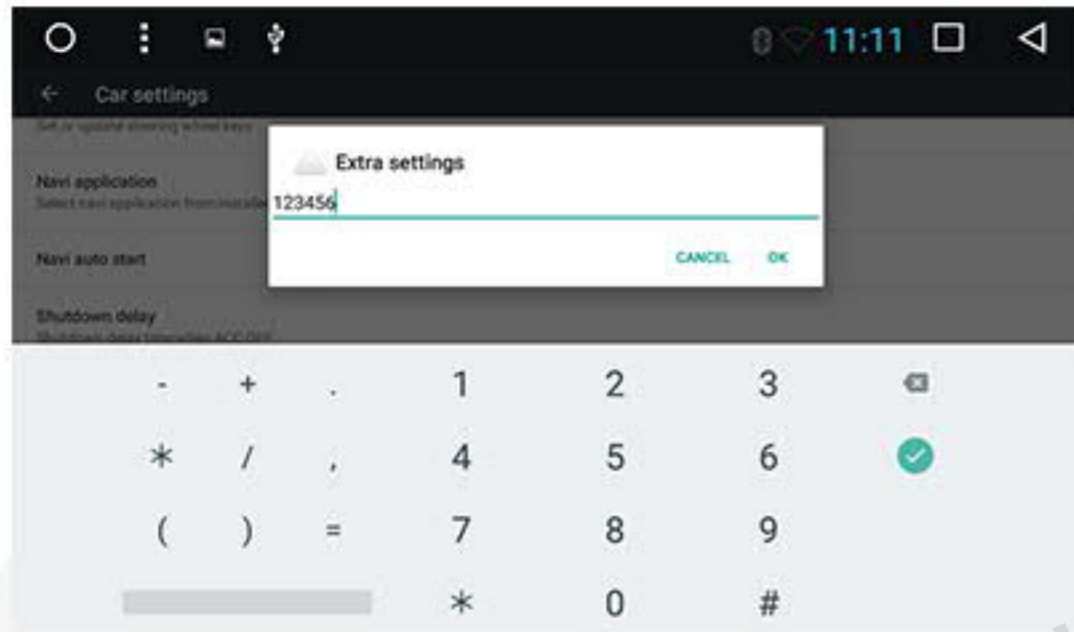

4




5

Pull down to find "Extra settings" option Click, enter the password "123456" to enter the common settings options. Find the "Select radio region" option Click to select radio area interface, in the list, check the radio area you want to switch to complete the setting.

**BACK**

# Band switching

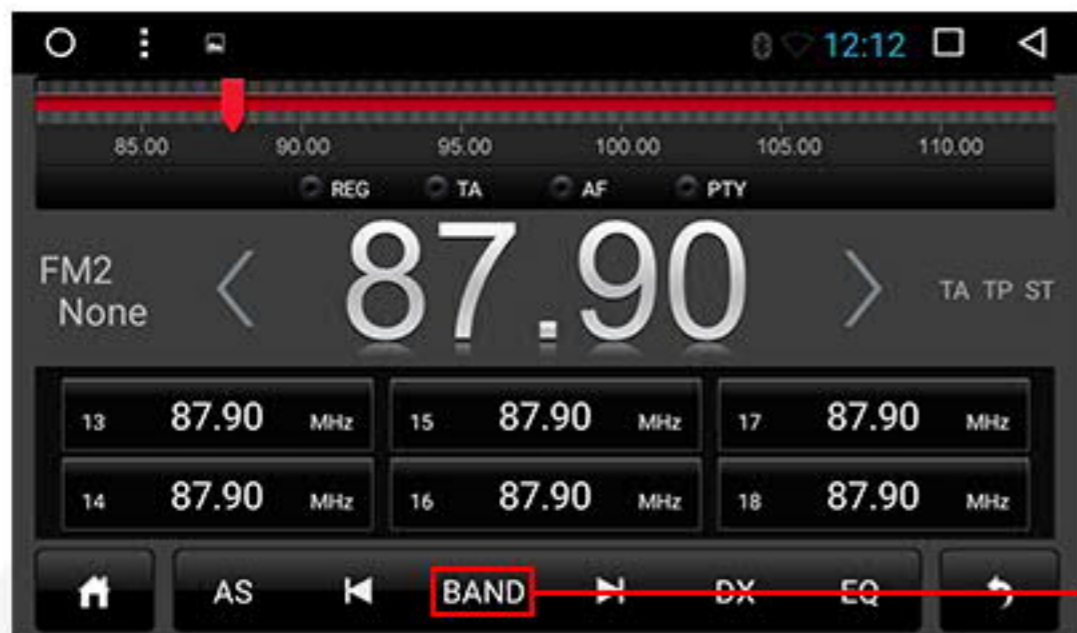

Band label




Click here  
to switch  
bands


Click the interface of the BAND button can cut the audio segment. The default is FM1, you can switch to FM2, AM. Support 5 FM / AM regional frequency bands (Western Europe, Eastern Europe, USA, Japan, Southeast Asia)  
※ regional band switching Please refer to radio zone switching instructions.

**BACK**

# Time setting

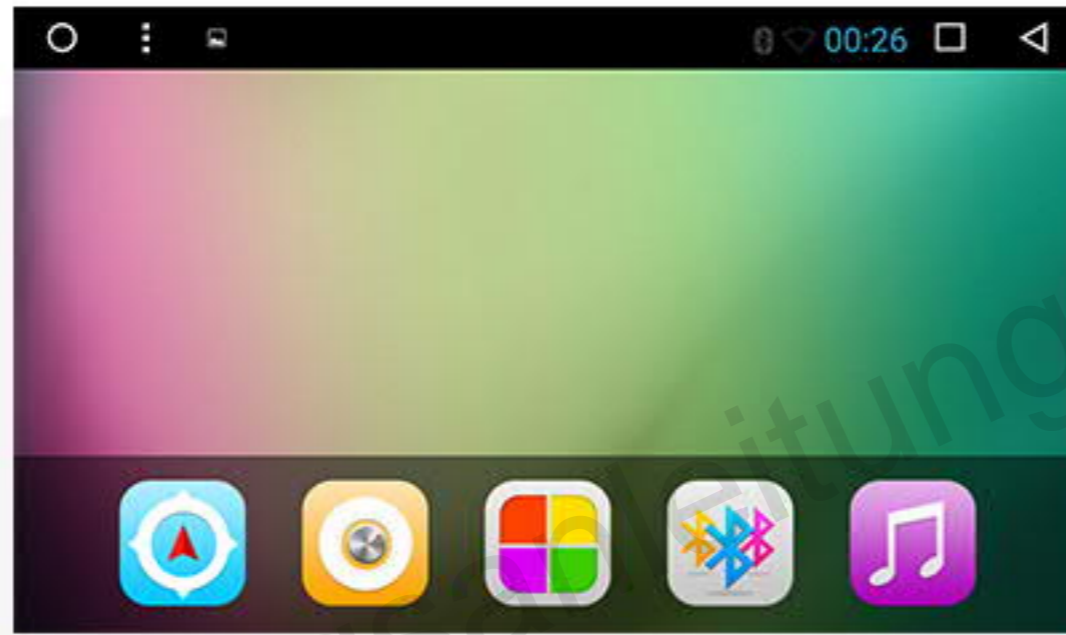


1

On the main page, click  the application icon in the middle of the common function bar to enter the APPS list.


**BACK**

1/5


# Time setting

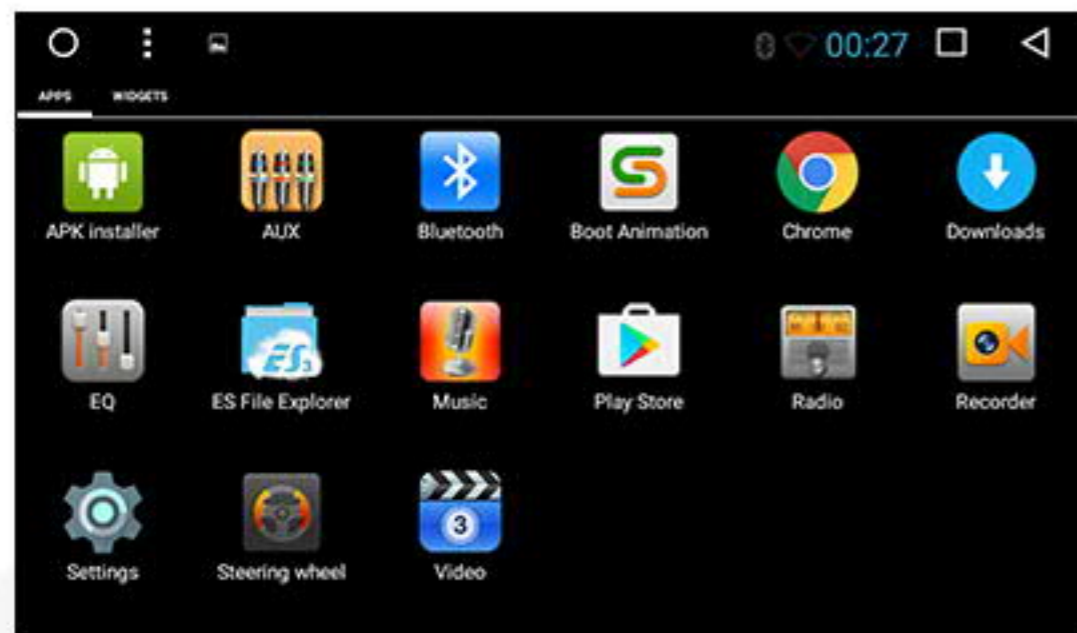

2

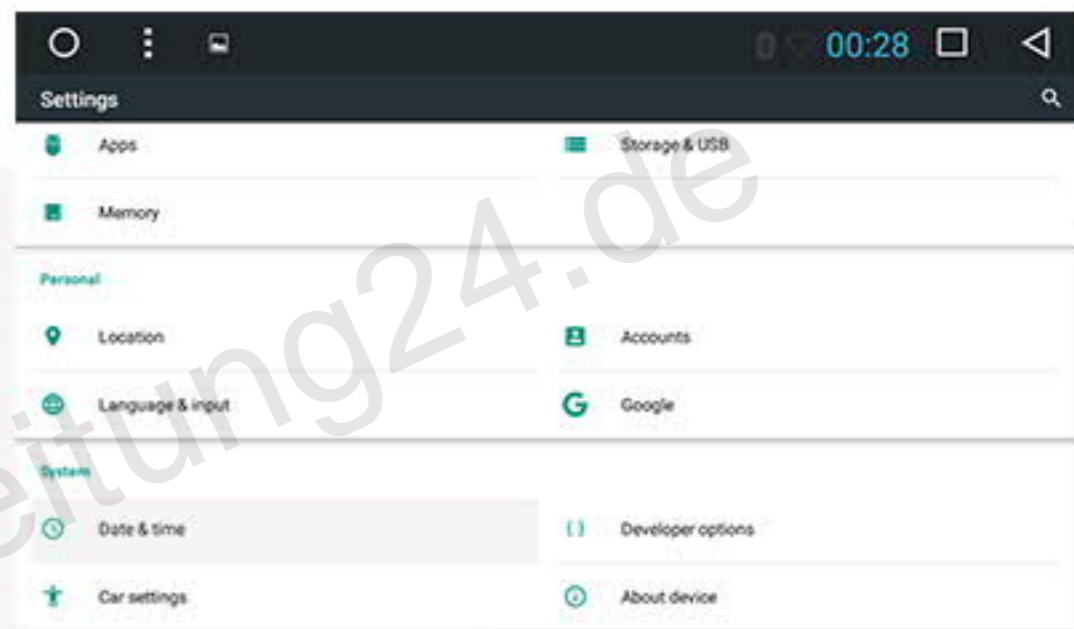


3

Find and click  the icon to enter the settings interface. Pull down to find "Date & time" option, click to enter the time setting interface.

**BACK**

2/5

# Time setting

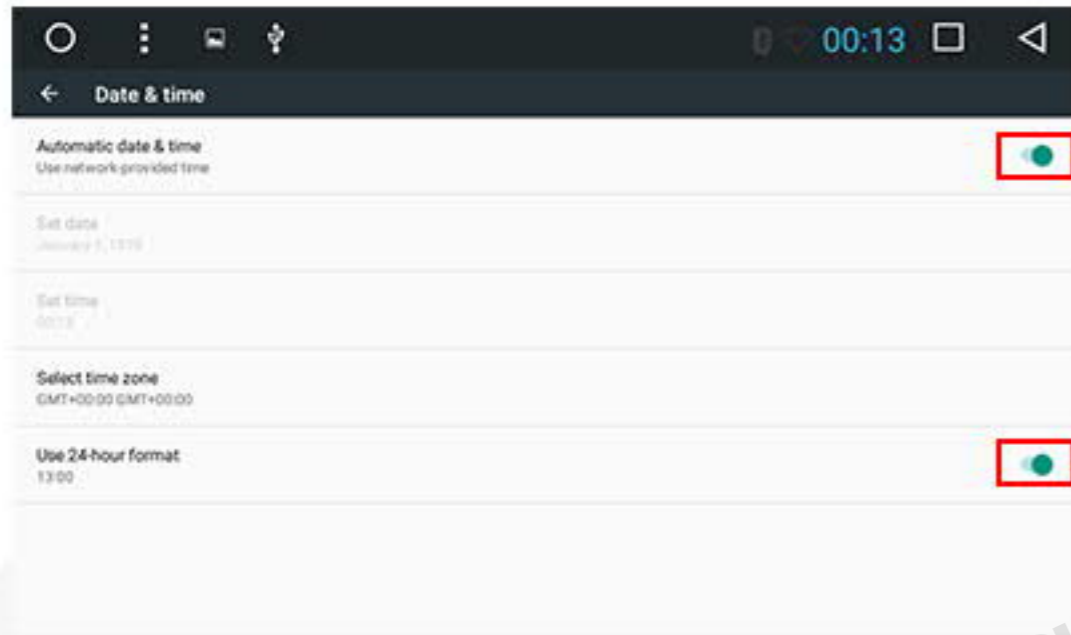

Click here to turn off automatic synchronization

Click here to switch to 12-hour display time

4

By default, "Automatic date & time" is enabled, the time zone will be automatically synchronized. To manually set the need to turn off this option.

The default is 24-hour display time. To switch 12 hours, please click the "Use 24-hour format" option to close.


**BACK**

 3/5

# Time setting

Click here to adjust the year

Click here to adjust the date

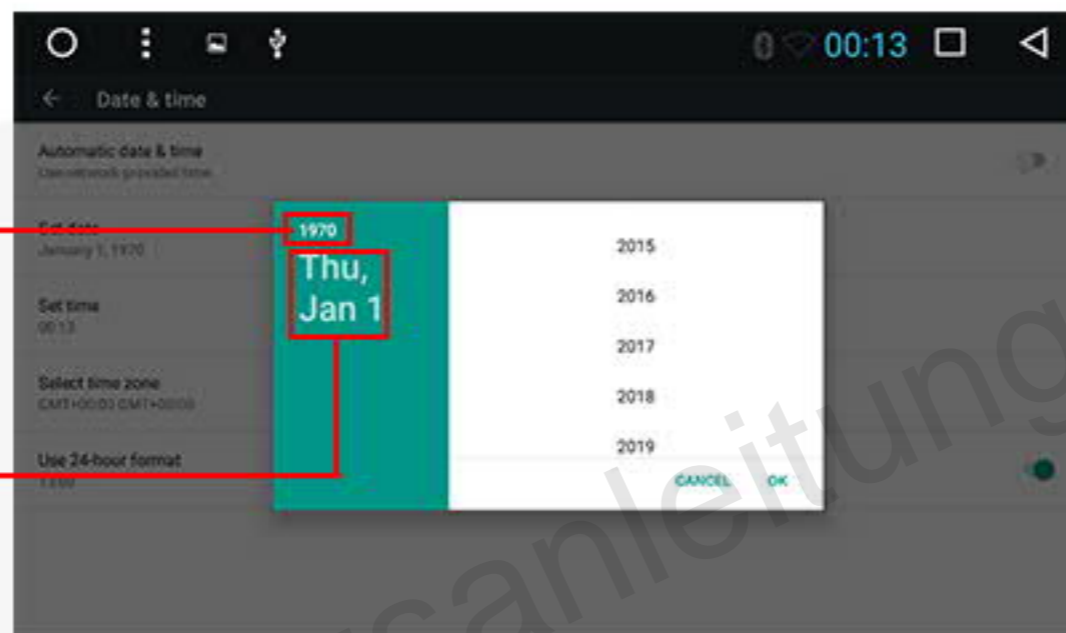

5

Click "set date" to enter the adjustment date interface.


※ Note that you need to click on the location of the map to switch the year month.

**BACK**

 4/5




# Time setting

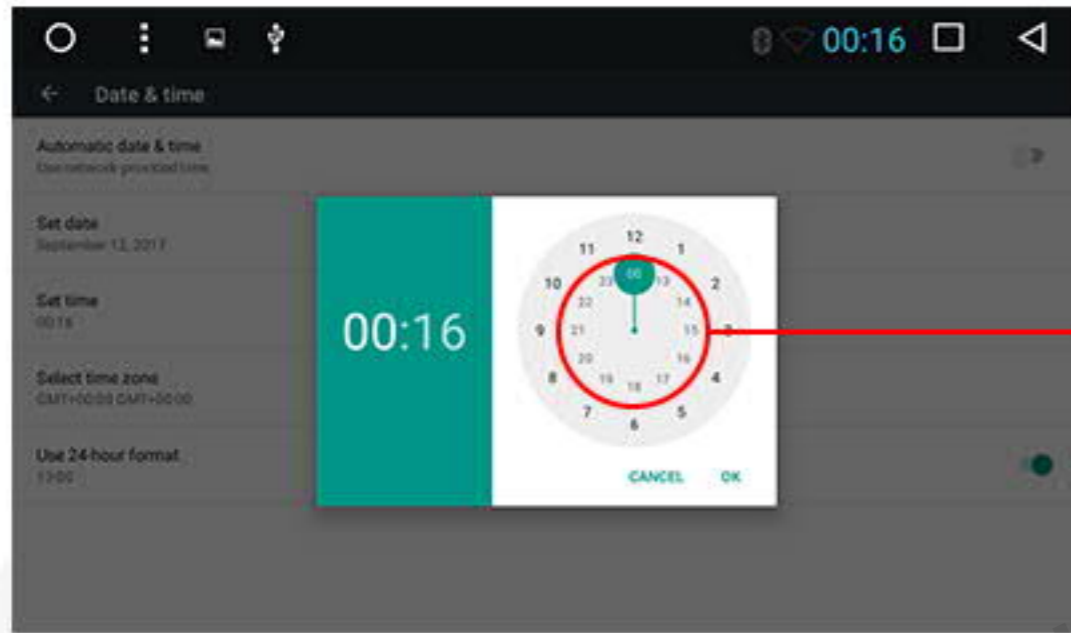

6

Drag the  
hour hand  
to select  
the wheel

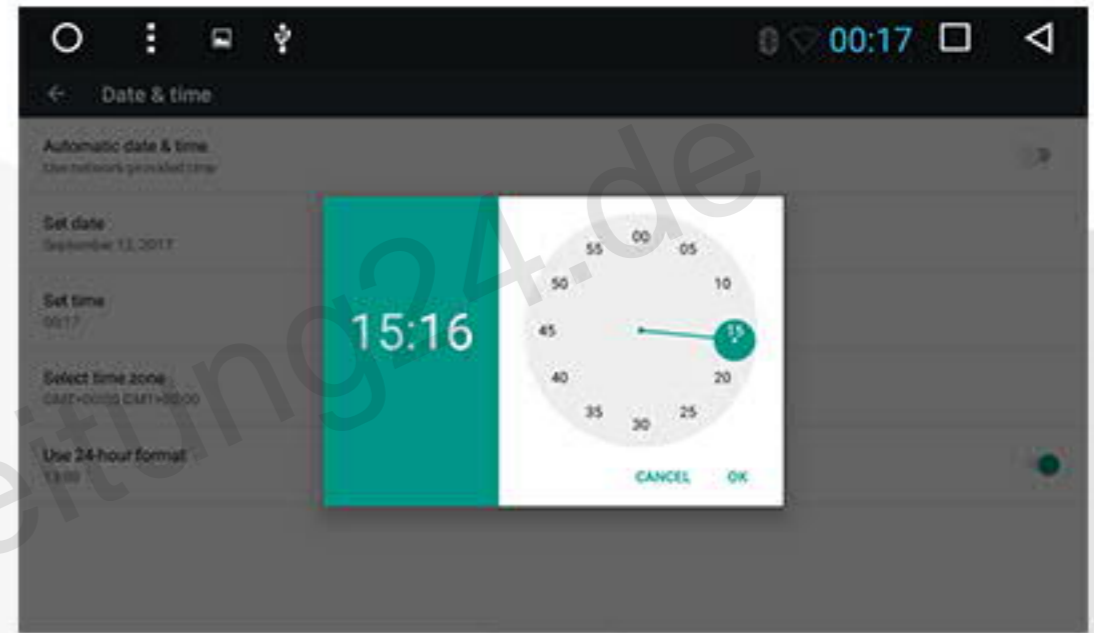


7

Click "set time" to enter the time adjustment interface. Drag the dot Choose the hour on the roulette wheel, then the interface will automatically jump to the minute hand setting, drag the dot to the minute hand you want to set, and click OK to finish the time setting.

**BACK**

5/5

# Search the radio

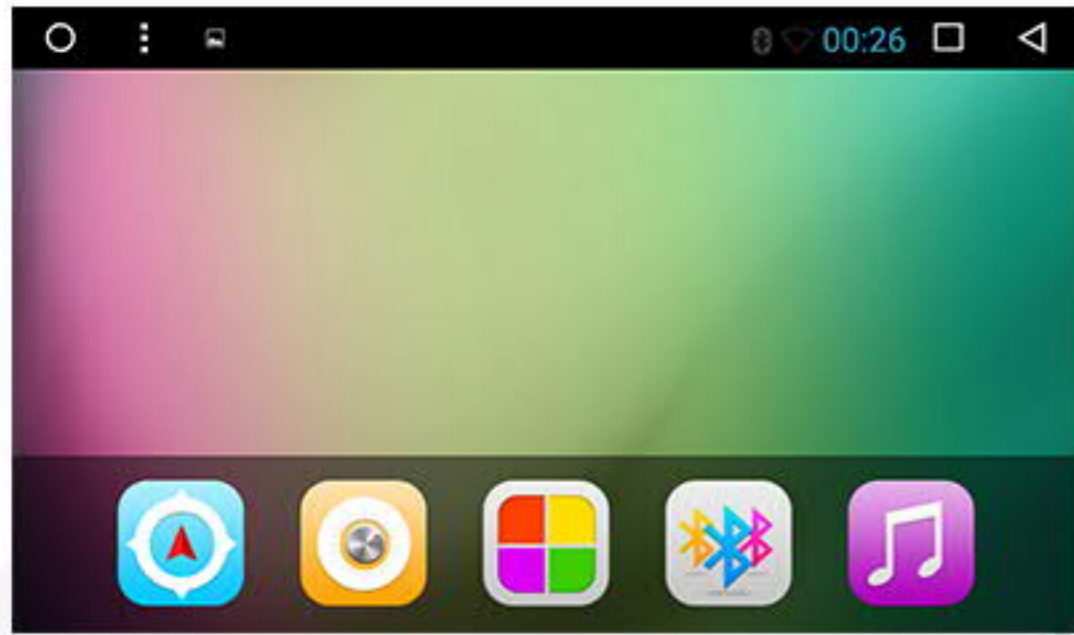


1

Click here to manually tune the frequency.

Click here to start automatically searching for audibles-tations.




2

Click the main interface commonly used shortcut bar  radio icon, enter the radio interface (Figure 2). Click the AS icon in the lower left corner of the screen to automatically search for audible stations. Click on the left and right arrows above the frequency can be manually FM.

**BACK**

# Play disc

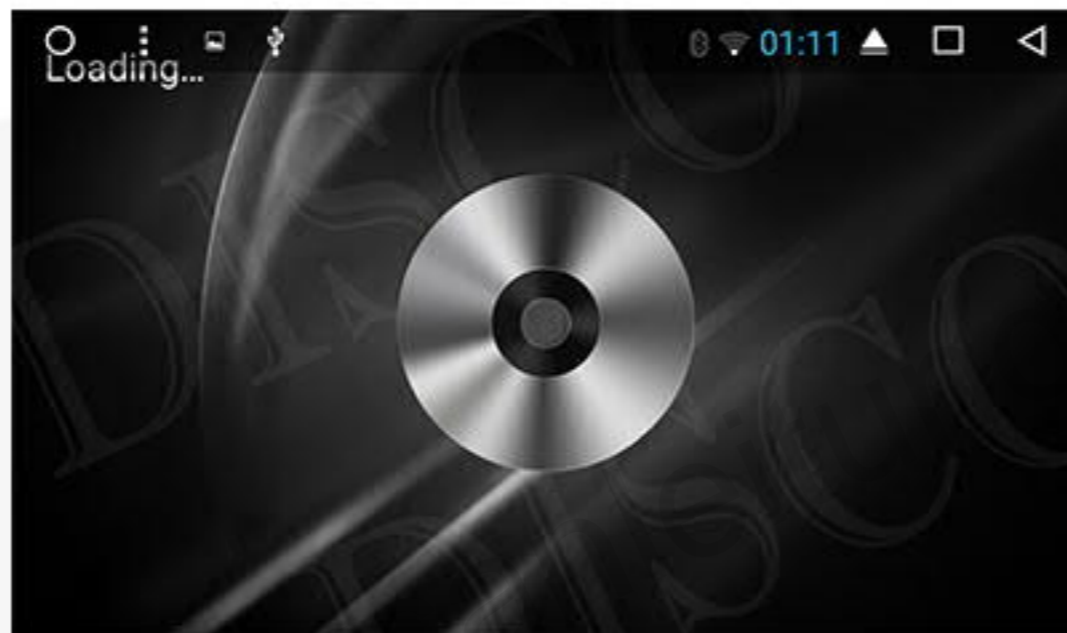

1

When you insert a disc, you jump to the disc reading interface in any interface (Figure 1).

※ Support DVD / CD / VCD and burning disc playback.

**BACK**

1/2

# Play disc



2




3

According to different into the disc, the video will enter the video player interface shown in Figure 2, audio into the audio player interface shown in Figure 3. According to the interface button can video and audio, play / pause, fast forward, previous / next song operation, but also can use the panel function keys, knob operation.

**BACK**

# Web browsing

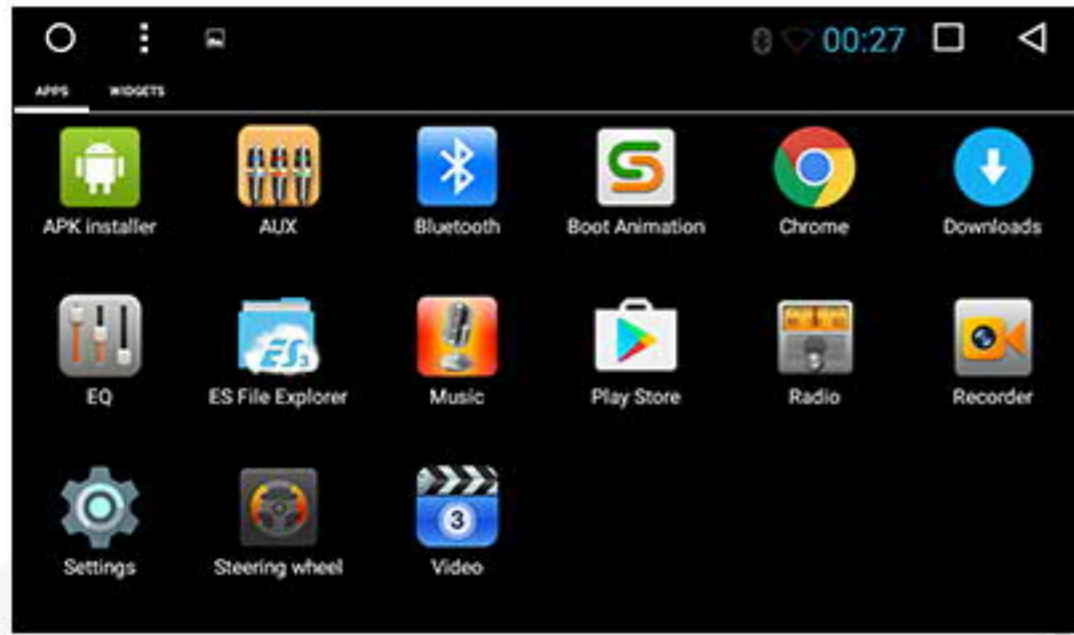

1




2


When the WiFi signal is connected, click the browser icon in the APPS list (the product default browser is Chrome) to start browsing the web.

**BACK**



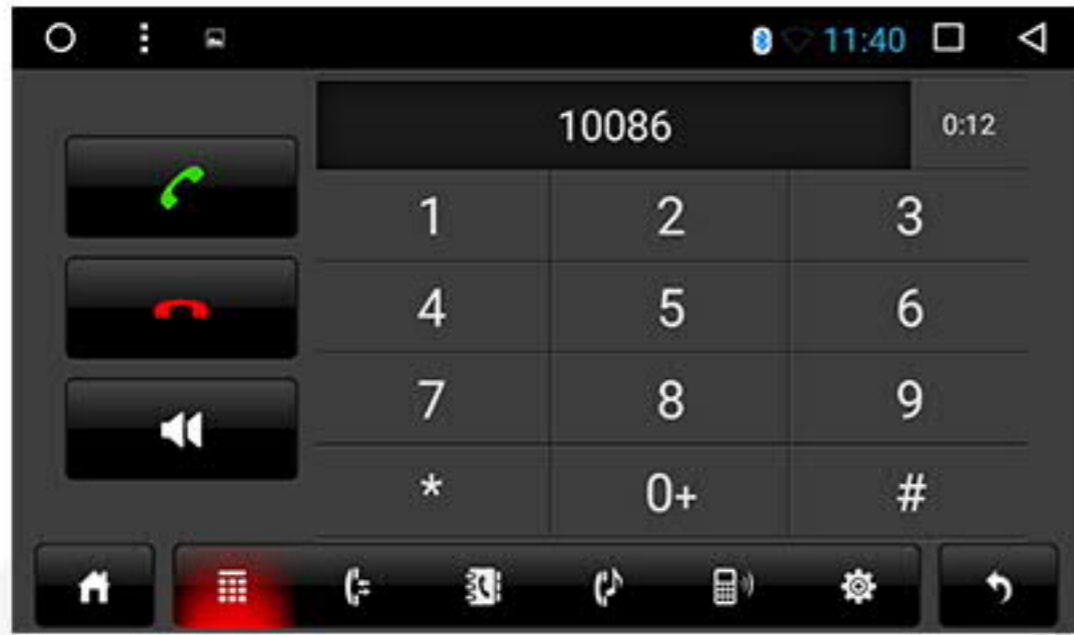

# Call / answer

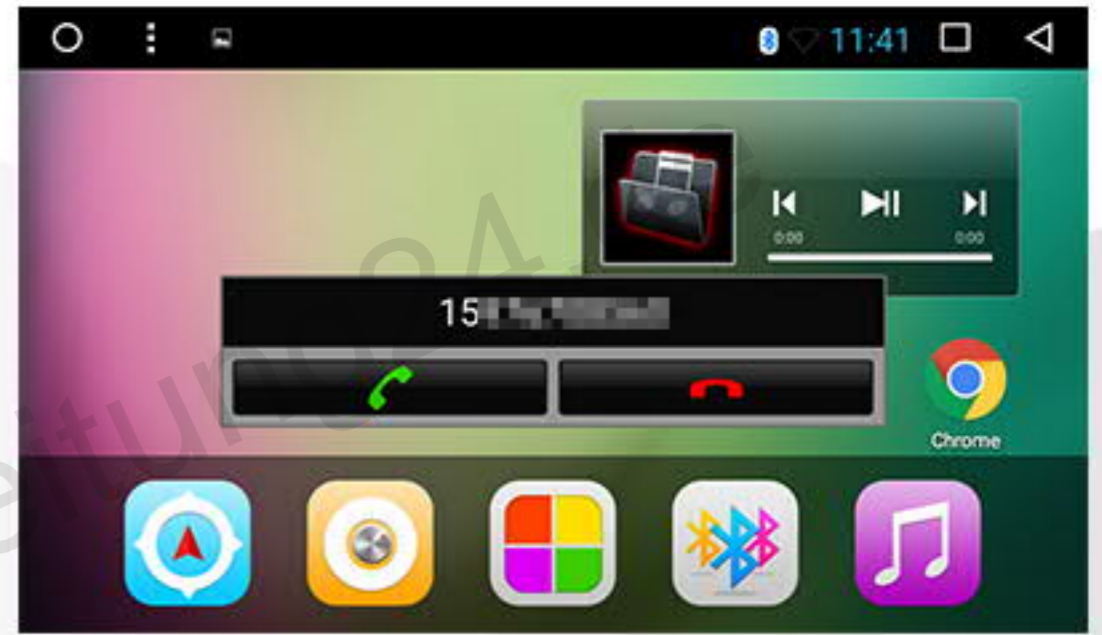

1




2

In the case that the mobile phone is already connected, enter the Bluetooth interface, click  the icon to switch to the calling interface, click the number key on the screen to dial the number, and then click  the icon to make a call. In the case of connecting a good phone, there is any incoming call, the interface will appear as shown in Figure 2 calls prompt interface, click  and  can answer and hang up.

**BACK**


# Connect the phone

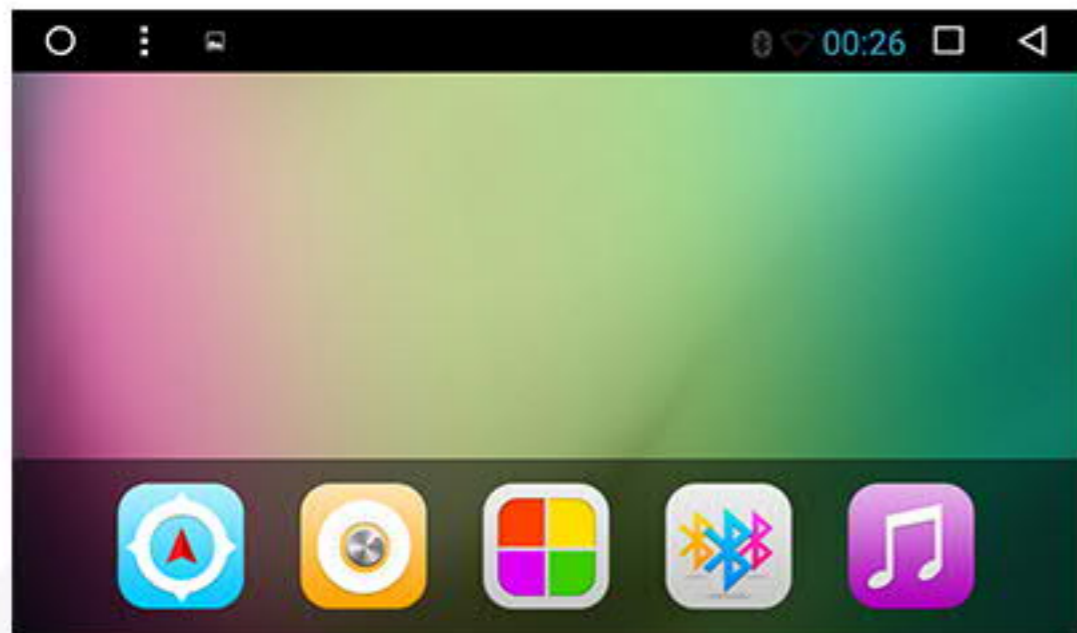

1




2

Click  the Bluetooth icon in the shortcut bar of the main interface to open the Bluetooth interface.

✘ Bluetooth interface default to enter the matching interface.

**BACK**

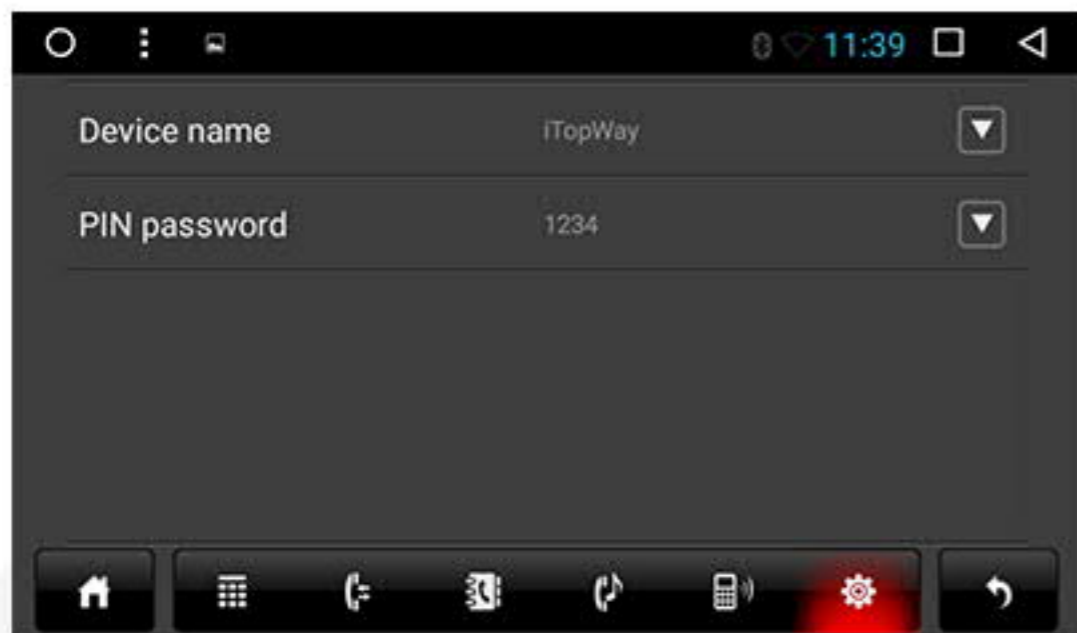 


# Connect the phone



3




4

Click on  the Bluetooth interface to switch to the Bluetooth settings interface, you can view the machine's Bluetooth device name, and match the password, note. Then click on  the icon to switch to the matching interface, click on  the left icon to enter the search list, and search for nearby Bluetooth devices, open the Bluetooth function of the phone you want to connect to, and list the searched devices in the search interface.

**BACK**



# Connect the phone

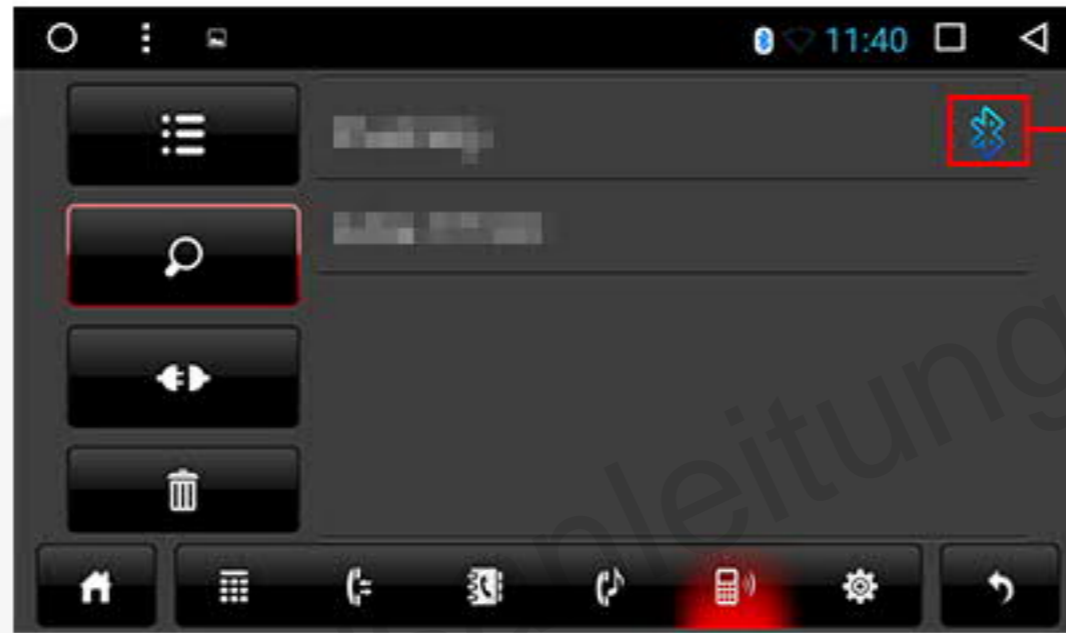

When this icon is lit,  
the connection is suc-  
cessful

5


Search for a Bluetooth device on the phone side, find the device named "iTopway" and click "Output password" 1234 to connect, waiting for the matching connection to be completed.

※ If the connection interface can choose to obtain phone contact authorization, be sure to choose to accept authorization.

**BACK**

3/3

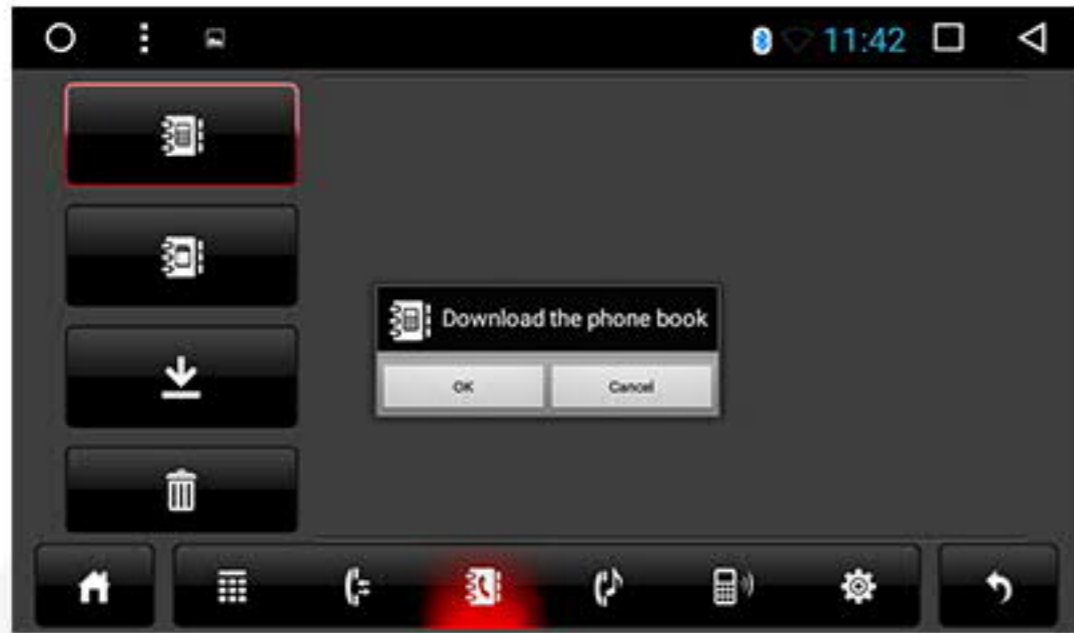

# Download contacts



1




2

When the phone is connected, enter the Bluetooth interface and click  the icon to switch to the phone contacts interface. Click on  the icon will pop up a confirmation box to download phone contacts, click OK to confirm the download, wait for the download to complete.


※When you download the address book, the mobile terminal will pop up a permission box, click Allow, or the download will fail.

**BACK**

# Bluetooth music

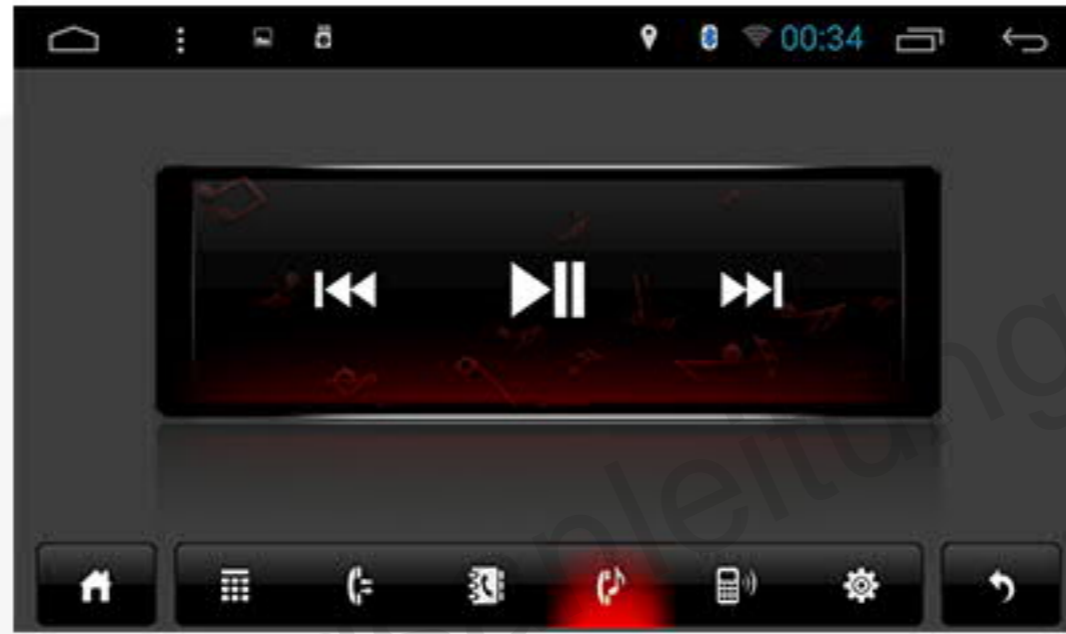

1


Bluetooth is already connected to the phone is, click  the Bluetooth music icon, switch to the Bluetooth music player interface.

Click on the interface song and play / pause, the phone default music player to synchronize the song to play the corresponding operation.

**BACK**
 
# Play video

- Playlist is the list of videos that are playing
- extSD is the list of video files read to the inserted TF / SD card
- USB is the video file list of the storage device read into the USB interface
- iNand is a list of video files stored inside the machine

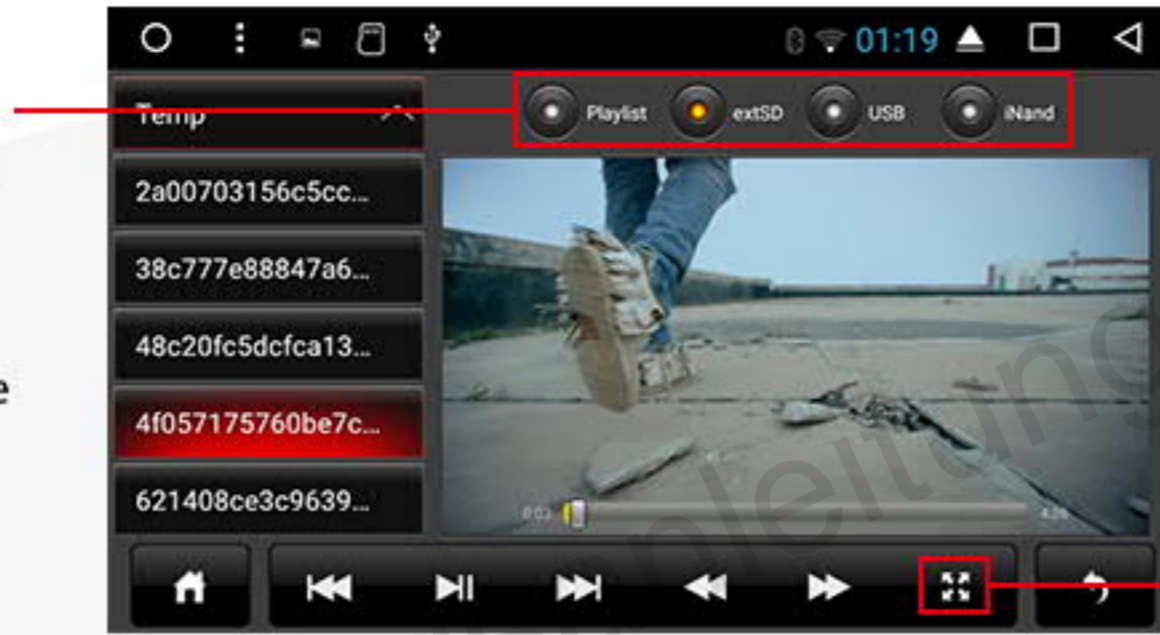

Click this button to switch to full screen

1

When a storage device such as a TF card or a USB flash drive with video is inserted into the corresponding interface on the machine, you can find the [Video] icon on the APPS interface and click to enter the video playback interface shown in Figure 1.


Use the pause / play interface, fast forward, the previous song / next song on the video corresponding operation.

**BACK**

# Language settings




1

On the main page, click  the application icon in the middle of the common function bar to enter the APPS list.


**BACK**

1/3


# Language settings

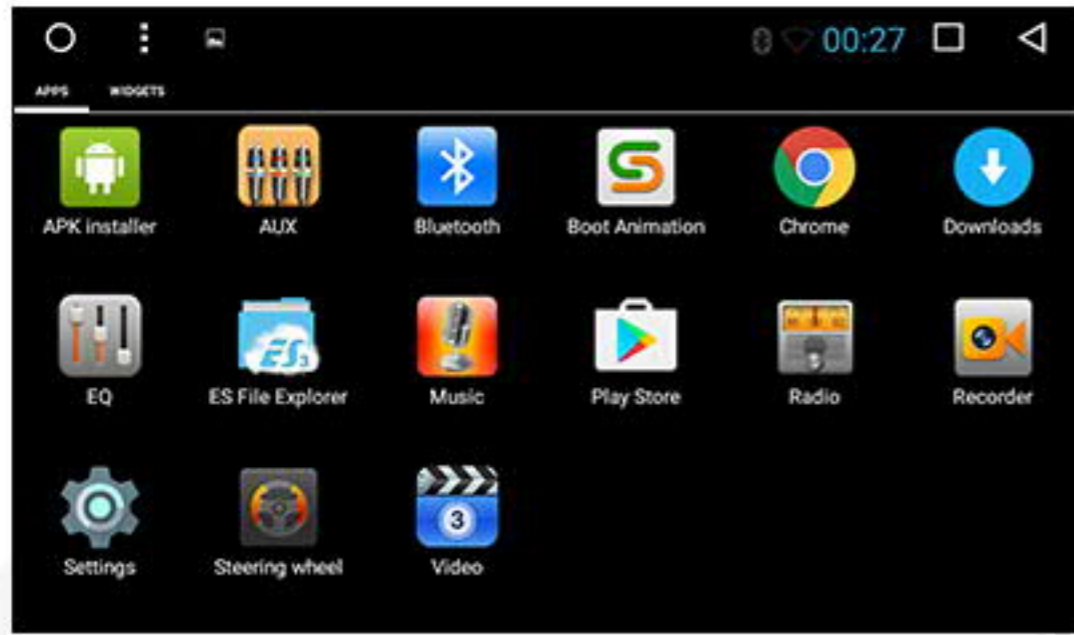

2

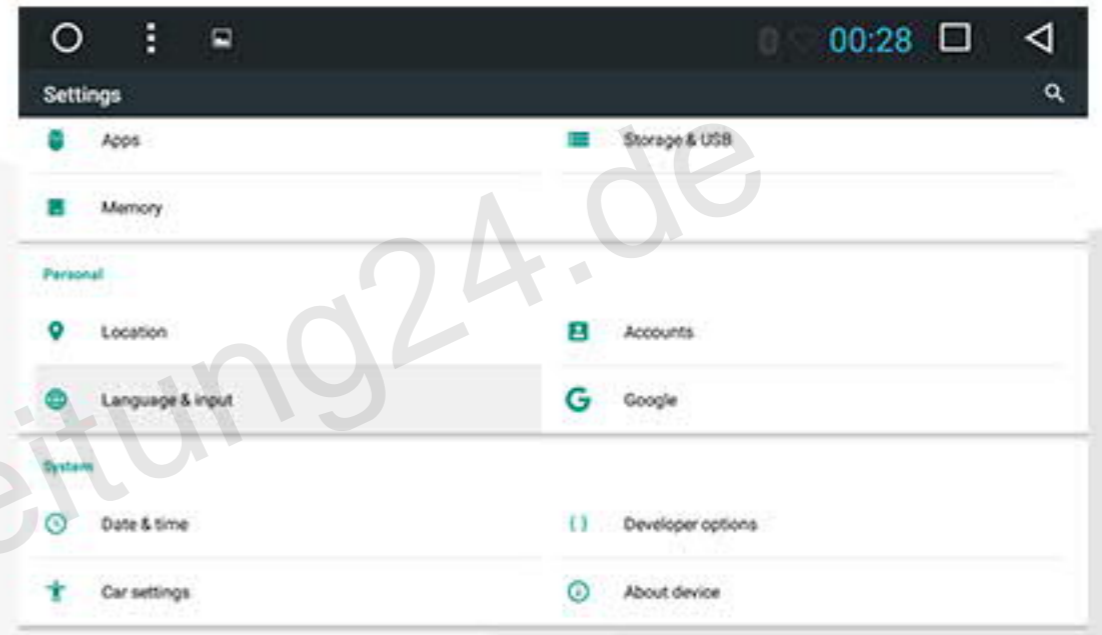


3

Find and click  the settings icon to enter the settings interface. Pull down to find "Language & input" option to enter.

**BACK**

 2/3

# Language settings

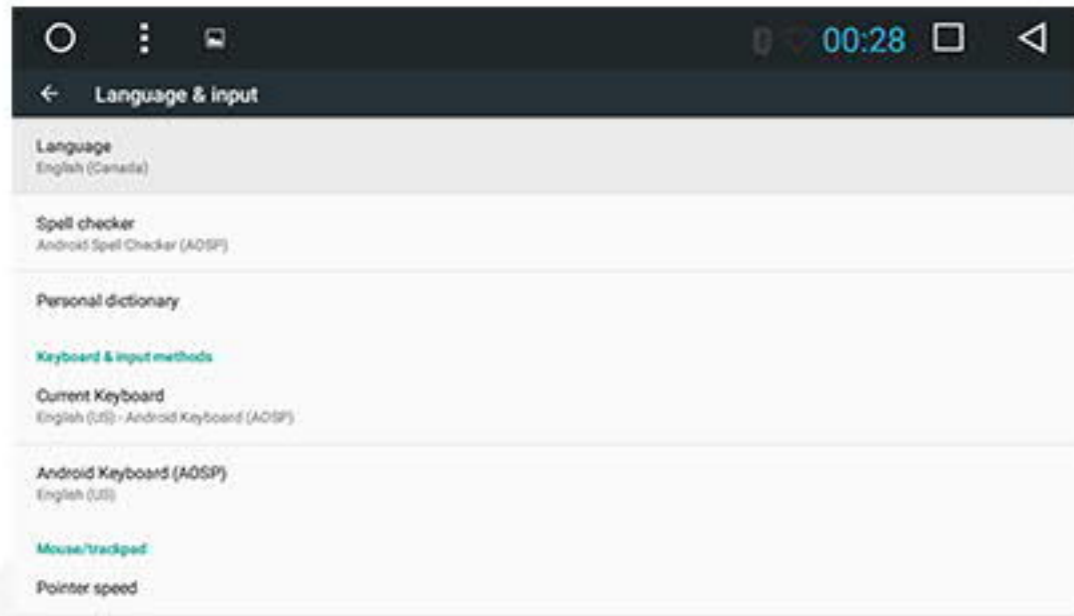


Click on the top of the first option "Language" into the language selection list. In the language list, drop down to find the language you want to set, and click to complete the system language setting.

**BACK**
 
# Play video

- Playlist is the list of music being played
- ExtSD is a list of music files inserted into the TF / SD card
- USB is a list of music files that are read into the storage device of the USB interface
- INand is a list of music files stored in the machine

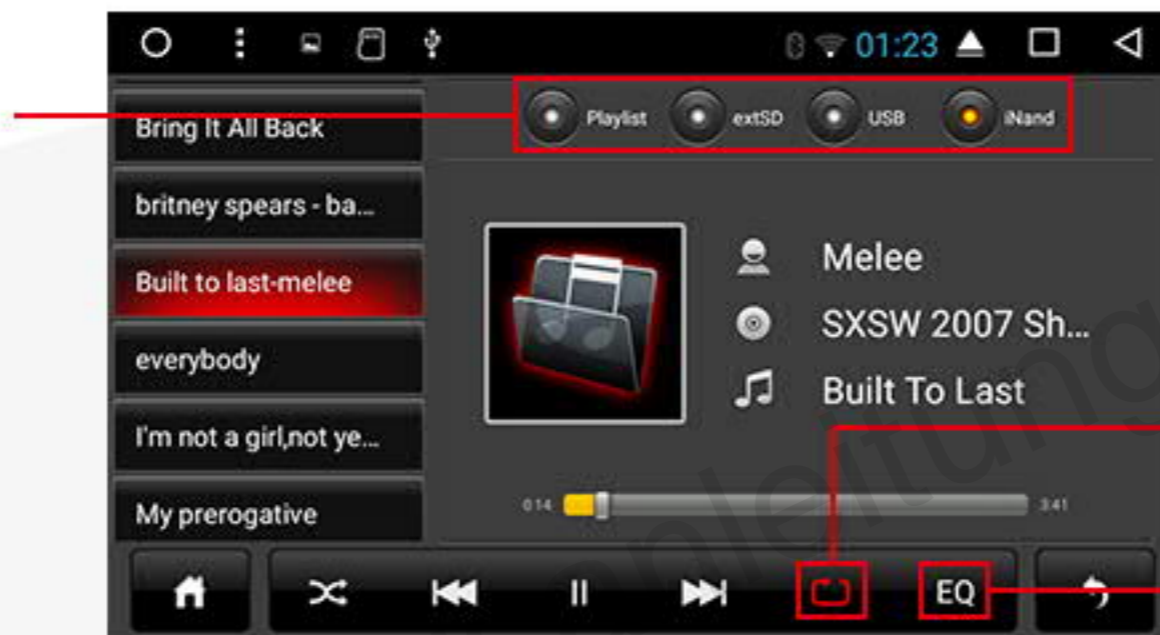

Click this button to switch the playback mode

Click this button to switch to the EQ screen

1

When a storage device such as a TF card or a USB flash drive with video is inserted into the corresponding interface on the machine, you can find the [Video] icon on the APPS interface and click to enter the video playback interface shown in Figure 1.

Use the pause / play interface, fast forward, the previous song / next song on the video corresponding operation.

**BACK**