

G1 Ultra HD 4K Action Camera Instruction Manual




About This Manual

Thank you for purchasing **NEEWER G1 Ultra HD 4K Action Camera**. This Manual can help you know:



- the basic operation procedure and function of G1 Ultra HD 4K Action Camera.
- the application environment and safe use of G1 Ultra HD 4K Action Camera.
- the accessories' installation methods of G1 Ultra HD 4K Action Camera.

1.Package Contents

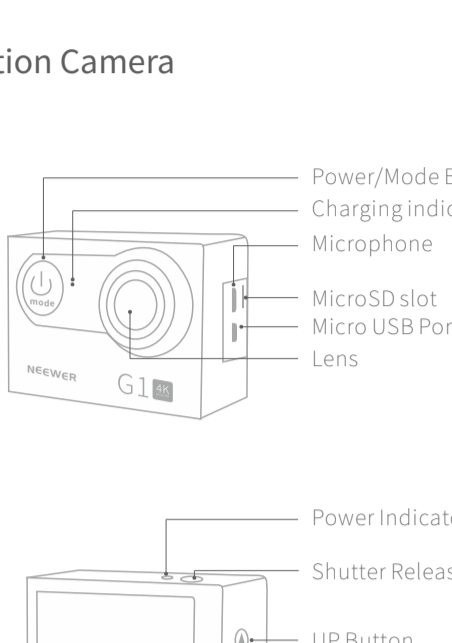



1

3.Action Camera

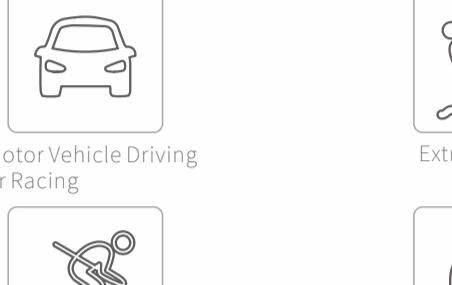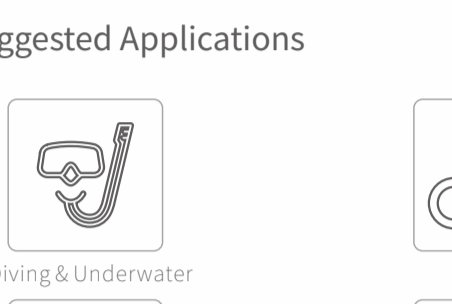

3

5.Suggested Applications

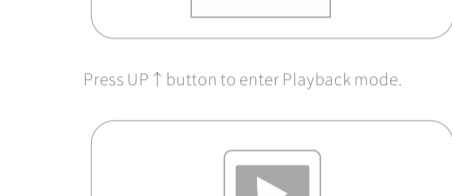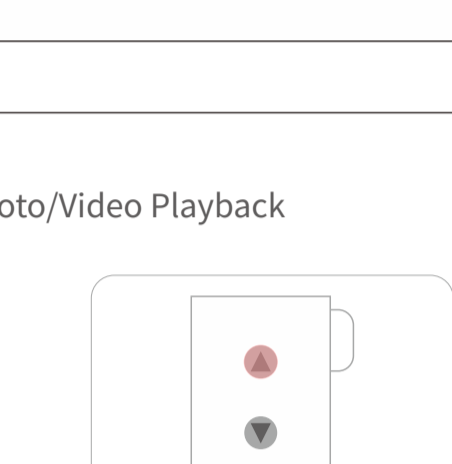


5

7.Photo/Video Playback



Press UP ↑ button to enter Playback mode.

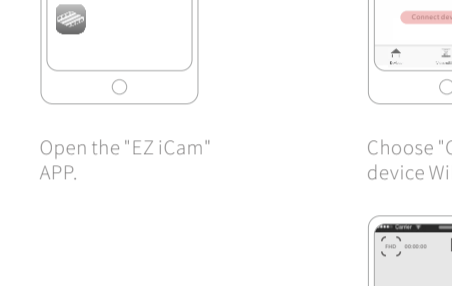


Select to replay your photos or videos.

⚠ To exit playback mode, press the MODE button three times, then it will return to Starting-up interface.


7

8.APP Control Usage Methods

With the APP "EZ iCam", you can control your camera effectively from a smartphone or tablet. Multiple functions are available via APP control: Photo Review, Photo and Video Sharing, Camera Controls, Real-time Viewing, and More.

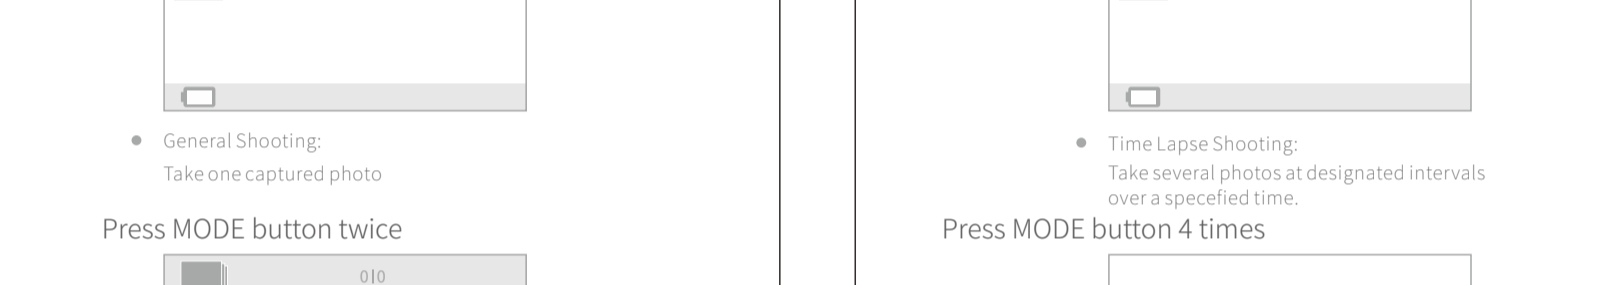

Scan the QR code to download APP. Press the MODE button for about 5 seconds to turn the NEEWER G1 action camera on, and then press DOWN Button ↓ twice.

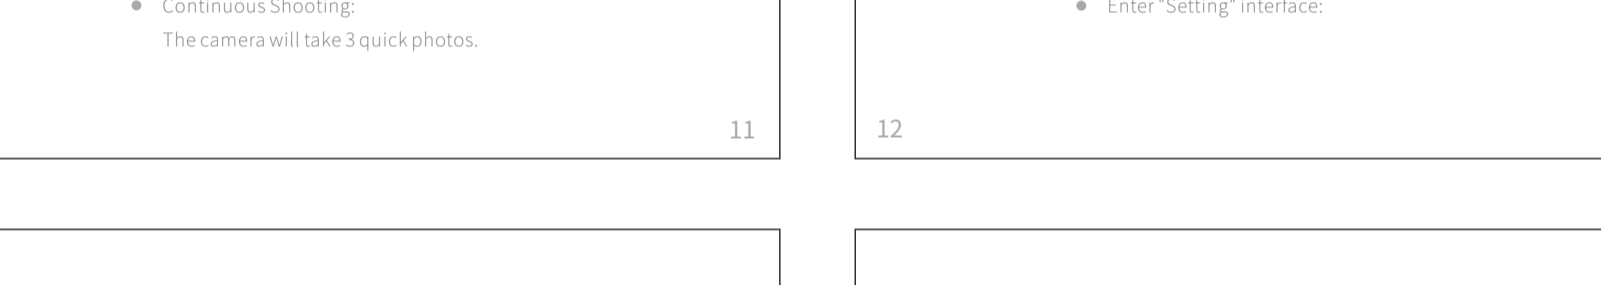

Make sure your phone or tablet has its WiFi enabled, then choose "iCam-H9" to connect your phone or tablet with NEEWER G1 camera through the APP.

⚠ Please Note: Don't close GPRS/Cellular network when opening WLAN/WiFi network. (or the iCam-H9s may not be connected.)


8

9.Functions Introductions



• Press the MODE button for about 5 seconds to turn on G1 action camera.


• To enter "Setting" interface, press MODE 4 times.

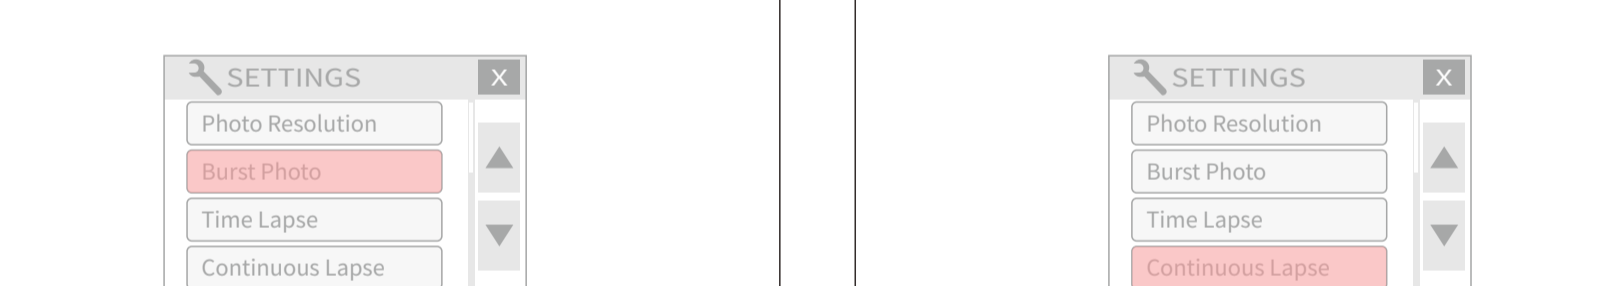

• Video Taking: Record a video.


9

10.Setting Interface

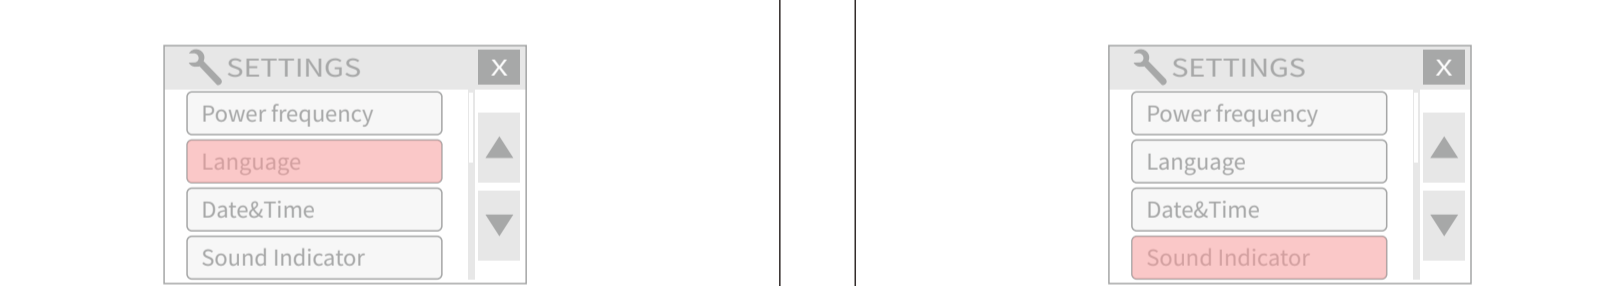

• Video Resolution: 1080P (30fps) / 1080P (30fps) / 4K (25ps) / 2.7K (30ps)



⚠ The optional DPI resolutions of video may be limited by the class of MicroSD cards. For example, the DPI of video will be limited to 1080P/30 pixels if the memory card is lower than class 6 to get the best video recording effect, please use class 10 MicroSD card!

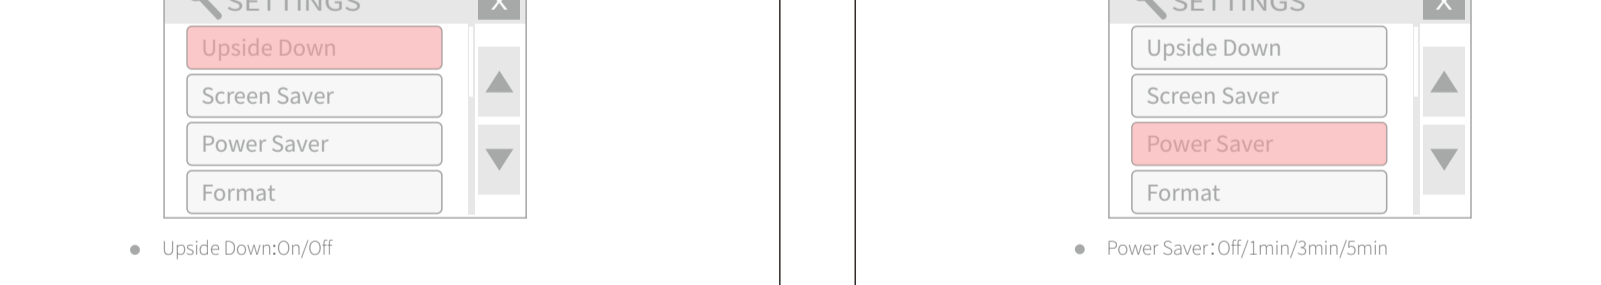

• Looping Video: OFF/ON


10

11.Accessory Installation Procedures

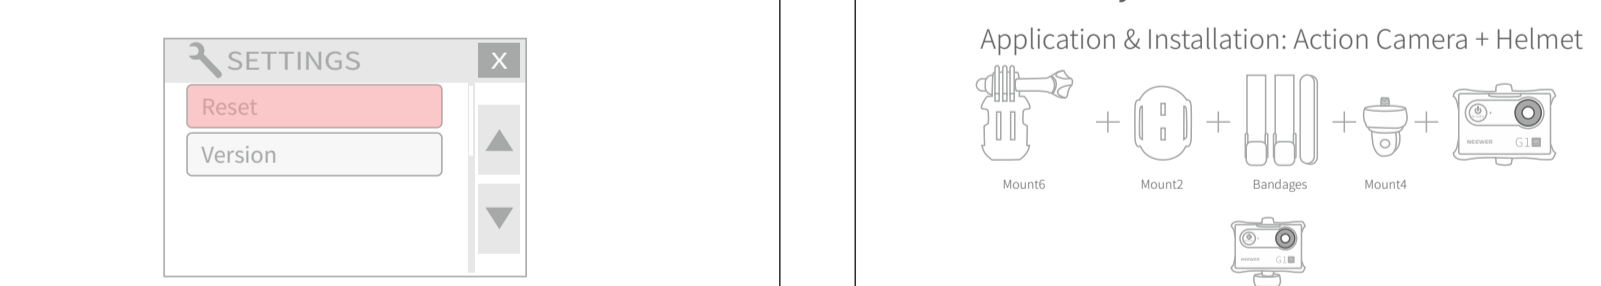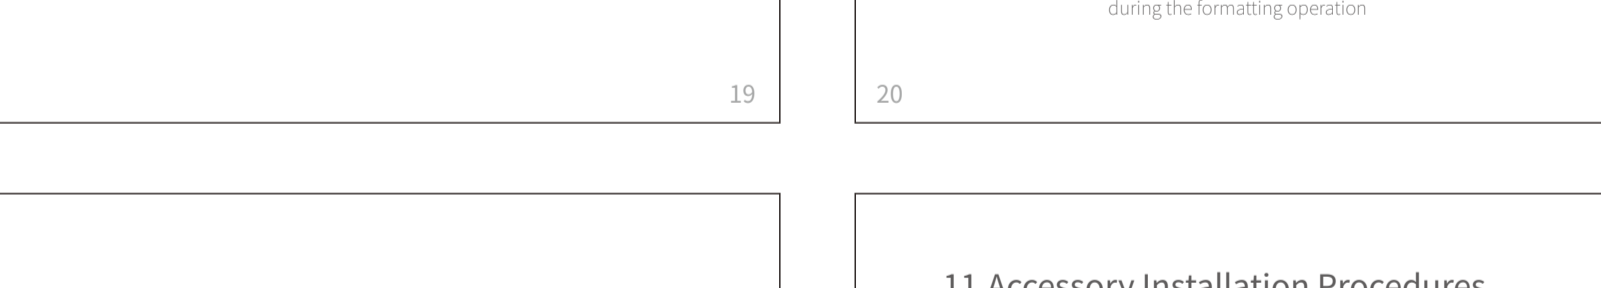


11


12.Precautions

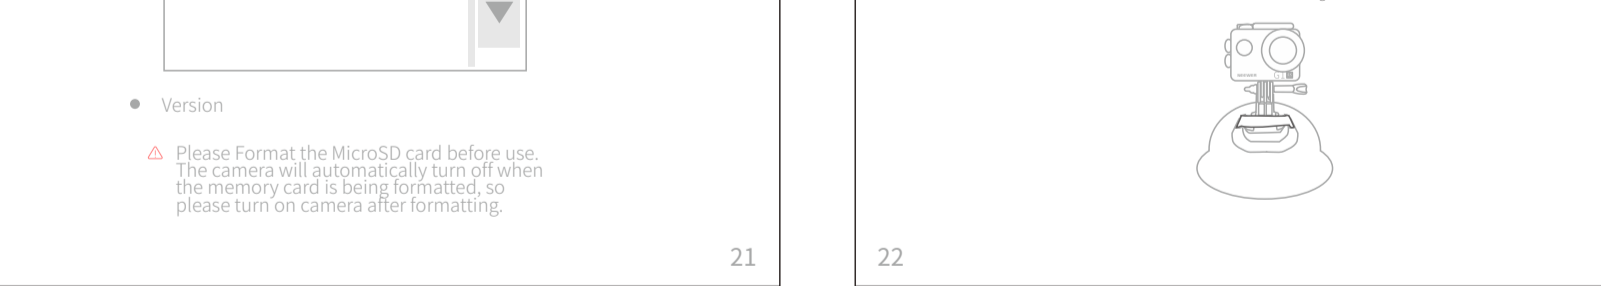


⚠ Please DO NOT use the camera in the rain without waterproof case! Housing installed, the camera itself isn't waterproof.

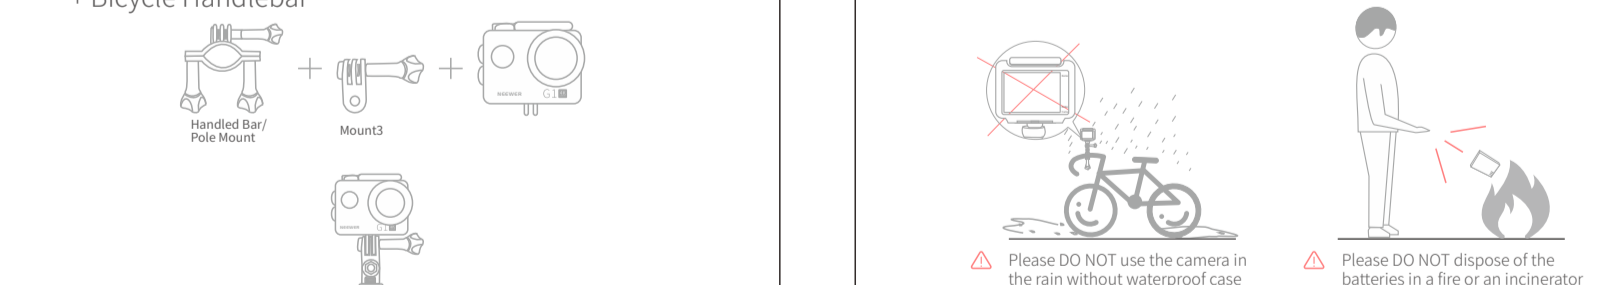

⚠ Please DO NOT dispose of the batteries in a fire or an incinerator as they may explode if exposed to extreme heat.

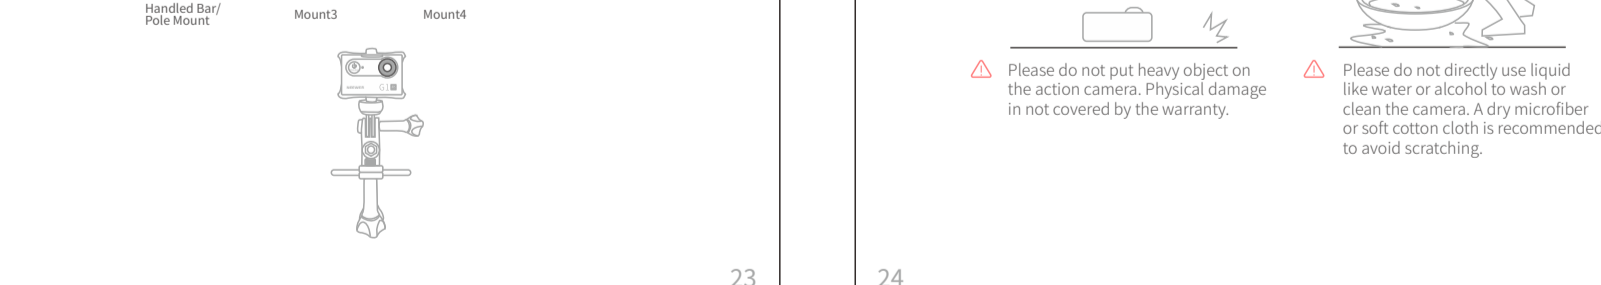

⚠ Please do not put heavy objects on the camera. Physical damage is not covered by the warranty.

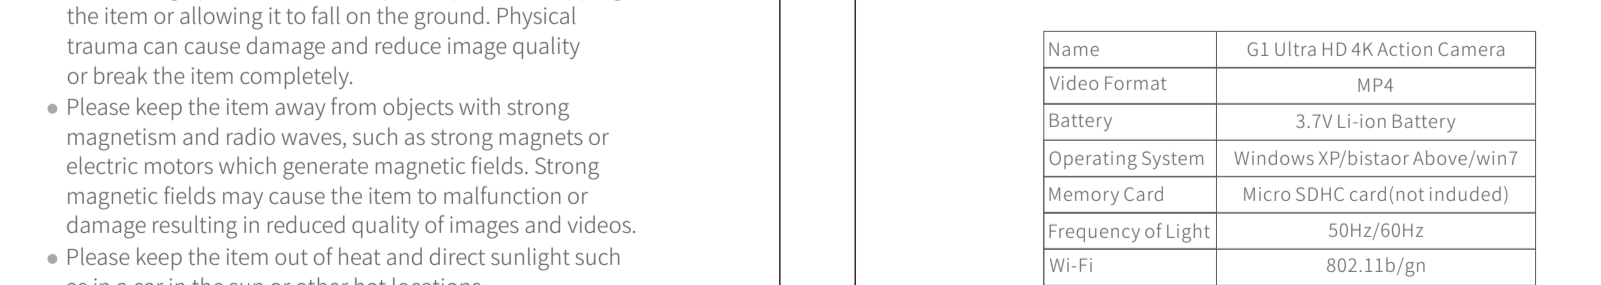

⚠ Please do not directly use liquid like water or alcohol to wash or clean the camera. A dry microfiber or soft cotton cloth is recommended to avoid scratching.

12

13.Notes

- This is a high precision product, please prevent dropping the item or allowing it to fall on the ground. Physical trauma can cause damage and reduce image quality or break the item completely.
- Please keep the item away from objects with strong magnetism and radio waves, such as strong magnets or electric motors which generate magnetic fields. Strong magnetic fields may cause the item to malfunction or damage resulting in reduced quality of images and videos.
- Please keep the item out of heat and direct sunlight such as in a car in the sun or other hot locations.
- NEEWER recommends using name brand MicroSD cards for best results. High quality SD cards ensure smooth operation of all functions of the camera.
- Please keep the MicroSD card away from places with strong magnetism. Strong magnetic fields damage SD cards and will corrupt the information stored on them, resulting in loss of images and videos.
- If the item becomes hot to the touch, emits fumes, or gives off an odor while charging, please promptly unplug the power to avoid any risk of fire.
- Please store the item in dry, cool, and dust-proof place, away from direct sunlight.

13

16.Trademark & Statement About NEEWER®

NEEWER is a registered trademark of NEEWER Technology Company, Ltd, which is protected globally by international trademark laws. NEEWER reserves all rights to this trademark.

27

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio-TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Shenzhen NEEWER Technology Co., Ltd may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

IC Statement: This device complies with Industry Canada licence-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radiés exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

28

14.Product Specifications

Name	G1 Ultra HD 4K Action Camera
Video Format	MP4
Battery	3.7V Li-ion Battery
Operating System	Windows XP/Windows Above/win7
Memory Card	Micro SDHC card(not included)
Frequency of Light	50Hz/60Hz
Wi-Fi	802.11b/g/n
Waterproof	Up to 30m
Dimensions	58.3*24.6*41.1mm

28

15.Warranty Policy

Warranty Period: You can register your NEEWER product for its free 1-year warranty at www.needwer.com/Thanks/. Your questions or suggestion are highly valued and appreciated. Please feel free to contact us and we will do our best to fully satisfy YOU! E-MAIL: support@needwer.com

Warranty Restrictions: The following conditions are NOT covered by the NEEWER® Warranty: (1) The product has expired the one-year warranty period;

NEEWER has been continuously devoted to developing new products, upgrading existing products and increasing manufacturing quality, which results in decreased product defect. If you have any questions or encounter any problems with our product, please reach out to our after-sale service team or authorized service provider for help. The actual product may differ slightly from the picture in this manual in color and appearance.

17.Contact Us

Your questions or suggestion are highly valued and appreciated. Please feel free to contact us, and we will do our best to fully satisfy YOU!

We encourage you to register your item on our website www.needwer.com. Here you can also create a NEEWER® user account, access manuals, firmware updates, engage in discussions on our user forums, submit support tickets, and more!

Email (multi language, English, Chinese, German, Spanish, Italian, and French languages): Support@needwer.com

29