

1



Place both, Usb Programmer and Superior Remote, on a table. The flashing led of Usb Programmer should be aligned to "Mute" Key of Remote Control, approximately 1,5 cm away.

2



Make sure Usb-Programmer Led and Superior Slim are on the same level: the head of remote control should be around 1cm high from the table.

tips and tricks



If the head of remote is going down, the remote won't be aligned to the Programmer.



Just place a pen under the Remote Control to easily reach the correct alignment level.



Never use usb-hub (multi-usb) to connect Usb-Programmer to your PC.



Always connect the Usb-Programmer directly to the usb port of your PC.