

TWS

WIRELESS IN-EAR EARBUDS User Manual



X1



X1



X1



X1



X1




X1




X1


1 Product Overview

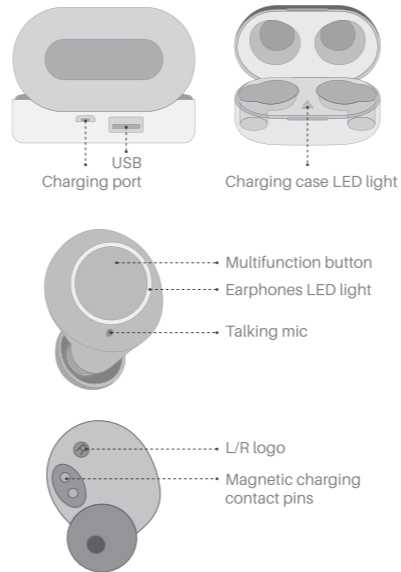


2 Power ON / Einschalten / Allumer / Encender / Power ON / パワーオン

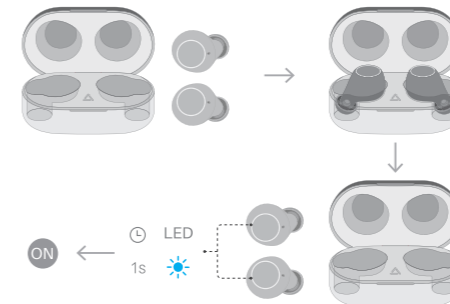

3 Power off / Ausschalten / Eteindre / Apagar / Spegnimento / パワーオフ

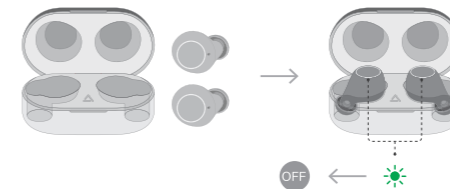

4 Pairing / Paarung / Pairage / Parejando / Pairing / ペアリング

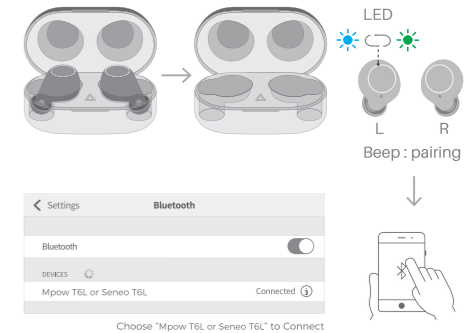

EN: Note: The earbud will reconnect to the paired device by priority. If you want to pair to the second smartphone, please disable Bluetooth on the paired smartphone.


DE: Achtung: Der Ohrhörer verbindet sich automatisch wieder mit dem letzten gekoppelten Gerät. Wenn Sie mit dem zweiten Smartphone koppeln möchten, deaktivieren Sie bitte Bluetooth auf dem gekoppelten Smartphone.

FR: Remarque: l'oreillette se reconnectera par priorité au périphérique couplé. Si vous souhaitez apparier le deuxième smartphone, désactivez Bluetooth sur le smartphone apparié.


ES: Nota: El auricular volverá a conectarse al dispositivo emparejado por prioridad. Si necesita conectarse al segundo teléfono inteligente, desactive Bluetooth en el teléfono inteligente emparejado.
IT: Nota: l'auricolare si riconnetterà al dispositivo accoppiato per priorità. Se si desidera accoppiare il secondo smartphone, disabilitare Bluetooth sullo smartphone associato.
JP: ご注意:イヤホンは前に接続したデバイスに優先的に再接続するので、他のスマホと接続したい場合は、前に接続したデバイスのBluetooth機能をオフにしたほうがオススメです。

5 Function button


EN: Play / pause / answer a call / hang up a call / refuse a call
DE: Abspielen / Pausen/ Anruf beantworten / Auflegen / Ablehnen Drücken / doppelt drücken
FR: Jouer / pause / répondre à un appel / raccrocher / refuser un appel Appuyez / appuyez deux fois
ES: Abspielen / Pausen / Anruf beantworten / Auflegen / Ablehnen Drücken / doppelt drücken
IT: Riproduci / metti in pausa / rispondi a una chiamata / termina una chiamata / rifiuta una chiamata Premere / premere due volte
JP: 再生/一時停止/電話応答/切断/拒否 押す/2回押す

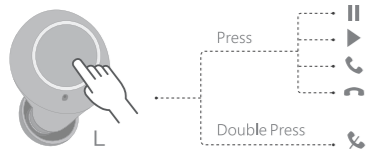


6 Next song / Previous track

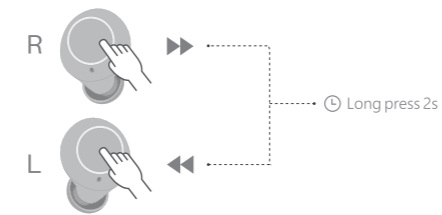

7 Charing

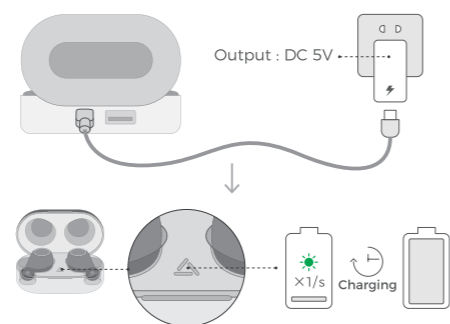

8 Mono and stereo use / Mono-Modus (Einzel-modus) / Mode Oreille Unique / Modalità orecchio singolo / 片耳モード

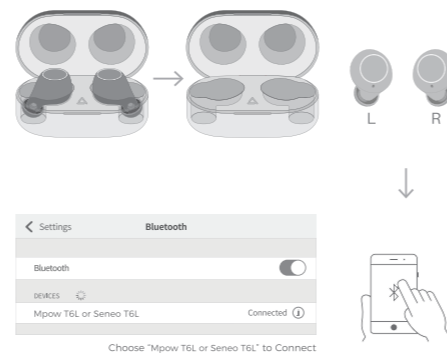

EN: Note: The earbud will reconnect to the paired device by priority. If you want to pair to the second smartphone, please disable Bluetooth on the paired smartphone.
DE: Achtung: Der Ohrhörer verbindet sich automatisch wieder mit dem letzten gekoppelten Gerät. Wenn Sie mit dem zweiten Smartphone koppeln möchten, deaktivieren Sie bitte Bluetooth auf dem gekoppelten Smartphone.
FR: Remarque: l'oreillette se reconnectera par priorité au périphérique couplé. Si vous souhaitez apparier le deuxième smartphone, désactivez Bluetooth sur le smartphone apparié.
ES: Nota: El auricular volverá a conectarse al dispositivo emparejado por prioridad. Si necesita conectarse al segundo teléfono inteligente, desactive Bluetooth en el teléfono inteligente emparejado.
IT: Nota: l'auricolare si riconnetterà al dispositivo accoppiato per priorità. Se si desidera accoppiare il secondo smartphone, disabilitare Bluetooth sullo smartphone associato.
JP: ご注意:イヤホンは前に接続したデバイスに優先的に再接続するので、他のスマホと接続したい場合は、前に接続したデバイスのBluetooth機能をオフにしたほうがオススメです。

9 Fcc statement

Operation is subject to the following three conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.
(3) This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.