




Doro 7030

Deutsch

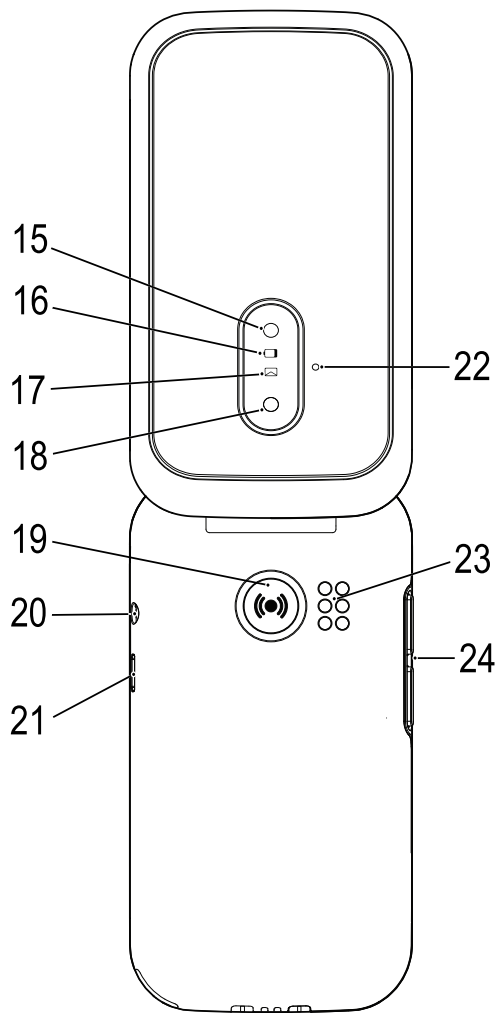

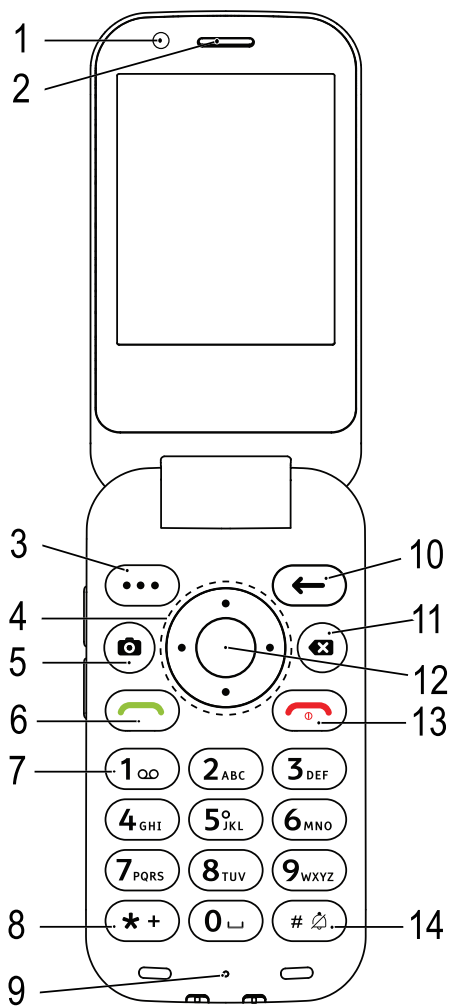

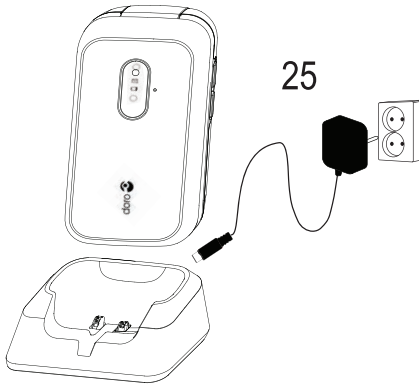

Hinweis! All illustrations may not accurately depict the actual device.

The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

1. Front camera
2. Speaker
3. Menu button
4. Four-way navigation keys
5. Camera shortcut
6. Call button
7. Voicemail
8. International prefix/ Symbols
9. Microphone
10. Back button
11. Clear button
12. OK-button
13. End call/ **Power on/off**
14. Input method/ Silent mode
15. Camera flash and Flashlight
16. Red light = battery level low / charging
17. Green light = New message / missed call
18. Main camera
19. Assistance button
20. Headset socket
21. Charging socket
22. Second microphone
23. Loudspeaker
24. Volume keys
25. Charging cradle (optional accessory)

Inhalt

Congratulations on your purchase	1
Getting started	1
Unbox your new phone	1
Insert SIM card, memory card and battery	2
Charge the phone.....	4
Save energy	5
Turn the phone on and off.....	5
Get to know your phone	6
Assistive functions.....	6
Einrichtungsassistent.....	6
Phone indicators	7
Notification panel and status bar	7
Descriptions in this document	7
Basic phone operations.....	8
Navigate your phone.....	10
Sharing content	12
Enter text 	13
Hearing aid compatible	14
Connect the phone to a computer	15
Calls	16
Make a call	16
Call from the phonebook	16
Receive a call	16
Call information.....	17
Call options.....	17
SOS calls	17
Call history.....	18
Call settings	18
Kontakte	23
Add contact	23
Manage phonebook contacts	23
ICE (In Case of Emergency) 	23
Phonebook settings.....	24
Assistance button.....	25
Setting the mode for the Assistance button	25
Assistance settings	26

Aktivierung	26
Nummernliste.....	26
Activate text messages (SMS)	27
Position SMS.....	28
Notruf-Signal	28
MyDoro.....	28
For the helper(s) 	29
For the senior 	30
Messaging.....	31
Create and send text message (SMS)/picture message (MMS).....	31
Read and handle messages.....	32
Messaging options	32
WhatsApp.....	35
Facebook	36
Kamera	36
Wecker	37
Medien	38
Galerie	38
Musik.....	39
UKW-Radio	39
Rekorder.....	40
Videos.....	41
E-Mail	41
Create and send e-mail	41
E-mail settings	43
Organisator.....	44
Rechner	44
Kalender	45
Dateimanager.....	45
Notizen	46
Web browser.....	46
Taschenlampe	46
Settings.....	47
Assistance settings	47
Netzwerk & Internet	47
Display	59
Töne.....	61

Speicher	62
Anrufe	62
Sicherheit & Standort	63
Einrichtungsassistent	65
Lernprogramme	65
SIM-Toolkit	65
System	65
Additional functions	68
Display status symbols	68
Display main symbols	69
Sicherheitshinweise	69
Netzdienste und Netzkosten	69
Betriebsumgebung	69
Medizinische Geräte	70
Explosionsgefährdete Bereiche	70
Lithium-Ionen-Akku	70
Gehörschutz	71
Notruf	71
GPS-/Standortbasierte Funktionen	71
Fahrzeuge	72
Schutz persönlicher Daten	72
Malware und Viren	72
Pflege und Wartung	73
Garantie	74
Specifications	74
Urheberrecht und andere Informationen	75
Kompatibilität mit Hörgeräten	77
Spezifische Absorptionsrate (SAR)	77
Ordnungsgemäße Entsorgung des Produkts	78
Ordnungsgemäße Entsorgung der Akkus in diesem Produkt	78
Konformitätserklärung	79

Congratulations on your purchase

Enjoy easy calling and messaging with this stylish phone that enables you to use WhatsApp and Facebook over WiFi and high-speed 4G LTE networks. The large 2.8" display and the widely separated, high contrast keys make everything you see and do all very easy, including taking great photos and videos with the 3MP camera. Other features include enhanced audio with HD voice, easy navigation, a torch and an assistance button, as well as reassuring safety features such as support for Response by Doro™ with GPS positioning. For more information about accessories or other Doro products please visit www.doro.com or contact our Helpline.

Getting started

When you get your phone, you will need to set it up before use.

Tip: Remember to remove the plastic screen protector.

Unbox your new phone

The first step is to unbox the phone and assess the items and equipment included in the delivery. Make sure to read through the manual so you can familiarize yourself with the equipment and the basic functions.

- The items supplied with the device and any available accessories may vary depending on the region or service provider.
- The items supplied are designed for this device and might not be compatible with other devices.
- Appearances and specifications are subject to change without prior notice.
- You can purchase additional accessories from your local Doro retailer.
- Make sure accessories are compatible with the device before purchase.
- Only use batteries, chargers and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and warranty.
- Availability of accessories is subject to change depending on manufacturing availability. For more information about available accessories, refer to the Doro website.

Insert SIM card, memory card and battery

The SIM and memory card holder's are located inside the battery compartment.


Tipp: Take care not to scratch the metallic contacts on the cards when inserting them into the card holders.

Remove the battery cover

WICHTIG


Turn off the phone and disconnect the charger before removing the battery cover.

Be careful not to damage your fingernails when you remove the battery cover. Do not bend or twist the battery cover excessively as it may get damaged.

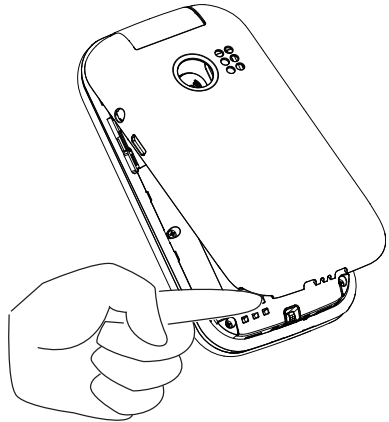

Insert the SIM and memory cards

Insert the nano-SIM (4FF) card by gently sliding it into the SIM card slot. Make sure that the SIM card's contacts are facing inwards and that the cut off corner is as shown. You can insert a second SIM card so you can have two phone numbers or service providers on a single device. Data transfer speeds may be slower, in some cases, if two SIM cards are inserted in the device than when one SIM card is inserted.

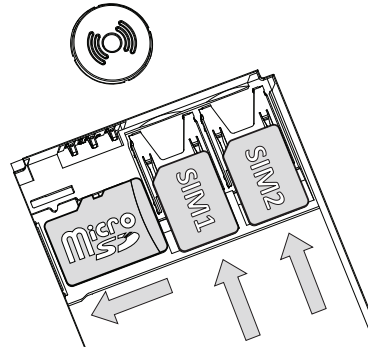

Take care not to scratch or bend the contacts on the SIM card. Should you need, but have problem to remove/replace the SIM card, use adhesive tape on the exposed part of the SIM card to pull it out.

You may optionally install a memory card in the phone to increase the storage space of your phone to be able to store more files, pictures, videos etc. Make sure that the memory card's contacts are facing downwards, as shown above. Compatible card type: MicroSD, MicroSDHC, MicroSDXC. Incompatible cards may damage the card itself, the device and corrupt data stored on the card.

See *Speicher*, S.62 for additional info.

WICHTIG


This device accepts **nano-SIM card** or **4FF**. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

Use only compatible memory cards with this device. Compatible card types include **microSD**, **microSDHC**.

Incompatible memory cards may damage the card itself, the device and corrupt any data stored on the card.

Insert the battery

Insert the battery by sliding it into the battery compartment.
Replace the back cover.

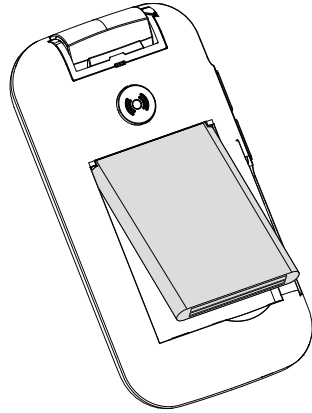

Charge the phone

While it's possible that your phone will already come with enough power to be turned on right out of the box, we recommend charging the device fully before using it.



VORSICHT

Only use batteries, chargers and accessories that have been approved for use with this particular model. Using unapproved accessories may be dangerous and may invalidate the phone's type approval and warranty.

When the battery is running low,  is displayed and a warning signal is heard. When the charger is connected to the phone,  is displayed briefly, and  when it is disconnected. The battery charge indicator is animated while charging. It takes approximately 3 hours to fully charge the battery. If the phone is turned off when the charger is connected to the phone only the battery charge indicator will be shown on the display. When charging is completed,  is displayed on the screen.

Use a wall power outlet to charge

1. Connect the small head of the USB charging cable to the charging socket  on the phone.
2. Plug the power adapter to a wall power outlet.

Use a charging cradle to charge (optional)

1. Connect the small head of the USB charging cable to the cradle. Place the phone in the cradle.
2. Plug the power adapter to a wall power outlet.

Use a computer or other power source to charge

1. Connect the small head of the USB charging cable to the phone.
2. Plug the large head of standard USB cable to the computer's USB port.

Hinweis! Generally charging is quicker if plugged directly into the wall.

If the phone is turned off during charging, the phone is still charging. Press



to view charging status.

Save energy

When the battery is fully charged, disconnect the charger from the device and unplug the charger from the wall outlet. To save power, the screen turns off after a while. Press any button to wake the screen up. Full battery capacity will not be reached until the battery has been charged 3–4 times. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use. During extended operation, the device may feel warm. In most cases, this is normal. To save battery and energy even further, see *Energiesparmodus*, S.59.

Turn the phone on and off

1. Press and hold  on the phone to turn it on or off. Press **OK** to **Ausschalten**.
2. If the SIM card is valid but protected with a PIN code (Personal Identification Number), **SIM-PIN eingeben** is displayed. Enter the PIN code and press . Delete entries with .

Attempts shows the number of PIN attempts left. When no more attempts remain, the SIM card must then be unlocked with the PUK code (Personal Unblocking Key).

Unlock with PUK code

1. Enter the PUK code and press . Delete entries with .
2. Enter a new PIN code and press .

3. Re-enter the new PIN code and confirm with .

Hinweis! If PIN and PUK codes were not provided with your SIM card, please contact your service provider. If you enter the wrong PUK code more than 10 times the SIM card gets permanently locked.

Get to know your phone

Assistive functions

Use the symbols below to guide you through supporting sections in the manual.



Seeing



Handling



Hearing



Safety

Einrichtungsassistent

When starting the device for the first time, a Einrichtungsassistent will be initiated to set some basic settings.

1. Select the wanted language, the standard language is selected by the origin of the SIM card, and press .
2. You will be provided a tutorial about the navigation of the phone. Press **Weiter**/ to step through the tutorial. Press **Überspringen** to skip pass the tutorial. Press  to step backward.
3. Select:
 - **Standard-Setup** to use the phone with the standard settings.
 - **Manuell einrichten** to customise the settings.
You can choose to adjust one or more settings by selecting and pressing .
Select **Fertig** when done.
4. You will be provided a short tutorial of the phone's menu. Press **Weiter**/ to step through the tutorial.

Tipp: Launch the start-up wizard at any time. From standby mode, press



Einstellungen



Einrichtungsassistent.

Phone indicators

Lights on the phone lid:

- Green light when you have a new message or a missed call.
- Red light when the battery is running low and during charging.

Notification panel and status bar

At the top of the main screen to the left you can see if there are any notifications. The number will show how many notifications you have.

- To view the notifications, press the options/notifications button .
- Press **Alle löschen** to remove all notifications.

Hinweis! You do not delete the item itself, just the notification.

WICHTIG

When a new system software is available, a notification message is sent. Select to start downloading. The download time may vary depending on Internet connection. We recommend that you always update your device to the latest software version to get optimal performance and the latest enhancements. During an update your phone will be temporarily out of service, even for emergency calls. All contacts, photos, settings, etc. will remain safely stored in the phone, but we recommend you to regularly backup your phone. Do not interrupt the update process. See *System*, S.65 for more information. You need to have a working data connection to be able to perform the update with the firmware over-the-air (FOTA) service. See *Mobilfunknetz*, S.49 or *WLAN*, S.47 on how to activate a data connection.

At the top of the main screen to the right you can see the status symbols, such as network signal strength, battery level, Bluetooth activity and more.

Descriptions in this document

Descriptions in this document are based on your phone's setup at the time of purchase. Instructions normally start from the start screen. Press  to reach the start screen. Some descriptions are simplified.

The arrow () indicates next action in step-by-step instructions.

Basic phone operations

Call :

- Dial a number or answer incoming call.
- Enter the call log.

End call/Power on and off :

- End calls or return to the start screen.
- Long press to power on or off.

Assistance :

Press to make an assistance call.

Back :

Return to the previous screen.

Clear :

Press to clear the previous character.

Camera :


Press to initiate the camera app and take a picture or a video.

Options :

The options button have multiple functions. In idle mode it will display eventual notifications. In different menus and features it will display available options for that feature. Try to always press this button to explore more options.

Navigation keys

- (A) Use the **Four-way navigation keys** to navigate up, down, left and right.
- (B) Use the  to open the  **Menü** and to confirm actions.

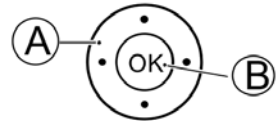

Standby (idle mode)

When the phone is ready to use, and you have not keyed in any characters, the phone is in standby.

- Press  to return to standby mode.
- Press the options button  to access the notices, if there's any.

Tipp: You can always press  to return to standby.

Volume keys + / -

- During a call the volume keys adjusts the call volume.
- From standby you can set your device to silent mode: press and hold  until  appears.

See also *Volume* , S.61 for more information.

Hinweis! If you use a hearing aid or have hearing difficulties when using the telephone in a noisy environment, you can adjust the phone's audio settings, see *Audioeinrichtung* , S.61.

To enable and disable features and functions



enabled functions.



disabled functions.

Headset

When a headset is connected, the internal microphone in the phone is automatically disconnected. If available, use the answer key on the headset to answer and end calls.



VORSICHT

Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset.

Navigate your phone

Meet „EVA” – ”Enkel, Vänlig och för Alla” (Swedish) (Easy, friendly and for everyone)

Doro aim to take simplicity even further thanks to our intuitive, action-based interface, EVA. EVA makes using a phone even easier. It's like having someone who understands your needs always by your side. Users never need to look around for things they can't find. EVA simply gives them a few clear choices, and then does what the user wishes based on their response. She's also the perfect companion when starting up the phone for the first time, guiding the user every step of the way. And because she is designed by Doro, EVA makes the technology fun, available and easy for everyone.

Doro's unique telephone menu is action-based, that makes navigating the phone brilliantly simple. It allows you to navigate your phone, by just asking yourself, „**What do I want to do?**”.

For example, if you want to send a message to a contact that is available in your contact book.

1. Tap the **Senden** button. You are asked, **Was wird gesendet?** and responds by selecting **Eine Nachricht**.

2. You are asked **An wen?** and responds by selecting **Einen Kontakt**.
3. Select or search for a contact.
4. Compose your message.
5. Press  to access more options.
6. When done, select and press .

Anrufen

To call someone.



Eine Nummer to enter a phone number, see *Calls*, S.16.



Einen Kontakt to make a call from your contact book. For more info see *Kontakte*, S.23.



Ein WhatsApp-Kontakt to make a call to a WhatsApp contact . For more info see *WhatsApp*, S.35.



Einen kürzlichen Kontakt to call from the call history, see *Call history*, S.18



Meine Voicemail to call your voicemail, see also *Set Mailbox*, S.22.

Anzeigen

To see and view content reach many of the most frequently used apps.



Meine Nachrichten to view messages (SMS/MMS).



Meine Kontakte to see and handle your ICE card (In Case of Emergency), see *Kontakte*, S.23.



Meine WhatsApp-Nachrichten to view WhatsApp messages. For more info see *WhatsApp*, S.35.



Meine Galerie to view your stored pictures and videos, see *Galerie*, S.38.



Meinen Anrufverlauf to view your call history, see *Call history*, S.18.



Meinen Wecker to view your alarms or add a new one, see *Wecker*, S.37.



Meine Organisator



Rechner to make some calculations, see *Rechner*, S.44.



Kalender to view the calendar and your events, see *Kalender*, S.45.



Dateimanager to view stored videos, see *Dateimanager*, S.45.



Notizen to view your notes, see *Notizen*, S.46.



Meine E-mails to view emails, create or add an email account, see *E-Mail*, S.41



Senden

To send and share messages, email, pictures and more from your phone.



Eine Nachricht to send a text (SMS), picture (MMS) message, see *Create and send text message (SMS)/picture message (MMS)*, S.31.



Eine WhatsApp-Nachricht to send a WhatsApp message. For more info see *WhatsApp*, S.35.



Eine E-Mail to send an email, see *Create and send e-mail*, S.41.



Ein Bild to send a picture or video. To view stored images and videos, see *Galerie*, S.38



Eine Aufnahmen to record and send a recorded sound, see *Rekorder*, S.40.

Hinweis! The action-based navigation telephone menu can be turned off. See *Navigationshilfen*, S.60.

Press  **Menü** to reach all the apps.

Sharing content

Share content by using various sharing options.

In many places of the phone menu you can press  or  for more options.

Press **Teilen** to share a selected item:

- **SMS/MMS** to send via a message. See *Create and send text message (SMS)/picture message (MMS)*, S.31.
- **Bluetooth** to send to a Bluetooth device, see *Bluetooth®*, S.56.
- **E-Mail** to send via e-mail, see *Create and send e-mail*, S.41.
- **WhatsApp** to send via WhatsApp, see *WhatsApp*, S.35.

Press **Nur diesmal** to use this app once or **Immer** to always use this when sharing.

Hinweis! If **Immer** is selected, see *App-Einstell. zurücksetzen*, S.67 on how to reset this and again get the option to select app.

Enter text

Enter text manually

Select character

- Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character. Press  to erase characters.

Special characters

1. Press  for a list of special characters.
2. Select the desired character using the **Four-way navigation keys** and press  to enter it.

Move the cursor within text

- Use the **Four-way navigation keys** to move the cursor within the text

Upper case, lower case, numerals and predictive text

- Press  to choose between upper case, lower case, numerals and predictive text. Predictive text needs to be activated before use, see *Texterkennung*, S.66.

Change writing language

- Press and hold  to change writing language.

Enter text with predictive text

In some languages you can use predictive text input method which uses a dictionary to suggest words.

- Press each key **once**, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed.

Example

1. Press **3**, **7**, **3**, **3** to write the word "Fred". Complete the word before looking at the suggestions.
2. Use the **Four-way navigation keys** to move the cursor to view the suggested words.
3. Press **OK** and continue with the next word.
Alternatively, press **0** to continue with the next word.
4. If none of the suggested words are correct, use manual input mode.

Hinweis! See *Texterkennung*, S.66 for more information.

Input mode

- Press **#** to change input mode. The icon on the top left of the display indicates the input mode.

abc KT9	Predictive text
abc	lower case
Abc	Sentence case
ABC	UPPER CASE
123	Numerals

Hearing aid compatible

This phone is hearing aid compatible. Hearing aid compatibility is not a guarantee that a specific hearing aid will work with a specific phone. Mobile phones contain radio transmitters that may interfere with hearing aid performance. This phone has been tested for use with hearing aids, for some of the wireless technologies that it uses, but there may be some newer wireless technologies that have not been tested yet for use with hearing aids. To ensure that a specific hearing aid works well with this phone, test them together before making a purchase.

The standard for hearing aid compatibility contains two types of ratings:

- **M:** To use your hearing aid in this mode, make sure that your hearing aid is set to "M-mode" or acoustic coupling mode, and position the phones receiver near the hearing aid's built-in microphone. For the best results, try using the phone in different positions relative to your

hearing aid—for example, placing the receiver slightly above the ear may result in better performance for hearing aids with microphones positioned behind the ear.

- **T:** To use your hearing aid in this mode, make sure that your hearing aid is set to "T-mode" or telecoil coupling mode (not all hearing aids have this mode). For the best results, try using the phone in different positions relative to your hearing aid—for example, placing the receiver slightly below or in front of the ear may result in better performance.

See also *Audioeinrichtung* , S.61 on how you can adjust the audio settings.

Connect the phone to a computer

Connect the phone to a computer and start transferring pictures, music and other file types. All you have to do is connect a USB cable between the phone and computer. From your computer's file explorer, you can drag and drop content between your phone and the computer.

Hinweis! You might not be able to transfer some copyright protected material.

USB storage allows a computer connected using a USB-cable to access files on the phone, but this can be disabled. See *USB connection*, S.58.

Enabling USB storage allows a computer or device connected using a USB-cable to access files on this phone.

Drag and drop content between phone and a computer

1. Connect your phone to a computer using a USB cable.
2. Wait until the phone or memory card appears as external disks in the file explorer.
3. Drag and drop selected files between the phone and the computer.

Hinweis! You can transfer files using a USB cable on most devices and operating systems supporting a USB Mass Storage interface.

Disconnect the USB cable safely

1. Make sure to enable the hardware to be safely removed.
2. Disconnect the USB cable.

Hinweis! Computer instructions may vary depending on your operating system. See the documentation of your computer's operating system for more information.

Calls

Make a call

1. Enter the phone number including the area code. Delete with .
2. Press  to make a call.

Hinweis! If you have more than one SIM card installed, you will be asked what SIM card to use. To set the preferred SIM card, see *Dual-SIM-Einstellungen*, S.56.

3. Press  to end the call.

Tip: For international calls, always use + before the country code for best operation. Press and hold  for the international prefix +.

Call from the phonebook

1. Press  **Anrufen** → **Einen Kontakt**.
2. Use / to scroll through the phonebook, or to do a quick search by pressing the key corresponding to the first letter of the entry.
3. Press  to dial the selected entry. If needed, select the number.

Alternatively, press  to dial.

4. Press  to cancel the call.

Receive a call

1. Open the phone and press  to answer.

Press  to reject the call (busy signal).

To not answer an incoming call by opening the phone, see *Antwortmodus*, S.22.

Tip: Press **+** or **–** to temporarily switch off the ringsignal without opening the phone.

2. Press  to end the call.

Call information

During a call, the outgoing or incoming phone number and the elapsed call time is displayed. If the identity of the caller is withheld or unknown, **Privat** or **Unbekannt** are displayed.

Call options

Mute

Select and press  to disable the microphone. Press  to re-enable the microphone.

Loudspeaker

Select and press  to activate loudspeaker mode. Speak clearly into the phone microphone at a maximum distance of 1 m. Press  to deactivate loudspeaker mode.

Options

During a call the options button () give access to additional functions.

- **Hinzufügen** to call another number. When the second party is connected you can **Zusammenf.** and **Wechseln**.
- **Verwalten** is available during a conference call.
- **Halten/Anruf wieder aufnehmen** to hold/retrieve the current call.

Hinweis! For settings related to calling, see *Call settings*, S.18

SOS calls

As long as the phone is switched on, it is possible to place an SOS call by entering the main local emergency number for your present location followed by .

Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

Call history

Received, missed and dialed calls are saved in a combined call log.

1. Press .
Alternatively, press  **Anzeigen** → **Meinen Anrufverlauf**.
2. Calls are displayed as follows depending on call type:

	Incoming call
	Outgoing call
	Missed call
3. Select wanted entry and press  to dial, or...
Select an entry and press  to:
 - **Neuen Kontakt erstellen** to save the number for a new contact.
 - **Zu Kontakt hinzufügen** to add the number for an existing contact.
 - **SMS senden** to send a text message.
 - **Nummer blockieren/Blockierung der Nummer aufheben** to block/unblock the number. You will not receive calls or messages from a blocked number. See *Anrufblockierung*, S.22.
 - **Anrufrdetails** to show details for the selected call.
 - **Protokoll löschen** to delete the selected entry in the call log.

Press  to:

- **Einstellungen** for call settings. See *Call settings*, S.18..
- **Anrufliste löschen** to delete all entries in the call log.

Call settings

You can access most of the call settings via  **Menü** → **Telefon** → 
→ **Einstellungen**.

Anzeigeoptionen

Set in what order you sort and display your contacts.

Sortieren nach

Set in what order you sort your contacts.

1. Press  **Menü** → **Telefon** → **...** → **Einstellungen** → **Anzeigeoptionen** → **Sortieren nach**:
2. Select **Vorname** or **Nachname**.

Namensformat

Set how your contacts are displayed.

1. Press  **Menü** → **Telefon** → **...** → **Einstellungen** → **Anzeigeoptionen** → **Namensformat**:
2. Select **Vorname zuerst** or **Nachname zuerst**.

Anrufe

Hinweis! You need to select the SIM card you want to handle.

Anrufbegrenzung (FDN)

You can limit calls to certain numbers saved on the SIM card. The list of allowed numbers is protected by your PIN2-code.

Hinweis! The PIN2-code is needed to apply fixed dial. Contact your service provider to get the PIN2-code.

1. Press  **Menü** → **Telefon** → **...** → **Einstellungen** → **Anrufe** → select SIM card → **Anrufbegrenzung**:
 - **Rufnummernbeschränkung aktivieren** → enter PIN2 to enable the feature.
 - **PIN2 ändern** to change the PIN2 code.
 - **Zugelassene Rufnummern** → **...** to add and enter the first allowed number.
You can add more numbers or edit or delete existing.

Hinweis! You can save parts of phone numbers. For example, if you save 01234, allows calls to all numbers starting with 01234. It is possible to place an SOS call by entering the main local emergency number followed

by  even when fixed dial is activated. When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card. You are not able to send any text messages either.

Rufweiterleitung

You can divert calls to an answering service or to another phone number. Set up which calls should be diverted. Select a condition, enter number and then press **Aktivieren**. You can also select **Deaktivieren** or **Aktualisieren**.

- Press  **Menü** → **Telefon** → **...** → **Einstellungen** → **Anrufe** → select SIM card → **Rufweiterleitung**:
 - **Immer weiterleiten** to divert all voice calls.
 - **Wenn besetzt** to divert incoming calls if the line is busy.
 - **Wenn keine Antwort** to divert incoming calls if unanswered.
 - **Wenn nicht erreichbar** to divert incoming calls if the phone is turned off or out of range.

Anrufsperr

Your phone can be restricted to disallow certain types of calls. Select a condition and select  or .

Hinweis! A password is needed to apply call barring. Contact your service provider to get the password.

- Press  **Menü** → **Telefon** → **...** → **Einstellungen** → **Anrufe** → select SIM card → **Anrufsperr**.
- Mark the type of calls that you want to restrict:
 - **Alle ausgehenden Anrufe** to answer incoming calls but not calling.
 - **Internationale ausgehende Anrufe** to block calls to international numbers.

- **Internationale ausgehende Anrufe mit Ausnahme von Heim-PLMN** to block international calls except to the country associated with the SIM card.
 - **Alle eingehenden Anrufe** to call but not to receive incoming calls.
 - **Eingehende Anrufe während Roaming** to block incoming calls while roaming (operating in other networks).
3. Press **Alles abbrechen** to cancel all call barring (password needed). Press **OK** to confirm.
 4. Press **Kennwort der Sperre ändern** to change the barring password.
Hinweis! Changing the password might not be allowed by your service provider.

Zusätzliche Einstellungen

Anrufer-ID

Display or hide your phone number on the recipient's phone when you call.

Press  **Menü** → **Telefon** → **•••** → **Einstellungen** → **Anrufe** → select SIM card → **Zusätzliche Einstellungen** → **Anrufer-ID**:

- **Netzwerk-Standard-einstellung** to use default setting by the network.
- **Rufnummer unterdrücken** to never show your number.
- **Rufnummer anzeigen** to always show your number.

Anklopfen

You can handle more than one call at a time, put the current call on hold and answer the incoming call. When activated, an alert tone is heard if there is an incoming call while talking.

- During a call, press  to answer the second call. The phone will automatically hold the first call. For more call handling, see *Call options*, S.17.

Activate call waiting

1. Press  **Menü** → **Telefon** → **•••** → **Einstellungen** → **Anrufe** → select SIM card → **Zusätzliche Einstellungen**.
2. Set **Anklopfen** switch to  to enable call waiting.

Tipp: Set switch to  to disable call waiting.

Anrufblockierung

You can compile a blacklist of phone numbers so that any phone number on your blacklist is blocked when calling or texting you.

Activate the function and add blacklist numbers

1. Press  **Menü** → **Telefon** → **...** → **Einstellungen** → **Anrufblockierung**.
2. Press **Nummer hinzufügen** to add a number to list of blocked numbers.
3. Press **Blockieren** to confirm.
Press **Blockierung aufheben** to remove .

Tipp: To remove an existing entry, select it and press **Blockierung aufheben**.

You can add numbers directly from your call log, just press **...** → **Nummer blockieren**. See *Call history*, S.18

Set Mailbox

If your subscription includes an answering service, callers can leave a voice-mail message when you are unable to answer a call. **Mailbox** is a network service and you may need to subscribe to it first. For more information and for the voicemail number, contact your service provider.

1. Press  **Menü** → **Telefon** → **...** → **Einstellungen** → **Mailbox** → select SIM card (if applicable) → **Erweiterte Einstellungen** → **Einrichtung** → **Mailboxnummer**.
2. Enter number and press **OK** to confirm.

Call voicemail

- Press and hold shortcut button **1**.

Antwortmodus

1. Press  **Menü** → **Einstellungen** → **Anrufe** → **Antwortmodus** → **Zum Antworten öffnen**:
2. Enable the switch  to answer incoming calls by opening the phone.

Kontakte

Add contact

1. Press  **Menü** → **Kontakte** → **Neuen Kontakt erstellen** and select where to save it.
2. Enter **Vorname**, **Nachname**, **Telefon** and the type of phone number **E-Mail** and the type of email for the contact.
3. Press  for more options.
4. Press **Speichern**.

Manage phonebook contacts

1. Press  **Menü** → **Kontakte**.
2. Select a contact and press , then press :
 - **Zu Favoriten hinzufügen** to set the entry as one of the first listed contacts in the phonebook.
 - **Anrufen** to call the contact.
 - **Bearbeiten** to edit the contact. When done, press **Speichern**.
 - **Nachricht** to create a message. See *Create and send text message (SMS)/picture message (MMS)*, S.31.
 - **Löschen** to delete the selected contact. Press **Löschen** again to confirm.
 - **Teilen** to send the selected contact as a vCard via selected method.
 - **Klingeltonwahl** to send the selected contact as a vCard via selected method.

ICE (In Case of Emergency)

First responders can access additional information such as medical information from the victim's phone  **ICE** in case of emergency. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.

1. Press  **Menü** → **Kontakte** → **Notfall**.
2. Press  → **Bearbeiten** to add or edit information in each entry.

- **Name:** enter your name.
- **Geburtsdatum:** enter your date of birth.
- **Größe:** enter your height.
- **Gewicht:** enter your weight.
- **Adresse:** enter your home address.
- **Sprache:** enter your preferred language.
- **Versicherung:** enter your insurance provider and policy number.
- **Kontakt 1:** add contact from phonebook.
- **Kontakt 2:** add contact from phonebook.
- **Arzt** add contact from phonebook.
- **Krankheit:** enter any medical conditions or medical devices (e.g. diabetic, pacemaker).
- **Allergien:** enter any known allergies (e.g. penicillin, bee stings).
- **Blutgruppe:** enter your blood type.
- **Impfungen:** enter any relevant vaccination.
- **Medikamente:** enter any medication that you are treated with.
- **Sonstige Infos:** enter other information (e.g. organ donor, living will, consent to treat).

3. When done, press  **→ Speichern.**

Phonebook settings

Add numbers

1. Press  **Menü → Kontakte.**

2. Press  :

- **Meine Daten** to enter your personal contact details, such as **Vorname**, **Nachname**, **Telefon** and **E-Mail**.
- **Standardkonto für neue Kontakte** to set where you save new contacts by default.
- **Sortieren nach** to set in what order you sort and display your contacts. Select **Vorname** or **Nachname**
- **Importieren** to copy contacts from/to phone, SIM card and shared memory.
- **Exportieren** to export contacts from the phone to the shared memory.

- **Blockierte Nummern** handle the blacklist of phone numbers so that any phone number on your blacklist is blocked when calling or texting you.
 - Press **Nummer hinzufügen** to add a number to list of blocked numbers.
 - Press **Blockieren** to confirm.
Press **Blockierung aufheben** to remove .
- **Kontakt in Direktwahl einstellen** to set speed dial numbers to **0** and **2–9**. Select the wanted speed dial number and add/remove/remove contacts.
Press and hold the corresponding key to speed dial.

Assistance button

The assistance button can now be used in two different modes, the normal assistance mode or let the MyDoro service handle it. With MyDoro setup, relatives/helpers can receive assistance alarm via the smartphone app **MyDoro**.

In some markets you can also increase personal safety by adding the service Response by Doro, First the alarm contacts the relatives, and if no relative is able to answer it is automatically sent to one of our alarm centres, where there is staff on duty 24/7. The service is available on selected Doro phones. However, you as relatives can use any iOS or Android smartphone.

The assistance button allows easy access to contact your predefined help numbers should you need help. Make sure that the assistance function is activated before use, enter recipients in the numbers list and edit the text message.

Setting the mode for the Assistance button

1. Press  **Menü** → **Einstellungen** → **Notruf** → **Modus**:
 - **Notruf** to use the traditional mode for the assistance button. To set up the feature, follow the descriptions in *Assistance settings*, S.26.
 - **MyDoro** to use the MyDoro mode for the assistance button. To set up the service, follow the descriptions in *MyDoro*, S.28.

Assistance settings

Make an assistance call



VORSICHT

When an emergency call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

1. When help is needed, press and hold the assistance button for 3 seconds, or press it twice within 1 second.
The assistance call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pressing .
2. An assistance text message (SMS) is sent to all recipients.
3. A positioning text message (SMS) is sent to all recipients.
4. The first recipient in the list is called. If the call is not answered within 25 seconds, the next number is called. Calling is repeated 3 times or until the call is answered, or until  is pressed.

Hinweis! Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number.

Aktivierung

Activate the assistance function using the assistance button.

1. Press  **Menü** → **Einstellungen** → **Notruf** → **Aktivierung**:
 - **An** to press and hold the button for approximately 3 seconds, or press it twice within 1 second.
 - **An (3)** to press the button 3 times within 1 second.
 - **Aus** to disable the assistance button.

Nummernliste

Add numbers to the list that is called when the assistance button is pressed.

WICHTIG

Always inform recipients in the numbers list that they are listed as your assistance contacts.

1. Press  **Menü** → **Einstellungen** → **Notruf** → **Nummernliste**.
2. Select **Leer** →  → **Handbuch** to add names/numbers manually. Alternatively, press **Telefonbuch** to add a contact from the phonebook.
3. Press  to confirm.

Tipp: To edit or remove an existing entry, select it and make the change or press **Löschen**.

Activate text messages (SMS)

A text message can be sent to the contacts in the numbers list when the assistance button is pressed.

1. Press  **Menü** → **Einstellungen** → **Notruf** → **SMS**.
2. Set **SMS** switch to  to activate the sending of the assistance message.

Hinweis! It's helpful for the recipient of the assistance message if you include that it's an assistance alert and that it's from you. Always inform recipients in the numbers list that they are listed as your assistance contacts.

Example: "This is an emergency message from John Smith."

Create assistance message

1. Press  **Menü** → **Einstellungen** → **Notruf** → **SMS** → **Nachricht**.
2. Press  → **Bearbeiten** and write the message.
3. Press  → **Speichern** to save the message.

Hinweis! There is no predefined message, so it's best if you write a personal message. Try to include that the it's an assistance alert and that it's from you.

Position SMS

This function sends a text message with the users position to the recipients in numbers list when an assistance call occurs. The message contains date, time, and the positioning information of the Doro 7030 user. If no position can be found the message contains the latest known position. The positioning message is sent after the editable assistance message, but before the assistance call sequence starts.

1. Press  **Menü** → **Einstellungen** → **Notruf** → **Position SMS**:
2. Set the switch to  to activate the sending of the position message.

Notruf-Signal

Select the notification signal type for the assistance sequence.

1. Press  **Menü** → **Einstellungen** → **Notruf** → **Notruf-Signal**:
 - **Hoch** to use loud signals (default).
 - **Niedrig** to use one low signal.
 - **Lautlos** no sound indication, like a normal call.

MyDoro

WICHTIG

You need an Internet connection to use this service. Contact your service provider for detailed subscription costs before activating.

The Doro 7030 user needs to have a **MyDoro** account to use the service.

To be able to use the MyDoro web portal or the app any helpers also need a **MyDoro** account which they can set up on the web portal. A valid email address is needed to create a **MyDoro** account

Before the assistance button can be used, the user of the Doro 7030 (called **Beschützte Person**) need at least one Helper that has created a MyDoro account and connected with you and by that created a **CareCircle**.

 **MyDoro** is an app that lets a **helper** manage the settings for Doro's security services, such as the assistance button, Response by Doro and Smart-Care by Doro on your Doro 7030. It also gives the **helper** the opportunity to manage some basic settings on the Doro 7030 of the **Beschützte Person**

user from an app or the web portal www.mydoro.com, like settings for sound, display and contacts.

There can be many helpers, but the first person that sets up an account and invites the **Beschützte Person** user will be the **Administrator** for the **CareCircle**.

The **CareCircle** can be just one helper or a group of helpers that can assist the **Beschützte Person** in various ways.

Hinweis! The Doro 7030 user needs to have a **MyDoro** account to use the service. To be able to use the MyDoro web portal or the app any helpers also need a **MyDoro** account which they can set up on the web portal. A valid email address is needed to create a **MyDoro** account

For the helper(s)

Create a new account on the web site

The first helper that sets up an account and invites the **Beschützte Person** user will be the **Administrator** for the **CareCircle**.

1. Use a web browser to access www.mydoro.com.
2. Click **Konto erstellen**. Follow the on-screen instructions to complete the account setup. You will need to enter a valid email address together with some other personal details.

Hinweis! You should never use the same password for multiple web sites/services.

3. When done, you will receive an email with a link to verify your email address and activate the account. Click on the provided link.
4. Login to the service and start using it by inviting the **Beschützte Person** you want to help, see *Beschützte Person hinzufügen.*, S.30.

Hinweis! To help the Doro 7030 user remotely from their phone the helpers can also install the  **MyDoro** application from Play store or App store.

The My Doro Manager helper application that is available through Play Store or App store is for older phone models and is **NOT** compatible with Doro 7030.

Beschützte Person hinzufügen.

Get the service running by inviting the **Beschützte Person** user you want to help. Always inform the **Beschützte Person** user that you will start the service as it will require actions from the **Beschützte Person** user also.

1. Login to the service and click **Beschützte Person hinzufügen**.
2. Fill the email address for the **Beschützte Person** user and click **Weiter**.
3. You can decide to fill in the details or let the **Beschützte Person** handle it and click **Weiter**.
4. Click **Bestätigen** when done. An invitation email is now sent to the **Beschützte Person**. See *hat die Einladung akzeptiert on the Doro 7030*, S.30 to finalise and close the **CareCircle**.

Hinweis! Above can also be done using the app, which can be downloaded via App Store or Google™ Play Store.

For the senior

hat die Einladung akzeptiert on the Doro 7030

Hinweis! These instructions can also be done with a computer. It might even be easier to see on a big screen. The two final steps needs to be done on the phone.

1. Open the email received from **MyDoro** and tap **hat die Einladung akzeptiert**.
2. Fill in the account details if required. Otherwise just enter the **Kennwort** and **Kennwort bestätigen** you want to use for the service.

Hinweis! You should never use the same password for multiple web sites/services.

You can now close the invitation screen.

3. Press  **Menü** → **MyDoro** to open it
4. Login to the service.

Messaging

Create and send text message (SMS)/picture message (MMS)

A text message (SMS) is a short text message that can be sent to other mobile phones. A picture message can contain text and media objects such as pictures, sound recordings and video. The settings for messaging are supplied by your service provider and can be sent to you automatically via text message.

1. Press  **Menü** → **SMS/MMS** → **Neues Gespräch**.
2. Press  and select a recipient from your contacts.
Alternatively, enter number to add recipient manually.

Hinweis! If you choose to add multiple recipients, you will be charged for each recipient.

3. Go to the message field and write your message, see *Enter text* , S.13.
4. Press  for more options:
 - **Senden** to send the message
 - **Anhängen** to select an attachment from:
 - **Bilder** to add a picture from your library.
 - **Bild aufnehmen** to use the camera to take a picture.

Hinweis! If you add more than one picture, the following pictures are increasingly compressed by the phone (scaled down). This to allow you to send more pictures in one message. To keep best picture quality, send only one picture per message.

- **Videos** to add videos from your library.
- **Video aufnehmen** to use the camera to capture a video.
- **Audio** to add audio from your library.
- **Audio aufnehmen** to record sound.
- **Diashow** to make a slideshow.
- **Kontakt** to add a contact from your phonebook.
- **Betreff** to enter a subject.

- **Gespräch löschen** to delete all messages in the selected conversation.

5. When done, press  to send the message.

Read and handle messages

Messages are grouped into message threads by contact. A thread can contain both text and multimedia messages.

1. Press  **Menü** → **SMS/MMS**.
2. Select a message thread and press . Press  for the same options as described above.
3. Select an individual message and press  for more options:
 - **Detail** to view the message details.
 - **Kopieren** to copy the message.
 - **Weiterleiten** to forward the message. Edit the message (if desired) and enter the recipient, then press  to send.
 - **Löschen** to delete that individual message.
 - **Anhang speichern** to save any attachment.
 - **Add X to Contacts** to save the number to a new or an existing contact.

Messaging options

Suchen

1. Press  **Menü** → **SMS/MMS** →  → **Suchen**.
2. Enter a search phrase and press . The search phrase can be a contact or a message text.

Einstellungen

Textmitteilung (SMS)

Übermittlungsbericht anfordern

You can select if you want the phone to notify you when your text message has reached the recipient.

Hinweis! Contact your service provider for detailed subscription costs before activating.

1. Press  **Menü** → **SMS/MMS** → **...** → **Einstellungen** → **Textmitteilung (SMS)**.

2. Check **Übermittlungsbericht anfordern** with  to enable.

Nachrichten auf SIM-Karte

1. Press  **Menü** → **SMS/MMS** → **...** → **Einstellungen** → **Textmitteilung (SMS)** → **Nachrichten auf SIM-Karte** → select SIM card (if applicable):

2. View or delete messages saved on the SIM card.

SMS-Kundendienst

Text messages requires a message center number, this is normally automatically set on your phone. The number can be obtained from the mobile carrier.

1. Press  **Menü** → **SMS/MMS** → **...** → **Einstellungen** → **Textmitteilung (SMS)** → select SIM card (if applicable) → **SMS-Kundendienst**.

2. Enter the service center number.

3. Press **OK** to confirm.

SMS-Speicherort

Text messages requires a message center number, this is normally automatically set on your phone. The number can be obtained from the mobile carrier.

1. Press  **Menü** → **SMS/MMS** → **...** → **Einstellungen** → **Textmitteilung (SMS)** → select SIM card (if applicable) → **SMS-Speicherort**.

2. Select to save messages on **Telefon** or **SIM-Karte**.

Eingabemethode

With Input method you can select to write your text messages with special, distinguishing language specific characters (Unicode) or to write with more simple characters. **Unicode** or **Automatisch** allows special characters. Special characters takes up more space and the size of each message might be reduced to 70 characters. **GSM-Alphabet** converts any special character to plain alphabet characters, e.g. **Î** becomes **I**. Each message can contain 160 characters.

1. Press  **Menü** → **SMS/MMS** → **...** → **Einstellungen** → **Textmitteilung (SMS)** → **Eingabemethode**.
 2. Select the input method:
 - **GSM-Alphabet** to convert any special character to plain alphabet characters.
 - **Unicode** to allow special characters, but each message will be limited to 70 characters.
 - **Automatisch** (default) to allow special characters if needed.

Multimedia-Mitteilung (MMS)

Check/unmark the functions as wanted.

1. Press  **Menü** → **SMS/MMS** → **...** → **Einstellungen** → **Multimedia-Mitteilung (MMS)**:
 - **SMS/MMS an Gruppe senden** mark to allow to send multimedia messages (MMS) to multiple recipients.

Hinweis! If you choose to add multiple recipients, you will be charged for each recipient.
 - **Übermittlungsbericht anfordern** mark to be notified when your multimedia message has reached the recipient.
 - **Lesebestätigungsbericht anfordern** mark to be notified when your multimedia message has been read by the recipient.
 - **Lesebericht senden** to automatically send a read report to the sender.
 - **Automatisch abrufen** mark to automatically retrieve pictures, but only in home network.
 - **Autom. Roaming-Abruf** mark to automatically retrieve pictures even when you are roaming.

WICHTIG

To receive and send picture messages (MMS) while roaming can be costly. Contact your service provider for data roaming rates before you use data roaming.

Allgemein

Zell-Broadcast

You can receive messages on various topics from your service provider, such as weather or traffic conditions in a particular region. For available channels and relevant channel settings, contact your service provider. Cell broadcast messages cannot be received when the device is roaming.

1. Press  **Menü** → **SMS/MMS** → **...** → **Einstellungen** → **Allgemein** → **Zell-Broadcast** → select SIM card (if applicable).
2. Check **Zell-Broadcast** to activate the function.
3. Press **SIM-Karten-Cell-Broadcast-Einstellungen** for more options:
 - **Sprache** to select for what languages broadcast messages should be displayed.
 - **Kanal hinzufügen** to add a new channel to receive broadcast messages on. Set name, channel number and mark **Kanal aktivieren** to activate it.
 - **Kanalliste** to review your current list of channels.

Hinweis! Not all operators have the cell broadcast messaging function activated in their network.

WAP-Push-Meldungen

A WAP Push service is basically a specially encoded message which includes a link to a WAP address. On receiving a WAP Push, a WAP-enabled handset will automatically give the user the option to access the WAP content. When enabled, it directly opens the browser to display the WAP content, without user interaction.

1. Press  **Menü** → **SMS/MMS** → **...** → **WAP-Push-Meldungen**:
2. Set the switch to  to activate the receiving of WAP Push messages.

Hinweis! Not all operators have the WAP Push messaging function activated in their network.

WhatsApp

WhatsApp is a cross-platform messaging and Voice over IP (VoIP) service. The application allows you to send and receive text messages, voice calls, video calls, images and other media, documents, and user location. The

service requires you to provide your mobile number. For more information, see www.whatsapp.com.

Facebook

Use Facebook to check you social network. For more information, see www.facebook.com.

Hinweis! It's easier if you first set up an account for Facebook with a computer and then login to the service on the phone.

Kamera

You can take photos, record videos and view your photos and videos using the  camera menu.

To get sharp photos and videos, wipe the lens clean with a dry cloth.

1. Press shortcut button .
Alternatively press  **Menü** →  **Kamera**.
2. Use   to switch between Photo  and Video Mode .
Use   to zoom in and out.

Hinweis! Zoom may reduce picture quality.

3. Press  or the **OK** to take photo or start/stop video recording.
4. Press  for more options:

Hinweis! Some options are only available in photo mode and some in video mode.

Zu Galerie wechseln

- The gallery displays all your taken photos and recorded videos.
See more at *Galerie*, S.38.

Kamera wechseln

- To switch between the front and the back camera.

Blitz

- **AUTO** to automatically use the flash/lamp depending on the surrounding light.

- **Aus** to force the flash/lamp to on regardless of the surrounding light.
- **AN** to force the flash/lamp to off regardless of the surrounding light.

Hinweis! The flash setting made will remain until you change it.

Mikrofon

- Switch the microphone on or off when recording video.

Bildgröße/Videoqualität

- Set the level of quality for the photo/video. The higher, the better quality.

Hinweis! Higher quality will consume more memory capacity.

Speicher

- **Telefon** to save pictures or videos on the phone memory.
- **Speicherkarte** to save pictures or videos on the memory card.

Hinweis! This option is only available when a compatible external memory is inserted in the device. See *Insert SIM card, memory card and battery, S.2*.

5. The photo/video is automatically saved if you don't decide to delete it.

Wecker

You can save up to 5 different alarms.

Hinweis! The alarm will not work if the phone is turned off.

1. Press  **Menü** → **Wecker**.
2. Press **Hinzufügen** for a new alarm.
3. Select and set the different options:
 - Set the time for the alarm.
 - Check **Wiederholen** to select what days the alarm should be active.
 - **Name** to set a name for the alarm.

Snooze or turn off

- When the alarm goes off a signal will sound. Press **Anhalten** to turn off the alarm or press **Schlummern** to repeat the alarm after 10 minutes.

Tipp: Select an alarm and press  to edit , enable  or disable  the alarm.

To delete an alarm, select the alarm and press  → **Löschen** to delete the alarm.

Medien

Galerie

View and manage your saved pictures and videos.

- Press  **Menü** → **Medien** → **Galerie**.
- Press  for folder/album options.
 - Zu Kamera wechseln** to open the camera to take more photos/videos.
 - Album auswählen** to select one or more folders/albums. Then press  for more options:
 - Teilen** to share a folder/album. See more at *Sharing content*, S.12.
 - Löschen** to delete the selected folders/albums. Press **OK** to confirm.
- Select a folder and press .
- Press  for picture/video options.
 - Zu Kamera wechseln** to open the camera to take more photos/videos.
 - Diashow** to let the photos/videos be displayed in a slideshow.
 - Bild auswählen** to select one or more item. Then press  for more options:
 - Teilen** to share a folder/album. See more at *Sharing content*, S.12.
 - Löschen** to delete the selected items. Press **OK** to confirm.
 - Nach links drehen** to rotate the selected items left.

- **Nach rechts drehen** to rotate the selected items right.
 - **Gruppieren nach** to group the photos. Select between **Ort** and **Uhrzeit**
5. Select a photo/video and press .
 6. Press  for picture/video options.
 - **Teilen** to share a picture/video. See more at *Sharing content*, S.12.
 - **Umbenennen** to rename. Edit the name and press **Fertig**.
 - **Löschen** to delete the selected items. Press **OK** to confirm.
 - **Nach links drehen** to rotate the selected items left.
 - **Nach rechts drehen** to rotate the selected items right.
 - **Bild festlegen als** to use a photo as **Hintergrund**, **Kontaktbild** or **WhatsApp profile photo**.
 - **Details** to view detailed information about the file, e.g. date, size, type.

Musik

Use **Musik** to play to different music files, such as music or voice recordings.

1. Press  **Menü** → **Medien** → **Musik**.
2. Select an audio file and press  to play it or press  for options.
 - **Läuft gerade** to open and show the audio file playing currently.
 - **Alle wiedergeben** to play all audio files.
 - **Alles zufällig** to shuffle all audio files.

UKW-Radio

The  **UKW-Radio** has a frequency range from 87.5 to 108.0 MHz. To listen to the radio you need to connect a compatible headset that works as antenna.

Turning the radio on/off

1. Connect a headset to the headset socket .
2. Press  **Menü** → **Medien** → **UKW-Radio** → . The radio is on. The tuned frequency is displayed. Press  to switch it off.

Tipp: Press  to return to standby mode. The radio will continue to play. Disconnecting the headset will turn off the radio.

Stations manual search

- Search station with  or .
- Fine tune manually with  or .

Radiosender

1. Press  **Menü** → **Medien** → **UKW-Radio** →  → **Radiosender**.
2. The phone will automatically search for available radio stations.
3. Press  → **Aktualisieren** to again search for available radio stations.
4. Select the station you want to listen to.

Lautsprecher

1. Press  **Menü** → **Medien** → **UKW-Radio** →  → **Lautsprecher**.
2. Use volume keys to adjust the sound volume.
3. To turn off the speaker, press  → **Headset**.

Favoriten

1. Press  **Menü** → **Medien** → **UKW-Radio**.
2. Select a station and press  → **Zu Favoriten hinzufügen**.
3. Press  → **Favoriten** to see your favourites.

Rekorder

Use the sound recorder to record notes and messages.

1. Press  **Menü** → **Medien** → **Rekorder**.
2. Press  to start and  to pause recording. Press  when done.

3. Press **Speichern** to save the recording. Press **Verwerfen** to discard the recording.
4. Press  for the list of recordings and press  to play the recording.

Recorder settings

1. Press  for options:
 - **Sprachqualität** to set the recording quality. Select between **Hoch**, **Mittel** and **Gering**. **Hoch** gives better quality, but consumes more memory space.
 - **Aufnahmemodus** to set the most appropriate recording mode.

Videos

View and manage your saved pictures and videos.

1. Press  **Menü** → **Medien** → **Videos**.
2. Select a video and press  to play it.
3. Press  for video options. Select video and then press  for more options:
 - **Teilen** to share a picture/video. See more at *Sharing content*, S.12.
 - **Löschen** to delete the selected items. Press **OK** to confirm.
 - **Details** to view detailed information about the file, e.g. date, size, type.

E-Mail

Create and send e-mail

WICHTIG

Using data services can be costly. We recommend that you check your data rates with your service provider.

You can send or receive e-mail messages using your an e-mail account. Your phone supports several types of e-mail accounts and allows you to have multiple e-mail accounts set up at one time. See *Add and set up an email account*, S.43 on how to setup your e-mail.

1. Press  **Menü** → **E-Mail**.
2. Press  and then .
3. If you have more than one email account you can select from which account the message should be sent in the **Von** field.
4. Select **An** and enter an e-mail address.
You will be provided suggested recipients from your phonebook and email history.
You can add multiple recipients.
Press  and then  to add **Cc** (carbon copy) or **Bcc** (blind carbon copy) recipients.
5. Select **Betreff** and enter a subject for the message.
6. Select the message field and write your message.
7. Press  for the following options:
 - **Datei anhängen** to select different file types to attach.
 - Press **Senden** to send.

Hinweis! You cannot send a message without a recipient.

 - **Entwurf speichern** to save a message and finalise it later.

Hinweis! To view a draft email message, press .

 - **Verwerfen** to end the ongoing message composing.
 - **Einstellungen** to reach the email settings. See *E-mail settings*, S.43.
 - **Kurzantwort einfügen** to insert one of the predefined message texts.

Manage your emails

1. Press  **Menü** → **E-Mail**.
2. Select an email and press .
3. Press  for the following:
 - **Löschen** to delete the message.
 - **Als gelesen markieren/Als ungelesen markieren** to change the message reading status.
 - **Verschieben nach** to move the message to another folder.

- **Weiterleiten** to forward the message.
- **Antworten** to reply to the recipient in the address field.
- **Allen antworten** to reply to all recipients in the address field. This also includes recipients in the Cc field.
- You can also mark/unmark the star in the top right of the message to change status. Star mark your important messages to find them easier.

Press and hold  on a message for further options.

Manage your Inbox and other email folders

1. Press  **Menü** → **E-Mail**.
2. Press  to view other message folders like Sent, Drafts, etc.
You can also switch between accounts if you have more than one.

E-mail settings

Your phone supports several types of email accounts and allows you to have multiple e-mail accounts set up at one time. Before setting up an e-mail account, make sure you have the username (user ID), password, server name, etc., so you successfully can set up the account. You can use POP3, IMAP or Exchange ActiveSync to access your account.

- Press  **Menü** → **E-Mail**:

The first time you enter the email app you are requested to set up an email account. Enter your **E-Mail-Adresse**, then press **Weiter** and continue from step 3 below.

Add and set up an email account

1. Press  **Menü** → **E-Mail** →  → **Einstellungen**.
2. Press **Konto hinzufügen** and enter the **E-Mail-Adresse** and press **Weiter**.
3. Enter your **Passwort** and press **Weiter** for the following options:
 - **Synchronisierung**: to set how often your phone should check for new e-mails. The more often it's checked the more data is consumed and the quicker the battery is drained, but the quicker you get an email. If you set it to **Nie** it will only check for new messages when you open the e-mail app.

- **Bei neuer E-Mail benachrichtigen**, mark to get notified when new email arrives.
- **E-Mails dieses Kontos synchronisieren**, mark to sync email from this account.
- **Anhänge bei WLAN-Verbindung automatisch herunterladen**, mark to automatically download attachments.

Press **Weiter** when done

4. Your email account is now set up and you should finalise by:
 - **Konto benennen (optional)** to enter how the account should displayed in the phone.
 - **Ihr Name (wird bei ausgehenden E-Mails angezeigt)** to enter how you should be displayed at receivers of your emails.

Press **Weiter** when done.

More settings

Use the settings if you fail to login to your e-mail account or want to do more advanced settings. Contact your e-mail service provider for correct settings.

1. Press  **Menü** → **E-Mail** → **⋮** → **Einstellungen**
2. Select **Allgemeine Einstellungen** for some general settings.
3. Select the wanted account for further settings related to that account.
4. Select **Konto hinzufügen** to add further email accounts.

Hinweis! Some e-mail accounts require you to change security settings before you are able to access the account from your new Doro phone. If you receive a message saying the „authentication failed“. To avoid problems signing in, you may need to log-into your account with a computer and enable a security setting similar to „Allow less secure apps“. The setting might differ depending on e-mail provider.

Organisator

Rechner

The  **Rechner** can perform basic mathematical operations.

1. Press  **Menü** →  **Organisator** → **Rechner**.

2. Enter the first number.
3. Use the navigation key to select an operation (+, -, x, ÷).
4. Enter the next number.
5. Repeat steps 2–4 as necessary.

Kalender

Hinweis! Calendar reminders will not work if the phone is turned off.

Add event

1. Press  **Menü** →  **Organisator** → **Kalender**.
2. Select a date and press  for the following options:
 - **Anzeigen** to view events for day.
 - **Neues Ereignis**, then enter your required information:
 - **Terminname** to enter a event name and other relevant text.
 - Set the date.
 - Set the time.

When done, press  → **Fertig**.

 - **Alles anzeigen** to view events for day.

Hinweis! Select an event and press  → **Bearbeiten** to make changes on an existing event.

Calendar settings

- Press  **Menü** →  **Organisator** → **Kalender** →  → **Einstellungen** → **Allgemeine Einstellungen**:
- **Wochennummer anzeigen** to display week numbers.
 - **Woche beginnt am** to set the day when the week should start.
 - **Standard-Erinnerungszeit** to set how long time in advance of an event that you should be reminded.

Dateimanager

Manage the contents and properties of files. You can open, delete, move, copy and rename files.

1. Press  **Menü** →  **Organisator** → **Dateimanager**.

2. Select **Interner gemeinsamer Speicher** or **SD-Karte** and press .
3. Select a folder, e.g. **DCIM** and press  to open it.
4. Select a file and press  to open the file.
5. Press  to see the available options.

Notizen

1. Press  **Menü** →  **Organisator** → **Notizen**.
2. Press  → **Hinzufügen** for a new note.
3. Enter your note using the keypad, see *Enter text* , S.13.
4. Press  → **Speichern** to save.

Tipp: For more options select an existing note, and press .

Web browser

WICHTIG

This service requires an Internet connection. Using data services can be costly. We recommend that you check your data rates with your service provider.

Use the web browser

1. Press  **Menü** → **Browser**.
2. Navigate to the address field to type a web address.

Alternatively, press  for more options.

Taschenlampe

1. From idle screen, press  **Menü** → **Taschenlampe** to turn it on.
2. Press **Aus/An** to turn it off/on.

Settings

Assistance settings

See *Assistance button*, S.25.

Netzwerk & Internet

Flugmodus

In **Flugmodus** you can't make or receive calls, surf the web or download emails, or do anything that requires an Internet connection, this is to prevent disturbance to sensitive equipment. You can still listen to music, watch videos and other content, as long as all this content is saved on your memory card or internal storage.

When you take your phone abroad, you can keep it in flight mode. If you do that, there's no chance of data roaming charges, and you can still enable Wi-Fi. Enable **Flugmodus** when in areas with no network coverage to save battery since the phone repeatedly scans for available networks and this consumes power. You can be notified by alarms, if alarms are activated.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Flugmodus**.
2. Set the switch **Flugmodus** to  to activate it. Set the switch to  to deactivate.

WLAN

Use **WLAN** to connect your phone to the Internet instead of the mobile network. You may already have Wi-Fi in your home and it's often available at workplaces. Take advantage of free networks in coffee shops, hotels, trains and libraries. Connecting to the Internet with Wi-Fi doesn't incur additional data traffic costs, unless you have to pay to get on the wireless network. The only thing you have to do is to enter the Wi-Fi settings and configure an access point to connect your phone to the wireless network, enter password if applicable.

Activate Wi-Fi

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **WLAN**.
2. Set the switch to  to activate it. Set the switch to  to deactivate.

Connect to available networks

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **WLAN**.
2. If Wi-Fi is activated a list of available Wi-Fi networks will be displayed after a moment.

Hinweis! If nothing is displayed although you know that there should be available networks, set the switch to  off and then  on again.

3. Select your wanted network and press  and enter the **Passwort**.

Hinweis! Check **Passwort anzeigen** to see it in clear text.

4. Press **Erweiterte Optionen** if you need specific settings.
5. Press **Verbinden** to connect.

A connected Wi-Fi network is displayed in the top of the list. Select it and press  for connection details. Press **Entfernen** if it's an unwanted network, to disconnect from it and stop connecting to it automatically.

Connect to a network manually

You can also choose **Netzwerk hinzufügen** to manually configure your network. This is usually done if the wireless network or SSID is hidden.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **WLAN**.
2. Press **Netzwerk hinzufügen** to connect to a network with hidden SSID (Service Set Identifier).
3. Enter the requested information needed to be able to connect. Press **Speichern**.

WLAN-Einstellungen

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **WLAN** → **WLAN-Einstellungen**:
 - **Zertifikate installieren** to install and manage security certificates.
 - **WPS-Push-Taste**: First press the Wi-Fi Protected Setup button on your router. It may be called WPS or marked with this symbol .
 - **WPS-PIN-Eingabe**: Enter the given PIN code on the router/access point. The setup can take up to two minutes to complete.

Gespeicherte Netzwerke

View your saved networks. Select it and press . Press **Entfernen** if it's an unwanted network, to disconnect from it and stop connecting to it automatically.

Mobilfunknetz

You can see the active network operator. To change network operator, see *Netzbetreiber*, S.51.

Daten-Roaming

Your phone automatically selects your (service providers) home network if within range. If not within range, you can use another network, provided your network operator has an agreement that allows you to do so. This is called roaming. Contact your service provider for more information.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Mobilfunknetz** → select SIM card (if applicable).
2. Set the switch **Daten-Roaming** to  to activate it or  to deactivate.

WICHTIG

Using data services while roaming can be costly. Contact your service provider for data roaming rates before you use data roaming.

Bevorzugter Netzwerktyp

Your phone automatically switches between the mobile networks that are available where you are. You can also manually set your phone to use a specific mobile network type. Different status icons are displayed in the status bar depending on the type of network that you are connected to.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Mobilfunknetz** → select SIM card (if applicable) → **Bevorzugter Netzwerktyp**:
 - **4G (empfohlen)**: to automatically switch for best service between 2G, 3G and 4G.
 - **3G**: to automatically switch for best service between 2G and 3G.
 - **2G**: for 2G service only.

WICHTIG

If you set your phone to use **2G** or **3G**, you will not be able to make any calls, including emergency calls, or use other features requiring a network connection, if the selected network type is unavailable.

Erweiterter 4G LTE-Modus

Set if voice calling over LTE network should be enabled or disabled. This menu is only visible if your service provider supports the feature.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Mobilfunknetz** → select SIM card (if applicable).
2. Set the switch **Erweiterter 4G LTE-Modus** to  to activate it or  to deactivate.

Hinweis! Your network operator also needs to support this feature.

Anrufe über WLAN

For improved voice communications over Wi-Fi.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Mobilfunknetz** → select SIM card (if applicable) → **Anrufe über WLAN**.
2. Set the switch to  on to activate it or  to deactivate.

Hinweis! Your network operator also needs to support this feature.

Zugangspunkte (APNs)

An Access Point Name (APN) is the name of a gateway between a mobile network and another computer network, mostly the public Internet. The APN settings are used by services that communicates using other computer networks. The APN settings for most major service providers are already included from start. There are different APN settings for different services like message, data and AGPS.

Follow the steps below if your service provider's profile is not in the list or if you need to change any setting. Contact your service provider for correct settings.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Mobilfunknetz** → select SIM card (if applicable) → **Zugangspunkte (APNs)**.
2. To change an existing APN profile, select a profile and press .

If your service provider's profile is not in the list, press  → **Neuer APN** to enter settings for your service provider:

- **Name** to enter a name for the APN.
- **APN** to enter the APN address.

- **Proxy** to enter HTTP proxy address.
 - **Port** to enter HTTP proxy port.
 - **Nutzername** to enter user name.
 - **Passwort** to enter password.
 - **Server** to enter password.
 - **MMSC** to enter the MMSC.
 - **MMS-Proxy** to enter MMS proxy address.
 - **MMS-Port** to enter MMS proxy port.
 - **MCC** to enter the operator MCC code.
 - **MNC** to enter the operator MNC code.
 - **Authentifizierungstyp** to select the type of authentication to be used.
 - **APN-Typ** to enter the APN type.
 - **APN-Protokoll** to select the type of protocol to be used.
 - **APN-Roaming-Protokoll** to select the type of protocol to be used when roaming.
 - **APN aktivieren/deaktivieren** to select the type of protocol to be used when roaming.
 - **Träger** to set the type of bearer.
 - **MVNO-Typ** to set the MVNO type.
 - **MVNO-Wert** to set the MVNO value.
3. Press **⋮** → **Speichern** to save or **Verwerfen** to return.
 4. Select your new/modified profile's radio button **⦿** and press **OK** to activate it.

You can also delete a profile by selecting one and press **⋮** → **APN löschen**.

Netzbetreiber

Your phone automatically selects the network operator that you have a subscription with. When roaming or if you otherwise have no signal you can try to manually select a network.

1. Press **☰** **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Mobilfunknetz** → **Netzbetreiber**.

- Wait for the list of operators and select the wanted operator or **Automatisch auswählen**.

WICHTIG

If you select a network manually, your phone will lose network connection when the selected network is out of reach. Remember to set **Automatisch auswählen**.

Datennutzung

Datensparmodus

You can reduce data usage by preventing some apps from sending or receiving data in the background. An app you're currently using can access data, but may do so less frequently. This may mean, for example, that images don't display until you select them.

- Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Datennutzung** → **Datensparmodus**.
- Set the switch to  on to activate it or  to deactivate.
- Press **Uneingeschränkter Datenzugriff** and set the switch to on  for the apps that should have unrestricted data.

Hinweis! If **Datensparmodus** is activated  is displayed in the status bar.

Mobiler Datenverkehr

Use mobile data to access internet services and emails.

Hinweis! If you have a Wi-Fi network setup and is available, that will always be the first choice for data communication.

WICHTIG

Using mobile data services can be costly. We recommend that you check your data rates with your service provider.

Enable/disable mobile data for services like software update, internet browser, Facebook, Weather and e-mail. Select off  to avoid data charges.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Datennutzung** → select SIM card (if applicable) → **Mobiler Datenverkehr**.
2. Set the switch to on  to activate it or off  to deactivate.

Mobile Datennutzung

The **Mobile Datennutzung** counter gathers traffic information from all apps using mobile data like internet browser, MMS and e-mail. You can keep track of the amount of data transferred to and from your device over the mobile network since last reset.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Datennutzung** → select SIM card (if applicable) → **Mobile Datennutzung**.
2. See total mobile data usage as well as per app for the selected date interval shown on the top of the page.
3. Press  to set data notification limits and time periods.

Abrechnungszeitraum

Set the data notification limits and time periods.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Datennutzung** → select SIM card (if applicable) → **Abrechnungszeitraum**.
2. Set the **Datenwarnung festlegen** switch to on  to get a warning when you reached the mobile data usage limit of **Warnlimit für mobile Daten**.
3. Set the **Datenlimit festlegen** switch to on  to turn off mobile data when limit of **Datenlimit** is reached.
4. Press **Datennutzung löschen** to reset the mobile data usage counter and press **OK** to confirm.

WLAN-Datennutzung

See the data counters for Wi-Fi data traffic.

Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Datennutzung** → **WLAN-Datennutzung**.

Hotspot und Tethering

WICHTIG

Using mobile data services can be costly. We recommend that you check your data rates with your service provider.

Allow other devices to share your phone's Internet connection by connecting via USB, Bluetooth or Wi-Fi. Internet sharing only works if your phone is connected to the Internet over the mobile data network and it will disable any existing Wi-Fi connection on the phone while active.

USB-Tethering

Share your phone's Internet connection by connecting via USB cable. You must first connect the computer to the phone.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Hotspot und Tethering**.
2. Set the **USB-Tethering** switch to on  to enable Internet sharing via the USB cable.

Hinweis! The first time it might take some time before the connection is established.

Bluetooth-Tethering

Share your phone's Internet connection by connecting via Bluetooth. You must first establish the Bluetooth connection. See *Bluetooth®*, S.56.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Hotspot und Tethering**.
2. Set the **Bluetooth-Tethering** switch to on  to enable Internet sharing via a Bluetooth connection.

Hinweis! You must first establish the Bluetooth connection. See *Bluetooth®*, S.56.

WLAN-Hotspot

Share your phone's Internet connection via Wi-Fi. If you want to change any setting, please do so before you turn on the feature.

WICHTIG

Always have the security turned on when your Wi-Fi hotspot is active to prevent unauthorized use of your internet connection. Turn off the Wi-Fi hotspot feature when you no longer need to share Internet access for other devices. When the feature is activated it will drain your phone's battery significantly.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Hotspot und Tethering** → **WLAN-Hotspot**.
2. Set the switch to on  to enable Internet sharing via Wi-Fi.
3. Press **WLAN-Hotspot eingeschaltet lassen** to set if the **WLAN-Hotspot** should automatically turn off after being idle for the set period of time:
 - **Immer** to have the **WLAN-Hotspot** enabled until you manually turn it off.
 - **Nach 5 Min. Inaktivität abschalten** to automatically turn off after 5 minutes, if idle.
 - **Nach 10 Min. Inaktivität abschalten** to automatically turn off after 10 minutes, if idle.
4. Press **WLAN-Hotspot einrichten** to set the configuration for the **WLAN-Hotspot**:
 - **Netzwerkname** to set the network name that will be shown to other devices. This is also called the SSID.
 - **Sicherheit** to set the security type (always use WPA2 PSK if the connecting device supports it).
 - **Passwort**: a password is used to prevent unauthorized access to your mobile network. This option is available only when the security type is WPA2(AES).

Hinweis! Check **Passwort anzeigen** to see it in clear text.

 - Press **Speichern** to confirm any changes.
5. Press **WPS-Verbindung** to connect to your phone using WPS:
 - **Push-Schaltfläche**: First select this mode and then try to connect with the other device using WPS.
 - **PIN des Kunden**: Enter the given PIN code on the other device using WPS. The setup can take up to two minutes to complete.

Press **Verbinden** to initiate WPS connection.

6. Below you can see connected and blocked devices.

Dual-SIM-Einstellungen

If you have more than one SIM card installed, you will be asked what SIM card to use. Here you can set the preferred SIM card for different types of mobile traffic.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Dual-SIM-Einstellungen**.
2. Set the switch to on  for each SIM card slot you want enabled.
3. Select the preferred SIM card for the different types of mobile traffic.
 - **Mobile Daten**
 - **Anrufe**
 - **Nachricht schicken**

WLAN, mobile Daten & Bluetooth zurücksetzen

Here you can reset all network settings, including Wi-Fi, mobile data and Bluetooth settings.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **WLAN, mobile Daten & Bluetooth zurücksetzen**.
2. Select SIM card if applicable and press **Einstellungen zurücksetzen**.
3. Press **Einstellungen zurücksetzen** to confirm the reset.

Verbundene Geräte

Here you can see and control your connected devices.

Bluetooth®

WICHTIG

If you are not using Bluetooth connectivity, switch it off to save power.
Do not pair with an unknown device.

Activate Bluetooth

1. Press  **Menü** → **Einstellungen** → **Verbundene Geräte** → **Bluetooth**.
2. Set the switch to on  to enable.

Bluetooth settings

Visibility to other devices

Your phone is visible to other Bluetooth devices as long as you have the Bluetooth activated, the settings menu is open and the display is lit.

1. Press  **Menü** → **Einstellungen** → **Verbundene Geräte** → **Bluetooth**.
2. Keep the menu open and the display lit to make your device visible to other devices.

Gerätename

1. Press  **Menü** → **Einstellungen** → **Verbundene Geräte** → **Bluetooth** → **Gerätename**.
2. **DFC-0270** is displayed.
3. Edit the new name.
4. Press **Umbenennen** to save and your new name should appear for other Bluetooth devices.

Empfangene Dateien

You can both send and receive files via Bluetooth. Here you can see the files received via Bluetooth. Files received via Bluetooth can also be displayed using the file manager, see *Dateimanager*, S.45. Use the share function to send files via Bluetooth, see *Sharing content*, S.12.

1. Press  **Menü** → **Einstellungen** → **Verbundene Geräte** → **Bluetooth** → **Empfangene Dateien**.
2. The files received via Bluetooth are displayed.

Gekoppelte Geräte

View already paired devices.

1. Press  **Menü** → **Einstellungen** → **Verbundene Geräte** → **Bluetooth** → **Gekoppelte Geräte**.
2. See the list of paired devices. Select the device and press  to connect/disconnect the device. When a device is connected the icon  is displayed in the status bar.
3. Select the setting icon  on a device from the list and press :
 - **Name** to edit the name of the paired Bluetooth device.
 - Mark the type of service that should be enabled.

4. Press **OK** to save changes.
5. Press **Entfernen** to delete the device from the list of paired devices.

Neues Gerät koppeln

Search and pair available Bluetooth devices in your proximity.

1. Press  **Menü** → **Einstellungen** → **Verbundene Geräte** → **Bluetooth** → **Neues Gerät koppeln**.
2. Make sure that the device you want to connect with is visible and in pairing mode.
3. Wait for the search to display the wanted device to select it and press  to connect. When connecting to another Bluetooth device you may need to enter a password or confirm a shared key.

Bluetooth address

Here you can see the Bluetooth address of your phone.

USB connection

USB storage is enabled by default and allows a computer or device connected using a USB-cable to access files on this phone. You can change that with the following settings.

1. Press  **Menü** → **Einstellungen** → **Verbundene Geräte** → **USB**.
2. Set the wanted setting:
 - **Dieses Gerät aufladen** to only allow charging.
 - **Dateien übertragen** to allow access to the file system of the phone. Apple's Mac OS X doesn't include MTP support. Visit [Android File Transfer](#) to download a file transfer application for Mac OS X.
 - **Fotos übertragen (PTP)** to appears to the computer as a digital camera. In this mode, your phone will work with digital camera applications that support PTP but not MTP. Apple's Mac OS X does support PTP, so you can use PTP mode to transfer photos to a Mac over a USB connection without any special software.
 - **Gerät als MIDI verwenden** to connect the phone as a MIDI device (Musical Instrument Digital Interface is a technical standard that describes a communications protocol, digital interface, and electrical connectors that connect a wide variety of electronic musical instruments, computers, and related audio devices for playing, editing and recording music).

- Press  to confirm.

Akku

See your phone's battery status and activate power saving mode.

Standby, intelligenter Energiesparmodus

Standby, intelligenter Energiesparmodus helps to increase battery life by intelligently slow down processes to a minimum in idle mode.

- Press  **Menü** → **Einstellungen** → **Akku**.
- Set the switch **Standby, intelligenter Energiesparmodus** to on  to enable.

Hinweis! This feature is by default turned on.

Energiesparmodus

Once activated, the power saving mode, helps to increase battery life. The battery saver reduces your device's performance and limits vibration, location services, and most background data. Email, messaging, and other apps that rely on syncing may not update unless you open them. Battery saver turns off automatically when your device is charging. When activated, the status bar turns orange.

- Press  **Menü** → **Einstellungen** → **Akku** → **Energiesparmodus**.
- Set the switch to on  to manually activate it.

Turn on power saving mode automatically

Set the power saving mode to automatically start functioning when the battery level reaches a certain level.

- Press  **Menü** → **Einstellungen** → **Akku** → **Energiesparmodus** → **Automatisch aktivieren**.
- Set at what remaining battery power level to automatically activate power saving mode.

Display

Hauptmenü

You can select different styles for the main menu.

- Press  **Menü** → **Einstellungen** → **Display** → **Hauptmenü**:
- Select **Gitter** or **Einzeln**.

Navigationshilfen

The action-based navigation menu can be turned on/off.

1. Press  **Menü** → **Einstellungen** → **Display**.
2. Set the switch **Navigationshilfen** to off  to disable.

Helligkeitsstufe

You can adjust the brightness of the display.

1. Press  **Menü** → **Einstellungen** → **Display** → **Helligkeitsstufe**.
2. Set the brightness to comfortable level and press  when done.

Hinweis! The brighter the display is, the more batter power it will consume.

Hintergrund

1. Press  **Menü** → **Einstellungen** → **Display** → **Hintergrund**.
2. Select wallpaper from:
 - **Hintergründe** for predefined available wallpapers.
 - **Galerie** for images available in your gallery.

Ruhezustand

Select the delay time for the display backlight.

1. Press  **Menü** → **Einstellungen** → **Display** → **Ruhezustand**.
2. Select the how long time the display lit.
3. Press  to confirm.

Schriftgröße

You can adjust the text size for the menu and messages.

1. Press  **Menü** → **Einstellungen** → **Display** → **Schriftgröße**.
2. Select **Mittel** or **Groß**.

Farbumkehr

Colour inversion exchanges colour values. For example, black text on a white screen becomes white text on a black screen.

1. Press  **Menü** → **Einstellungen** → **Display** → **Farbumkehr**.
2. Set the switch to on  to enable this feature.

Töne

Volume

Adjust the volume settings for various sounds on your device.

1. Press  **Menü** → **Einstellungen** → **Töne**:
2. Select type of sound and use   to adjust the volume.
 - **Medienlautstärke.**
 - **Weckerlautstärke.**
 - **Klingeltonlautstärke.**
3. Press  when done.

Audioeinrichtung

If you use a hearing aid or have hearing difficulties when using the device in a noisy environment, you can adjust the audio settings.

1. Press  **Menü** → **Einstellungen** → **Töne** → **Audioeinrichtung**:
 - **Normal** for normal hearing in normal conditions.
 - **Laut** for moderate hearing impairment or use in a very noisy environment.
 - **HAC-Modus** for use with hearing aid.
2. Press  to confirm.

Hinweis! Try different settings to find the one that suits your hearing the best.

Tastaturton

Select the sound you hear when you press the keys of the phone.

1. Press  **Menü** → **Einstellungen** → **Töne** → **Tastaturton** .
2. Select between
 - **Stumm**
 - **Klicken**
 - **Ton**

3. Press  to confirm.

Vibrate for calls

Set to vibrate for incoming calls.

1. Press  **Menü** → **Einstellungen** → **Töne** → **Bei Anrufen auch vibrieren**.
2. Set the switch to on  to enable this feature.

Ringtones and alerts

Select various ringtones and alerts on your device.

1. Press  **Menü** → **Einstellungen** → **Töne**.
2. Select the sound to set and select one of the available melodies, the melody will be played.
 - **SIM1 Klingelton** to set the ringtone for incoming calls on SIM1.
 - **SIM2 Klingelton** to set the ringtone for incoming calls on SIM2.
 - **Standard-Benachrichtigungston** to set the tone for new notifications.
 - **Standard-Weckton** to set the alarm tone.
3. Press  to confirm.

Speicher

View how much space is used by each category of files. See also *Dateimanager*, S.45.

Anrufe

Set **Zum Antworten öffnen** to on  to answer incoming calls by opening the phone.

1. Press  **Menü** → **Einstellungen** → **Anrufe** → **Antwortmodus** → **Zum Antworten öffnen**:
2. Enable the switch  to answer incoming calls by opening the phone.

Sicherheit & Standort

Kennwort

Change phone code

1. Press  **Menü** → **Einstellungen** → **Sicherheit & Standort** → **Kennwort** → **Telefoncode**.
2. Enter current code and press **OK**.
3. Enter new code and press **OK**.
4. Confirm new code and press **OK**.

Hinweis! The default phone code is **1234** and is used for e.g. resetting the phone.

Displaysperre

The phone lock protects your phone from unwanted usage. If activated, the phone is locked each time you lock it and the selected unlock method is needed. If PIN is selected, you also need to enter the PIN after restart of the phone.

1. Press  **Menü** → **Einstellungen** → **Sicherheit & Standort** → **Displaysperre**.
2. Select the type the type of lock you want:
 - **Keine**: no lock. This option gives no security.
 - **Tastensperre**: to unlock by first pressing the Options key  then . This option gives very limited security.
 - **PIN**: to unlock you type a PIN. A PIN consists of numbers only. Enter four numbers, and then **Weiter** to confirm the PIN. Press **OK** to confirm. This option gives medium security.

Automatisch sperren

The phone automatically locks after the set time period.

1. Press  **Menü** → **Einstellungen** → **Sicherheit & Standort** → **Automatisch sperren**.
2. Select after what time the phone automatically locks.
3. Press  to confirm.

Standort

Global Positioning System (GPS) and additional supplemental information such as Wi-Fi and mobile networks are used to approximate your location. Location data may be used by apps and services, such as assistance calls and weather forecasts.



VORSICHT

If you turn off location, services such as assistance location cannot access your location information.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Standort**.
2. Enable the switch  to enable location positioning.

Modus

The GPS is quite battery consuming. If you want to reduce the battery consumption you can set **Modus** to **Energiesparmodus**.

1. Press  **Menü** → **Einstellungen** → **Netzwerk & Internet** → **Standort**.
2. Enable the switch  to enable location positioning.
Select mode:
 - **Hohe Genauigkeit:** for best location accuracy. This uses every service available: GPS, Wi-Fi, Bluetooth, and/or mobile networks in whatever combination available. This is quite battery consuming.
 - **Energiesparmodus:** to reduce battery consumption by disabling GPS. This mode uses less battery-intensive location sources (Wi-Fi, Bluetooth, and/or nearby mobile) to figure out where you are using location services. This will not be as accurate as using GPS.
 - **Nur Gerät:** this mode relies solely on the GPS. This means it will work in places where you won't find enough Wi-Fi, cellular towers, and Bluetooth beacons to get a proper location.

SIM-Kartensperre

1. Press  **Menü** → **Einstellungen** → **Sicherheit & Standort** → **SIM-Kartensperre** → select SIM card (if applicable).

- Set the switch  to activate the PIN code. You need to enter the PIN code every time the phone is started.
- Set the switch  to deactivate the PIN code.

WICHTIG

If you deactivate the PIN code and the SIM card is lost or stolen, it is unprotected and must be blocked by your service provider.

2. Press **PIN ändern** to change you SIM PIN code.
3. Enter the old PIN and press **OK**.
4. Enter new PIN and tap **OK**. Enter new PIN again and select **OK** once more. When done, **SIM-PIN erfolgreich geändert** will appear.

Einrichtungsassistent

You can run the start-up wizard anytime you want.

Press  **Menü** → **Einstellungen** → **Einrichtungsassistent** and select the subject you want to change.

Lernprogramme

Here are some useful tutorials for various features.

Press  **Menü** → **Einstellungen** → **Lernprogramme**.

SIM-Toolkit

Your service provider can provide some various value-added services.

Press  **Menü** → **Einstellungen** → **SIM-Toolkit** → select SIM card (if applicable) for the provided services.

System

Sprachen & Eingabe

The default language for the phone menus, messages, etc. is determined by the SIM card. You can change this to any other language supported by the phone.

1. Press  **Menü** → **Einstellungen** → **System** → **Sprachen & Eingabe** → **Sprachen**.
2. Select a language.

Texterkennung

1. Press  **Menü** → **Einstellungen** → **System** → **Sprachen & Eingabe** → **Texterkennung**.
2. Set **Texterkennung** on/off with .

Datum & Uhrzeit

Tipp: The phone is set to automatically update time and date according to current time zone. To turn off, select **Datum & Uhrzeit** → **Autom.**

Datum/Uhrzeit → . Automatic update of date and time does not change the time you have set for the alarm clock or the calendar. They are in local time. Updating may cause some alarms you have set to expire depending on network support and subscription.

Set the time and date

1. Press  **Menü** → **Einstellungen** → **System** → **Datum & Uhrzeit**:
 - **Autom. Datum/Uhrzeit**, set to off  to manually set the date and time.
 - **Automatische Zeitzone**, set to off  to manually set the time zone.
 - **Datum festlegen** to enter the date.
 - **Uhrzeit festlegen** to enter the time.
 - **Zeitzone auswählen** to select your current time zone.
 - **24-Stunden-Format** set to off  for 12-hour or on  for 24-hour time format.

Software-Update

When a new system software is available, a notification message is shown.

Press **Software-Update** → **Auf Aktualisierungen prüfen** to manually check if there's a software update available and perform it. Select it to start downloading. The download time may vary depending on Internet connection. We recommend that you always update your device to the latest software version to get optimal performance and the latest enhancements. You need to have a working data connection to be able to perform the update with the firmware over-the-air (FOTA) service. See *Mobilfunknetz*, S.49 or *WLAN*, S.47 on how to activate a data connection.

1. Press  **Menü** → **Einstellungen** → **System** → **Software-Update**.
2. Press **Auf Aktualisierungen prüfen** to manually check if there's a software update available.
3. Press  → **Einstellungen** for software update settings:
 - **Automatisch nach Updates suchen** to set how often the phone automatically should check for new updates.
 - **Updates nur über WiFi**, to only allow update packages to be downloaded over Wi-Fi network.
 - **Automatische Downloads zulassen** to allow update packages to be downloaded automatically

Optionen zurücksetzen

DRM-Rücksetzung

Digital Rights Management (DRM) is a management systems used to control how users access premium content. To be able to play files with DRM protection, you need the corresponding license. Here you can delete all licenses on this device.

1. Press  **Menü** → **Einstellungen** → **System** → **Optionen zurücksetzen** → **DRM-Rücksetzung**.
2. Press **OK** to delete all the licenses on this device.

App-Einstell. zurücksetzen

1. Press  **Menü** → **Einstellungen** → **System** → **Optionen zurücksetzen** → **App-Einstell. zurücksetzen**.
2. Press **Apps zurücksetzen** to reset all preferences for: disabled apps, disabled app notifications, default applications for actions, background data restrictions for apps and any permission restrictions. You will not lose any app data.

Alle Daten löschen (auf Werkseinstellungen zurücksetzen)

1. Press  **Menü** → **Einstellungen** → **System** → **Optionen zurücksetzen** → **Alle Daten löschen (auf Werkseinstellungen zurücksetzen)**.
2. Press **Telefon zurücksetzen** to delete all data from your phone's internal storage, including: accounts, system and app data and settings, music, photos, videos and other user data (SIM card and memory card are not affected).

- Press **Alles löschen** to confirm and continue to delete all your personal information.

Hinweis! This action cannot be undone!

- Enter the phone code and press **OK**.

Tipp: The default phone code is **1234**.

Ein-/Abschaltung nach Zeitplan

Here you can set how to turn on and turn off your phone without pressing the power button.

- Press  **Menü** → **Einstellungen** → **System** → **Optionen zurücksetzen** → **Ein-/Abschaltung nach Zeitplan**.
- Press **On** or **Off** for the following options.
 - Zeit** to set the time when the phone should be turned **On** or **Off**.
 - Check **Wiederholen** to select what days the setting should be valid for.
- Press **Fertig** to confirm.

Über das Telefon

See information regarding your phone.

- Press  **Menü** → **Einstellungen** → **System** → **Über das Telefon**:
 - Status**: to see the status for various items on your phone.
 - Modell**: to see the model number.
 - Build-Nummer**: to see the build number.
 - Erstellungsversion anpassen**: to see the custom build version.

Additional functions

Display status symbols

 Signal strength	 No network coverage
 Alarm active	 Data saver activated.
 Vibration only	 Battery level
 Silent	 Call divert activated
 Voicemail message received	 Bluetooth on

1	Notification (missed call, new message, etc...)		Bluetooth connected
	Headset connected		Flugmodus activated

Display main symbols

	Charger connected		Charger removed
	Error		Query
	Warning		Done (confirmed)
	Processing, please wait		Battery level low
	Assistance button call		

Sicherheitshinweise



VORSICHT

Das Gerät und das Zubehör können Kleinteile enthalten. Bewahren Sie das Gerät außerhalb der Reichweite von Kleinkindern auf.
Der Netzadapter ist das Trenngerät zwischen dem Telefon und der Stromnetz. Die Netzsteckdose muss sich in der Nähe des Geräts befinden und leicht zugänglich sein.

Netzdienste und Netzkosten

Ihr Gerät ist für 4G LTE FDD 1 (2100), 3 (1800), 7 (2600), 8 (900 MHz), 20 (800) MHz , WCDMA 1 (2100), 8 (900), B2 (1900) MHz, GSM 900/1800/1900 MHz-Netze zugelassen. Um das Gerät nutzen zu können, müssen Sie eine SIM-Karte einlegen, die vom Betreiber freigeschaltet ist.

Durch die Verwendung von Netzdiensten können Kosten anfallen. Einige Funktionen sind nur nach Beantragung beim Betreiber möglich und teils kostenpflichtig.

Betriebsumgebung

Beachten Sie alle Vorschriften, die an Ihrem jeweiligen Aufenthaltsort gelten, und schalten Sie das Gerät ab, wenn sein Gebrauch verboten ist oder Störungen oder Gefahren verursachen kann. Verwenden Sie das Gerät immer in der normalen Gebrauchsposition.

Teile des Geräts sind magnetisch. Es kann daher Metallobjekte anziehen. Bewahren Sie keine Kreditkarten oder andere Magnetdatenträger in der Nähe des Geräts auf. Es besteht die Gefahr, dass die darauf gespeicherten Informationen zerstört werden.

Medizinische Geräte

Der Gebrauch von Geräten, die Funksignale aussenden, wie z. B. Mobiltelefone, kann den Betrieb medizinischer Geräte stören, wenn diese nicht ausreichend geschützt sind. Wenden Sie sich an einen Arzt oder den Hersteller des Geräts, um festzustellen, ob es gegen externe Funksignale ausreichend geschützt ist, oder wenn Sie andere Fragen haben. Ist der Gebrauch des Geräts in Krankenhäusern oder ärztlichen Einrichtungen untersagt, so schalten Sie es bitte ab. In Krankenhäusern und anderen ärztlichen Einrichtungen werden manchmal Geräte benutzt, die durch externe Funksignale gestört werden könnten.

Medizinische Implantate

Um mögliche Funktionsstörungen medizinischer Implantate zu vermeiden, empfehlen Implantathersteller einen Mindestabstand von 15 cm zwischen Mobiltelefonen und dem Implantat. Personen, die solche Implantate tragen, sollten folgende Vorsichtsmaßnahmen beachten:

- Halten Sie immer den Mindestabstand von 15 cm zwischen Mobiltelefon und medizinischem Implantat ein.
- Sie sollten das Telefon nicht in einer Brusttasche tragen.
- Halten Sie das Mobiltelefon nur an das Ohr, das der Körperseite mit dem Implantat gegenüberliegt.

Schalten Sie das Telefon sofort aus, wenn Sie vermuten, dass eine Störung des medizinischen Implantats vorliegt. Bitte wenden Sie sich an Ihren Arzt, wenn Sie weitere Fragen zur Nutzung von Mobiltelefonen durch Implantatträger haben.

Explosionsgefährdete Bereiche

Schalten Sie das Gerät in Bereichen mit Explosionsgefahr immer ab. Befolgen Sie alle Hinweise und Anweisungen. Eine Explosionsgefahr besteht zum Beispiel auch an Orten, an denen Sie normalerweise den Motor Ihres Fahrzeugs ausschalten müssen. In diesen Bereichen kann Funkenbildung zu Explosion oder Brand führen; es besteht Verletzungs- und Lebensgefahr.

Schalten Sie das Gerät an Tankstellen und sämtlichen anderen Orten ab, an denen es Benzinpumpen und Fahrzeugwerkstätten gibt.

Halten Sie sich an die Einschränkungen für den Gebrauch von Funkgeräten an Orten, an denen Kraftstoffe gelagert sind und verkauft werden, im Bereich von Chemiewerken und von Sprengarbeiten.

Bereiche mit Explosionsgefahr sind oft – aber nicht immer – eindeutig gekennzeichnet. Dies gilt auch unter Deck auf Schiffen, den Transport oder die Lagerung von Chemikalien, Fahrzeuge, die mit Flüssigtreibstoff (wie Propan oder Butan) betrieben werden, sowie Bereiche, in denen in der Luft Chemikalien oder Partikel, wie Fasern, Staub oder Metallpulver, enthalten sind.

Lithium-Ionen-Akku

Dieses Produkt enthält einen Lithium-Ionen-Akku. Bei unsachgemäßem Umgang mit dem Akku besteht Brand- und Verbrennungsgefahr.

**WARNUNG**

Bei falschem Einsetzen des Akkus besteht Explosionsgefahr. Um Brand- und Verbrennungsgefahren zu vermeiden, darf der Akku nicht zerlegt, mechanischem Druck ausgesetzt, durchstochen, kurzgeschlossen, Temperaturen über 60° C (140° F) ausgesetzt oder mit Wasser und Feuer in Berührung gebracht werden. Gebrauchte Akkus müssen gemäß den vor Ort geltenden Bestimmungen sowie gemäß den Angaben in der beiliegenden Produktinformation entsorgt oder dem Recycling zugeführt werden.

Gehörschutz

Dieses Gerät erfüllt die Anforderungen für Schalldruckpegel-Grenzwerte laut Normen EN 50332-1 und/oder EN 50332-2.

**WARNUNG**

Die Exposition gegenüber starker Geräuschbelastung kann zur Schädigung des Gehörs führen. Eine zu hohe Lautstärkeeinstellung des Mobiltelefons kann zur Ablenkung beim Fahren und zu Unfällen führen. Stellen Sie das Headset auf mittlere Lautstärke ein und halten Sie das Telefon nicht in die Nähe des Ohrs, wenn der Freisprechmodus aktiviert ist.

Notruf

WICHTIG

Mobiltelefone nutzen Funksignale, das Mobiltelefonnetz, das Festnetz und benutzerprogrammierte Funktionen. Das bedeutet, dass eine Verbindung nicht unter allen Umständen garantiert werden kann. Verlassen Sie sich daher niemals nur auf ein Mobiltelefon, wenn sehr wichtige Anrufe, z. B. in medizinischen Notfällen, erforderlich sind.

GPS-/Standortbasierte Funktionen

Manche Produkte bieten GPS-/Standortbasierte Funktionen. Die Standortbestimmungsfunktion wird mit Werkseinstellung bereitgestellt. Es wird keine Zusicherung oder Garantie auf die Genauigkeit solcher Standortinformationen gegeben. Bei der Verwendung standortbasierter Informationen durch das Gerät können Unterbrechungen oder Fehler bei der Datenübertragung nicht ausgeschlossen werden und kann darüber hinaus von der Netzverfügbarkeit abhängig sein. Bitte beachten Sie, dass die Funktionalität in bestimmten Umgebungen, wie Innenräume von Gebäuden oder an Gebäude angrenzende Bereiche, eingeschränkt oder gar nicht vorhanden sein kann.

**VORSICHT**

Verwenden Sie im Straßenverkehr nur die GPS-Funktionen, die Sie nicht vom Fahren ablenken.

Fahrzeuge

Funksignale können die Elektronik von Motorfahrzeugen (z. B. elektronische Kraftstoffeinspritzung, ABS-Bremssystem, Tempomat, Airbags) stören, wenn diese fehlerhaft eingebaut wurden oder nicht ausreichend geschützt sind. Für weitere Informationen über Ihr Fahrzeug oder mögliche Zusatzausrüstungen wenden Sie sich bitte an den Hersteller oder an dessen Niederlassung.

Brennbare Flüssigkeiten, Gase oder explosive Stoffe dürfen nicht zusammen mit dem Gerät oder seinem Zubehör aufbewahrt oder transportiert werden. Bei Fahrzeugen mit Airbags: Denken Sie daran, dass bei einem Aufprall die Airbags mit beträchtlicher Kraft mit Luft gefüllt werden.

Legen Sie keine Gegenstände, auch keine stationären oder tragbaren Funkgeräte, direkt über dem Airbag oder in dem Bereich, in den er sich aufbläht, ab. Bei unsachgemäßem Einbau des Mobiltelefons kann es beim Entfalten des Airbags zu ernsthaften Verletzungen kommen.

An Bord von Flugzeugen ist der Gebrauch des Geräts verboten. Schalten Sie das Gerät ab, bevor Sie an Bord gehen. Der Gebrauch drahtloser Telekommunikationsgeräte in Flugzeugen kann die Flugsicherheit gefährden und die bordeigene Telekommunikation stören. Außerdem kann er gesetzlich verboten sein.

Schutz persönlicher Daten

Schützen Sie Ihre persönlichen Daten und verhindern Sie Weitergabe bzw. Offenlegung oder Missbrauch sensibler Informationen

- Stellen Sie bei der Benutzung Ihres Telefons sicher, dass wichtige Daten als Backup gesichert werden.
- Erstellen Sie ein Backup aller Daten und setzen Sie das Telefon auf den Lieferzustand zurück, um Missbrauch persönlicher Daten zu verhindern.
- Lesen Sie sorgfältig die Datenschutzbestimmungen bzw. die zu akzeptierenden Genehmigungen, bevor Sie Anwendungen herunterladen. Besondere Vorsicht ist bei Anwendungen geboten, die auf viele Funktionen oder auf eine große Anzahl persönlicher Informationen zugreifen können.
- Überprüfen Sie Ihre Konten regelmäßig auf nicht durch Sie genehmigte bzw. verdächtige Verwendung. Wenn Sie irgendwelche Anzeichen von Missbrauch erkennen, wenden Sie sich an Ihren Netzbetreiber, um Ihre Kontodaten zu ändern oder zu löschen.
- Falls Ihr Telefon verloren geht oder gestohlen wird, ändern Sie umgehend die Passwörter all Ihrer Konten, um Ihre persönlichen Daten zu schützen.
- Vermeiden Sie Anwendungen unbekannter Herkunft und sperren Sie Ihr Telefon mit einem Muster, Passwort oder PIN-Code.

Malware und Viren

Befolgen Sie diese Benutzertipps, um Ihr Gerät vor Malware und Viren zu schützen. Nichtbeachtung kann zu beschädigten Daten oder Verlust von Daten führen, was u. U. von der Gewährleistung ausgeschlossen ist.

- Laden Sie keine unbekannten Anwendungen herunter.

- Besuchen Sie keine Websites, die nicht vertrauenswürdig sind.
- Löschen Sie verdächtige Nachrichten oder E-Mails unbekannter Absender.
- Richten Sie ein Passwort ein und ändern Sie es regelmäßig.
- Deaktivieren Sie drahtlose Funktionen, wie Bluetooth, wenn Sie sie nicht verwenden.
- Wenn sich das Telefon ungewöhnlich verhält, lassen Sie ein Antivirus-Programm durchlaufen, um es auf Viren und Schadsoftware zu überprüfen.
- Lassen Sie ein Antivirus-Programm auf Ihrem Telefon durchlaufen, bevor Sie neu heruntergeladene Anwendungen und Dateien ausführen.
- Nehmen Sie keine Änderungen an den Registrierungsdatenbank-Einstellungen (Registry) oder dem Betriebssystem des Telefons vor.

Pflege und Wartung

Ihr Telefon ist ein technisch fortschrittliches Produkt und ist mit größter Sorgfalt zu behandeln. Fahrlässiges Verhalten kann dazu führen, dass die Gewährleistung erlischt.

- Schützen Sie das Gerät vor Feuchtigkeit. Regen, Schnee, Feuchtigkeit und alle Arten von Flüssigkeiten können Stoffe enthalten, die zu Korrosion der Elektronik führen. Wird das Gerät nass, schalten Sie es sofort aus, entfernen Sie den Akku und lassen Sie das Gerät vollständig trocknen, bevor Sie den Akku wieder einlegen.
- Bewahren Sie das Gerät nicht in staubigen, schmutzigen Umgebungen auf. Die beweglichen Geräteteile und die Elektronik könnten beschädigt werden.
- Schützen Sie das Gerät vor Hitze. Hohe Temperaturen können die Lebensdauer der Elektronik verringern, die Akkus schädigen und Kunststoffteile verformen oder gar schmelzen lassen.
- Schützen Sie das Gerät vor Kälte. Beim Aufwärmen auf normale Temperaturen kann sich im Innern Kondenswasser bilden, das die Elektronik schädigt.
- Versuchen Sie nicht, das Gerät anders als hier beschrieben zu öffnen.
- Das Gerät nicht fallen lassen oder schütteln. Bei grobem Umgang können Leiter und feinmechanische Teile zerstört werden.
- Reinigen Sie das Gerät nicht mit scharfen Mitteln.
- Nicht zerlegen, aufbrechen, verbiegen, deformieren, durchstechen oder zerkleinern.
- Versuchen Sie nicht, das Telefon bzw. den Akku zu verändern, wiederaufzubereiten, in Wasser oder in andere Flüssigkeiten einzutauchen, das Telefon bzw. den Akku Feuer, Explosionen oder anderen Gefahren auszusetzen oder Fremdkörper in den Akku einzuführen.
- Verwenden Sie den Akku ausschließlich für das vorgesehene System, für das der Akku spezifiziert ist.
- Verwenden Sie nur ein Ladesystem, das für dieses Telefonsystem gemäß IEEE-Std-1725 qualifiziert ist. Die Verwendung eines anderen Akkus bzw. Ladesystems kann zu Brand- und Explosionsgefahr sowie zu Undichtigkeit/Auslaufen des Akkus oder anderen Gefahren führen.
- Batterien oder andere metallische leitende Objekte nicht mit den Kontakten des Akkus kurzschließen.

- Ersetzen Sie den Akku nur mit Akkus, die für dieses System gemäß der Norm IEEE-Std-1725 qualifiziert sind. Die Verwendung anderer Akkus kann zu Brand- und Explosionsgefahr sowie zu Undichtigkeit/Auslaufen des Akkus oder anderen Gefahren führen.
- Entsorgen Sie die alten Akkus sofort entsprechend den örtlichen Vorgaben.
- Die Verwendung des Akkus durch Kinder/Minderjährige darf nur unter Aufsicht von Erwachsenen erfolgen.
- Unsachgemäße Verwendung des Akkus kann zu Feuer- und Explosionsgefahr sowie zu anderen Gefahren führen.

Bei Geräten mit USB-Port als Ladequelle: Die Bedienungsanleitung muss einen Passus enthalten, der besagt, dass diese Art von Gerät nur an CTIA-zertifizierte Adapter, an Produkte, die das USB-IF-Logo besitzen oder das USB-IF-Konformitätsprogramm durchlaufen haben, angeschlossen werden darf.

Diese Hinweise gelten für das Gerät, den Akku, den Netzadapter und anderes Zubehör. Funktioniert das Telefon nicht ordnungsgemäß, wenden Sie sich bitte an Ihren Händler. Bringen Sie Ihren Kaufbeleg oder eine Kopie der Rechnung mit.

Garantie

Dieses Produkt hat ab dem Datum des Erwerbs eine Garantie für die Dauer von 24 Monaten und für Original-Zubehör, das mit Ihrem Gerät mitgeliefert werden kann (dazu gehören beispielsweise der Akku, das Ladegerät, die Ladestation oder die Freisprechanlage), für die Dauer von 12 Monaten. Sollte innerhalb dieses Zeitraums entgegen aller Wahrscheinlichkeit ein Fehler auftreten, wenden Sie sich bitte an die Stelle, wo Sie dieses Gerät gekauft haben. Für den Anspruch auf sämtliche Dienstleistungen oder Hilfsmaßnahmen innerhalb dieser Garantiezeit ist die Vorlage des entsprechenden Kaufbelegs erforderlich.

Diese Garantie gilt nicht bei Fehlern, die durch Unfälle oder ähnliche Vorfälle oder Schäden, das Eindringen von Flüssigkeit, Fahrlässigkeit, unsachgemäßen Einsatz, mangelnde Wartung oder andere Umstände von Seiten des Benutzers entstanden sind. Sie gilt ferner nicht bei Störungen, die durch Gewitter oder andere Spannungsschwankungen verursacht werden. Zur Vorsicht empfehlen wir, das Ladegerät während eines Gewitters vom Telefon zu trennen.

Bitte beachten Sie, dass dies eine freiwillige Garantie des Herstellers ist und zusätzlich zu den gesetzlichen Rechten des Endnutzers Rechte bietet und diese nicht beeinträchtigt.

Diese Garantie gilt nicht, wenn andere Akkus als die Originalakkus von DORO verwendet wurden.

Specifications

Network bands (MHz)
[maximum radio-frequency power/dBm]:

2G GSM

850 [33], 900 [33],
1800 [30], 1900 [30]

3G UMTS	1 (2100) [24], 2 (1900) [24], 8 (900) [24]
4G LTE FDD	1 (2100) [24], 3 (1800) [24], 7 (2600) [24], 8 (900) [24], 20 (800) [24]
Wi-Fi (MHz) [maximum radio-frequency power/dBm]:	WLAN IEEE 802.11 b/g/n, (2412 - 2472) [15]
Bluetooth (MHz) [maximum radio-frequency power/dBm]:	4.2, (2402 - 2480) [10]
GPS receiver:	Category 3
Operating system:	DorOS
SIM card size:	nano-SIM (4FF)
Dimensions	109 mm x 57 mm x 21 mm
Weight	124 g (including battery)
Battery	3.7 V / 1350 mAh Li-ion battery
Operating ambient temperature	Min: 0° C (32° F) Max: 40° C (104° F)
Charging ambient temperature	Min: 0° C (32° F) Max: 40° C (104° F)
Storage temperature	Min: -20° C (-4° F) Max: 60° C (140° F)

Urheberrecht und andere Informationen

Bluetooth® ist ein eingetragenes Warenzeichen der Bluetooth SIG, Inc.

vCard ist eingetragenes Warenzeichen des Internet Mail Consortium.

Wi-Fi ist ein Warenzeichen oder ein eingetragenes Warenzeichen der Wi-Fi Alliance.

microSD ist ein Warenzeichen der SD Card Association.

Java, J2ME und alle anderen Java-basierten Marken sind Warenzeichen oder eingetragene Warenzeichen von Sun Microsystems, Inc. in den Vereinigten Staaten und anderen Ländern.

Die Inhalte dieses Dokuments werden „wie besehen“ im gegenwärtigen Zustand zur Verfügung gestellt. Es wird weder ausdrücklich noch stillschweigend irgendeine Gewährleistung für die Richtigkeit oder Vollständigkeit des Inhalts dieses Dokuments übernommen, einschließlich, aber nicht beschränkt auf die stillschweigende Garantie der Markttauglichkeit und der Eignung für einen bestimmten Zweck. Doro behält sich das Recht vor, jederzeit ohne vorherige Ankündigung Änderungen an diesem Dokument vorzunehmen oder das Dokument zurückzuziehen.

Google, Google Maps™, Gmail, Google Calendar, Google Checkout, Google Talk, YouTube, das YouTube Logo, Picasa und Android sind Warenzeichen oder eingetragene Warenzeichen von Google LLC.

Dieses Produkt ist lizenziert unter MPEG-4 Visual und AVC Patent Portfolio Licenses für den privaten und nicht kommerziellen Gebrauch durch einen Verbraucher zur (i) Videokodierung gemäß dem MPEG-4 Visual Standard ("MPEG-4 Video") oder dem AVC Standard

("AVC Video") und/oder (ii) Dekodierung eines MPEG- 4 oder AVC Videos, das durch einen Verbraucher in einem privaten und nicht kommerziellen Rahmen kodiert wurde und/oder bei einem Videoanbieter erworben wurde, der durch MPEG LA lizenziert ist, MPEG-4 und/oder AVC-Videos anzubieten. Es wird keine Lizenz für jegliche andere Nutzung gewährt oder impliziert. Weitere Informationen, einschließlich Informationen über den verkaufsfördernden, internen und kommerziellen Gebrauch sowie Lizenzierung erhalten Sie bei MPEG LA, L.L.C. Siehe <http://www.mpegla.com>. Die MPEG Layer-3 Audiodekodierungstechnologie ist von Fraunhofer IIS und Thomson lizenziert.

Andere hierin erwähnte Produkt- und Firmenbezeichnungen können Warenzeichen ihrer jeweiligen Besitzer sein.

Jegliche hierin nicht ausdrücklich gewährte Rechte sind vorbehalten. Alle anderen Warenzeichen sind das Eigentum ihrer jeweiligen Besitzer.

In dem nach geltendem Recht größtmöglichen Umfang sind Doro oder seine Lizenzgeber unter keinen Umständen verantwortlich für jedweden Verlust von Daten oder Einkünften oder für jedwede besonderen, beiläufigen, Folge- oder mittelbaren Schäden, wie auch immer diese verursacht worden sind.

Doro gibt keine Garantie bzw. übernimmt keine Verantwortung für die Funktionalität, die Inhalte oder die Endbenutzer-Unterstützung für Apps von Drittanbietern auf Ihrem Gerät. Mit der Verwendung einer App bestätigen Sie die App, wie sie zum gegenwärtigen Zeitpunkt zur Verfügung gestellt wurde („wie besehen“). Doro übernimmt keine Zusicherungen, gibt keine Garantie bzw. übernimmt keine Verantwortung für die Funktionalität, die Inhalte oder die Endbenutzer-Unterstützung für Apps von Drittanbietern auf Ihrem Gerät.

Inhaltsurheberrecht

Das unbefugte Kopieren von urheberrechtlich geschützten Materialien ist gegen die Bestimmungen des Urheberrechts der Vereinigten Staaten und anderer Länder. Dieses Gerät ist nur zum Kopieren nicht urheberrechtlich geschützter Materialien bestimmt sowie von Materialien, für die Sie das Urheberrecht haben oder Materialien, für die Sie die Befugnis oder das gesetzliche Recht zum Kopieren haben. Wenn Sie im Zweifel darüber sind, ob Sie jegliches Material kopieren dürfen, wenden Sie sich bitte an Ihren Rechtsberater.

Open-Source-Lizenzen

Sie haben Anspruch auf eine Kopie des Software-Quellcodes unter einer Open Source-Lizenzvereinbarung, die sie dazu berechtigt, den Quellcode für diese Software (zum Beispiel GPL oder LGPL) auf einem dafür geeigneten Medium gegen Zahlung einer Verwaltungsgebühr zur Deckung der Doro AB entstandenen Kosten für Vertrieb und Medien zu erhalten. Bitte richten Sie Anfragen dieser Art an: Doro AB, Open Source Software Operations, Jorgenkocksgatan 1B, SE 211 20 Malmö, Sweden. Eine derartige Anfrage muss, um gültig zu sein, innerhalb von drei (3) Jahren ab Datum des Vertriebs dieses Produkts durch Doro AB erfolgen bzw. im Fall von Code unter GPL v3-Lizenz sind derartige Anfragen solange möglich, wie Doro AB Ersatzteile oder Kundendienst für dieses Produktmodell anbietet.

Kompatibilität mit Hörgeräten

Hinweis! Um das Telefon für Hörgeräte kompatibel zu machen, müssen Sie die Bluetooth-Konnektivität ausschalten.

Dieses Telefon ist kompatibel mit Hörgeräten. Die Hörgerätekompatibilität stellt keine Garantie dar, dass bestimmte Hörgeräte zusammen mit einem bestimmten Telefon funktionieren. Mobiltelefone enthalten Funksender, die die Leistung von Hörgeräten beeinträchtigen können. Dieses Telefon wurde für den Gebrauch mit Hörgeräten mit der vom Telefon verwendeten Drahtlos-Technologie geprüft, doch existieren ggf. neuere Drahtlos-Technologien, die noch nicht für den Gebrauch mit Hörgeräten geprüft wurden. Um sicherzustellen, dass ein bestimmtes Hörgerät mit diesem Telefon gut funktioniert, testen Sie beide zusammen, bevor Sie es erwerben.

Der Standard für Hörgerätekompatibilität umfasst zwei Kennzeichnungsarten:

- **M:** Um Ihr Hörgerät in diesem Modus zu verwenden, achten Sie darauf, dass es auf „M-Modus“ oder den akustischen Kopplungs-Modus eingestellt ist, und positionieren Sie den Telefonhörer in der Nähe des integrierten Mikrofons des Hörgerätes. Probieren Sie verschiedene Ausrichtungen des Telefons zum Hörgerät aus, um ein optimales Ergebnis zu erhalten - zum Beispiel bewirkt eine Hörerposition leicht oberhalb des Ohres ggf. eine bessere Leistung bei Hörgeräten, deren Mikrofone sich hinter dem Ohr befinden.
- **T:** Um Ihr Hörgerät in diesem Modus zu verwenden, achten Sie darauf, dass es auf „T-Modus“ oder den Telefonspulen-Kopplungs-Modus eingestellt ist (nicht alle Hörgeräte verfügen über diesen Modus). Probieren Sie verschiedene Ausrichtungen des Telefons zum Hörgerät aus, um ein optimales Ergebnis zu erhalten - zum Beispiel bewirkt eine Hörerposition leicht unterhalb oder vor dem Ohr ggf. eine bessere Leistung.

Ihr Gerät erfüllt M4/T4 die Einstufung der Funkwellenbelastung.

Spezifische Absorptionsrate (SAR)

Dieses Gerät erfüllt die internationalen Sicherheitsvorschriften für die Funkwellenbelastung. Ihr Mobiltelefon ist ein Funkwellensender- und -empfänger. Es ist so entwickelt, dass es die von der unabhängigen wissenschaftlichen Organisation ICNIRP (International Commission of Non-Ionizing Radiation Protection, dt. Internationalen Kommission für den Schutz vor nichtionisierender Strahlung) empfohlenen Grenzwerte für Funkwellen nicht überschreitet.

Der Richtlinien für Funkwellenexposition basieren auf einem Maß, das als spezifische Absorptionsrate oder SAR bekannt ist. Der SAR-Grenzwert für mobile Geräte beträgt 2 Watt/Kilogramm (W/kg) als Durchschnittswert pro 10 Gramm Körpergewebe. Die Belastungsgrenzen liegen innerhalb eines breiten Sicherheitsrahmens, mit dem die Sicherheit der Bevölkerung unabhängig von Alter oder Gesundheitszustand gewährleistet werden soll.

SAR-Prüfungen werden in standardmäßig geltenden Betriebspositionen durchgeführt, wobei das Gerät über alle geprüften Frequenzbänder bei höchstem bauartgeprüften Leistungspegel übermittelt. Der maximale SAR-Wert gemäß den ICNIRP-Richtlinien für das Gerät beträgt:

Kopf SAR: 0,625 W/kg

Körper SAR: 1,621 W/kg

Bei normaler Verwendung des Geräts liegen die SAR-Werte für dieses Gerät normalerweise weit unter den oben angegebenen Werten. Dies liegt daran, dass aus Gründen der Systemeffizienz und der Minimierung von Störungen des Netzwerks die Ausgangsleistung Ihres Mobiltelefons automatisch verringert wird, wenn für das Gespräch nicht die volle Leistung benötigt wird. Je geringer die Ausgangsleistung, desto geringer auch der SAR-Wert.

Dieses Telefon entspricht den Richtlinien hinsichtlich HF-Exposition bei normaler Benutzung am Ohr oder bei Positionierung mit 0,5 cm Abstand zum Körper. Wenn eine Gürteltasche, ein Gürtelclip oder eine Halterung verwendet wird, um das Gerät am Körper einzusetzen, sollte diese Vorrichtung kein Metall enthalten, und das Gerät sollte mindestens den oben angegebenen Abstand zum Körper haben.

Die Weltgesundheitsorganisation WHO hat ausgewiesen, dass es gemäß dem aktuellen wissenschaftlichen Informationsstand keinen Bedarf für spezielle Vorsichtsmaßnahmen bezüglich der Verwendung von Mobiltelefonen gibt. Wenn Sie die Exposition reduzieren wollen, empfiehlt die WHO, die Nutzung einzuschränken oder eine Freisprecheinrichtung zu verwenden, um das Gerät von Kopf und Körper fern zu halten.

Ordnungsgemäße Entsorgung des Produkts



(Richtlinie für Elektro- und Elektronikaltgeräte WEEE = Waste Electrical & Electronic Equipment)
(Gilt in Ländern mit einem separaten Sammelsystem)

Die Kennzeichnung auf dem Produkt, auf Zubehörteilen bzw. auf der dazugehörigen Dokumentation oder Verpackung gibt an, dass das Produkt und elektronischen Zubehörteile (z. B. Ladegerät, Headset, USB-Kabel) nicht zusammen mit dem normalen Haushaltsmüll entsorgt werden darf. Um schädliche Auswirkungen auf Umwelt und Gesundheit durch unsachgemäße Entsorgung zu verhindern, verwenden Sie die entsprechenden Rücknahmesysteme, so dass dieses Gerät ordnungsgemäß wiederverwertet und die nachhaltige Nutzung von Rohstoffen gefördert werden kann. Private Nutzer wenden sich an den Händler, bei dem das Produkt gekauft wurde, oder kontaktieren die zuständigen Behörden, um in Erfahrung zu bringen, wo und wie sie das Gerät auf umweltfreundliche Weise recyceln können. Gewerbliche Nutzer sollten sich an Ihren Lieferanten wenden und die Bedingungen des Verkaufsvertrags konsultieren. Dieses Produkt und elektronische Zubehörteile dürfen nicht zusammen mit anderem Gewerbemüll entsorgt werden. Dieses Produkt ist RoHS-konform.

Ordnungsgemäße Entsorgung der Akkus in diesem Produkt



(Gilt in Ländern mit einem separaten Sammelsystem)

Die Kennzeichnung auf dem Akku bzw. auf der dazugehörigen Dokumentation oder Verpackung gibt an, dass der Akku zu diesem Produkt nicht zusammen mit dem normalen Haushaltsmüll entsorgt werden darf. Wenn der Akku mit den chemischen Symbolen Hg, Cd oder Pb gekennzeichnet ist, liegt der Quecksilber-, Cadmium- oder Blei-Gehalt der Batterie über den in der EG-Richtlinie 2006/66 festgelegten Referenzwerten. Wenn Akkus nicht ordnungsgemäß entsorgt werden, können sie der menschlichen Gesundheit bzw. der Umwelt schaden.

Bitte helfen Sie, die natürlichen Ressourcen zu schützen und die nachhaltige Wiederverwertung von stofflichen Ressourcen zu fördern, indem Sie die Akkus von anderen Abfällen getrennt über Ihr örtliches kostenloses Altbatterie-Rücknahmesystem entsorgen.

Konformitätserklärung

Hiermit erklärt Doro, dass dieses Funkgerät DFC-0270 (Doro 7030) den folgenden Richtlinien entspricht: 2014/53/EU und 2011/65/EU einschließlich der delegierten Richtlinie (EU) 2015/863 zur Änderung von Anhang II. Der vollständige Text der EU-Konformitätserklärung ist unter folgender URL verfügbar: www.doro.com/dofc.

DFC-0270 (Doro 7030) (4011,4021)

German

Version 1.0

© 2019 Doro AB. All rights reserved.
www.doro.com



REV 19085 – STR 20191025