

AEG	0043, 1423, 5422, 5481, 5609, 6157
GRUNDIG	0096, 0295, 0327, 0351, 0549, 1450, 1609, 1649, 1652, 1693, 1694, 5334, 5864, 6202
HISENSE	0083, 0145, 0352, 0376, 5481, 6157, 6175
LG	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207, 5417, 5443, 5496, 6113
MEDION	0043, 0097, 0209, 0236, 0352, 0552, 1396, 1412, 1435, 1455, 1638, 5422, 5449, 5864
PANASONIC	0260, 0287, 0310, 0349, 0402, 0427, 0518, 1411, 1609, 1626, 1659, 1684, 1712, 2027, 6116

PHILIPS	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705, 5338, 5402, 5418, 5497, 5830, 5834, 5962, 6114, 6210, 6209
SAMSUNG	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267, 5063, 5419, 5441, 5444, 5447, 5451, 5472, 5498, 6111
SHARP	0067, 0149, 0197, 0321, 1307, 1421, 1429, 1624, 1863, 5422, 5455, 5844, 5864, 6114
SONY	0065, 0140, 0149, 0174, 0215, 0339, 0373, 0513, 0785, 1084, 1352, 1356, 1470, 1528, 1656, 1672, 1674, 5414, 5436, 5452, 5499, 6115, 6179, 6117

TELEFUNKEN	0051, 0092, 0094, 0095, 0102, 0107, 0119, 0141, 0164, 0229, 0242, 0378, 0513, 0528, 0540, 0566, 0579, 1191, 1269, 1301, 1616, 1650, 5422, 6114
THOMSON	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026, 5836, 5837
TOSHIBA	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694, 5422, 5448, 5558, 6112, 6121
@DIKON	1551, 1525
A R SYSTEM	0237, 0322, 1636, 0540, 0246, 5422
ACCENT	0322, 0176, 1637, 0540, 0131
ACCUPHASE	0540

ACEC (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
ACER	1363, 1480, 1585
ACOUSTIC SOLUTIONS	5422
ADB	5334
ADMIRAL	0024, 0080, 0222, 0428, 0429, 0440
ADYSON	0505, 0329, 0123
AEA	0513, 0540
AG	0557, 5965, 6165, 6166
AGASHI	0322, 0236, 0513
AGB (SABA)	0024, 0025, 0043, 0051, 0055, 0089, 0090, 0092, 0094, 0095, 0119, 0181, 0229, 0242, 0513, 1626

AGEF (BRUNS)	1632, 0242, 0336, 0363, 1667, 0024, 0077
AIKO	0067, 0513, 1608
AIM	0237, 0329, 0352, 0354, 0508, 0513, 1302
AIOSTAY	0136
AIWA	0529, 0581, 1038
AKAI	0043, 0067, 0074, 0143, 0147, 0162, 0236, 0290, 0296, 0298, 0337, 0345, 0352, 0354, 0361, 0375, 0415, 0431, 0433, 0513, 0515, 0549, 0558, 1243, 1311, 1314, 1396, 1423, 1623, 1636, 1652, 1659, 1684, 5827, 5840, 5864, 5961, 5964, 6120, 6164, 6173, 6174, 6183
AKARI	1321
AKI	0236, 1638
AKIBA	0513, 0540
AKIO	1318

AKIRA	1485, 0141, 1637, 1251, 0374, 0236
AKITA (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
AKITO	0540, 0513
AKTRON (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
AKURA	0143, 0231, 0190, 0322, 0513, 0176, 0236, 0540
ALBA	0300, 0236, 0415, 0513, 1659, 5839, 5864
ALBATRON	1378
ALBIRAL	0025, 0236, 0237, 0513, 0322, 0125, 1659, 1174, 1639
ALBRECHT	1586

ALHORI	0067
ALKOS (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
ALLTEL	0550, 1451, 0145, 1383, 5821
ALLORGAN	0391, 0108, 0067
ALTEK	1494, 1399, 1526, 1392, 1401, 1395, 1546, 5421
ALTUS	0557, 1603
AMBASSADOR	0196
AMPLIVISION	0067, 0237
AMSTRAD	0043, 0143, 0196, 0222, 0236, 0322, 0415, 0513, 1343, 1410, 1415, 1423, 1425, 1469, 1559, 1578, 1587, 1588, 1638, 1639, 1666, 1711, 5481, 5851
ANAM	0513, 0540
ANDERSSON	5422
ANEX	1636, 1639

ANGLO	0322
ANIS	0322, 0336
ANITECH	0077, 0114, 0322, 0329, 0424, 0505, 0513, 0540
ANSONIC	0043, 0057, 0077, 0141, 0236, 0322, 0336, 1657, 5422
ANTARES	5469, 5487
AOC	1540
AQP (GRUNDIG)	0096, 0295, 0327, 0351, 0549, 1450, 1609, 1649, 1652, 1693, 1694
ARCAM	0067
ARCELIK	0141, 0230, 0557
ARCENCIEL (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
ARDEM	0141, 0541, 0336, 0557
ARGENTINA	0568, 0569, 0570, 0572

ARISTONA (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
ARPHONE (DESMET)	0025, 0043, 0114, 0230, 0236, 0246, 0513, 1619
ARTHUR MARTIN (SALORA)	0075, 0080, 0082, 0083, 0137, 0147, 0162, 0170, 0178, 0192, 0236, 0390, 0431, 0433, 1016, 1659
ART-TECH	0424, 0513, 1638
ASA	0066, 0136, 0282, 0390, 0513
AS-BERG	0131, 0077, 0302, 0374, 1636, 0513
ASORA	0322

ASHTON (EMERSON)	1638, 0415, 0114, 0490, 0131, 0230, 1639, 0136, 1657, 1658, 1659, 0513, 1363, 0236, 0125, 0097, 0043, 0077, 0024, 1227, 0327, 0547, 0196, 0067, 1317, 0336
ASTRA	0415, 0329, 0296, 0302, 0067, 0654, 1485
ASTRO SOUND	0237, 0230
ASUKA	0067, 0322, 1659
ATAKI	0424
ATEC	1597
ATLANTIC (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
AUDIOLA	5491, 5868

AUDIOSONIC	0513, 0557, 0141, 0067, 0125, 0149, 0111, 1638, 0230, 0123, 0025, 1227, 0077, 1696, 0162, 0322, 0060, 0490, 0424, 0336, 0354, 0545, 0236, 0209, 1636, 0557, 1657
AUDIOTON	0114, 0067, 0125
AUDIOVOX	0572
AURORA	0024, 0067, 0354
AUSIND	0131, 0136, 1126
AUTOVOX	1423, 0123, 0136, 1126, 0131, 1124, 0391, 1126, 1653, 0108, 1367, 0043, 0552, 5449, 6120
AUVISAT	1456
AVERMEDIA	1515
AVIOUS	1550
AWA	0149, 0067, 0354, 0184, 0540, 0513, 0236
AXXWNT	0236
BAIRD	0375, 0378, 1668, 5481

BANG & OLUFSEN	0024, 0398
BARCO	0146, 1128, 0024, 0090
BARCOM	0329
BASIC LINE	0203, 1423, 0513, 0424, 0097, 0043, 0236, 0354, 0373, 0557, 0230, 0141
BASTIDE	0067
BAUMATIC	0322
BAUER	0069, 0114, 0236, 1302
BAUR	0046, 0083, 0133, 0140, 0162, 0165, 0174, 0176, 0178, 0215, 0236, 0259, 0290, 0337, 0351, 0352, 0391, 0434, 0467, 0508, 0528, 1352, 1632, 1637, 1652, 1656, 1676
BAZIN	0067, 0441
BEAUMARK	0547
BEKNTEKNIK	0337, 0207, 1657

BEKO	0141, 0207, 0227, 0230, 0236, 0336, 0540, 0541, 0557, 1400, 1435, 1603, 6202
BELSON	1472
BELSTAR	5422
BENNET	0513, 0540
BENQ	1593
BENSTEN	1511, 0550, 0145, 1491
BEON	0513, 0540
BESTAR	0114, 0336, 0415, 0435, 0540, 0513, 1657
BIAZET	0052, 0236
BIFONIC	0067
BIGSTON	0322, 0354
BINATONE	0067
BLACK DIAMOND	0043, 0540
BLACK STRIP	1608

BLACKWAY	0351
BLAUPUNKT	0039, 0069, 0096, 0102, 0148, 0149, 0165, 0266, 0351, 0522, 1693, 6162, 6185
BALUSONIC	0067
BLOOM	0043, 1386, 1390, 1399, 1415, 1433, 5422, 5481, 5851
BLUEH	5824
BLUE MEDIA	1590
BLUE SKY	0043, 0051, 0065, 0097, 0141, 0236, 0513, 0541, 0549, 0557, 1423, 1425, 1556, 1560, 1603, 1619, 5422, 5481, 5864
BLUE STAR	1648, 1659, 5864
BLUETECH	5825
BLUSENS	6118, 6171, 6172, 6173

BOCA (AMSTRAD)	0043, 0143, 0196, 0222, 0236, 0322, 0415, 0513, 1343, 1410, 1415, 1423, 1425, 1469, 1559, 1638, 1639
BONDSTEC	0125
BOOTS	0067
BOSCH/BAUER	0069
BOSTON	0067, 1621
BOTECH	1575
BPL	0513, 0540
BRANDT	0051, 1435
BRANDT ELECTRONIQUE (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
BRAUN	0067
BRAVO	5456, 5493
BRIGMTON	0067, 0237

BRINKMANN	0513, 0540
BRIONVEGA	0295, 0247, 1367, 1124, 0222, 0024, 0428, 0223, 0440, 1181, 1622
BRITANNIA	0067, 0237
BROKLINE	1319
BROKSONIC	0236, 1323
BROTHER	0043, 0322
BROWN	1317
BRUNS	0242, 0336, 1667, 0024, 0363, 0077, 1623
BSR	0300, 0158, 0329, 1659
BUSH	0097, 0052, 0083, 0043, 0236
CADMOS (DESMET)	0025, 0114, 0230, 0236, 0246, 0513, 1319
CALIFORNIA (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654

CAMPER	0141, 0336, 0513, 1696
CANAIS	0042
CANALERA	1507
CANALSANTE (SIDEK)	0230
CANTON	0252
CANDLE (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207
CAPSONIC	0322, 1636
CARAD	0513, 0540
CARENA	0236, 0540
CARREFOUR	0513, 0540, 5338

CARYONSE (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1633, 1672, 1705
CASCADE	0513, 0540
CASIO	0409, 0540, 1611
CASONIO (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
CAT	1529, 1535, 1536
CATHAT	0513, 0540
CBM	1458
CCE	0513, 0540
CDV	1410, 1464, 5464, 5868, 5872, 6176
CELINT	0052

CENTURION	0513, 0540
CENTURY	0024, 0057, 1227
CEY	1028
CGE	0057, 0102, 0131, 0227, 0298, 0473, 0374, 1636, 1638, 1650, 1659
CGM	0043, 0097, 0227, 0236, 0322, 0336, 0424, 0513, 1657, 1659
CIE	0060, 0196, 0354, 0513
CIHAN	0115, 0230
CINEMA	0043
CITIZEN	1324
CLARITRONIC	1657
CLARIVOX	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1657
CALTRONIC	0540, 5449
CLAYTON	0043, 0230, 0513

COFADEL (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
COLOR MAT	0024
COLUMBIA	0046
COMBITECH (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
COMET	0513, 0536, 1425, 1492
COMPUTRON	0415, 0431, 0513

CONCERTO (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207
CONDOR	0043, 0114, 0131, 0227, 0236, 0259, 0322, 0374, 0424, 0513, 0540
CANFORAMA (SONOLOR)	0431
CONIC	0296, 0329
CONRAC	1435
CONRAD	0043
CONTEC	0322, 0197, 0067, 0540, 0184, 0424
CONTI M.	0236

CONTIN. EDIS. (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
CONTINENTAL	0114, 0549, 1636, 1639
COSMEL	0490, 0513, 0540, 1636
COSMOS	0513
CRC	0046
CROSLEY	0024, 0057, 0115, 0131
CROWN	0043, 0057, 0077, 0097, 0131, 0141, 0236, 0336, 0374, 0540, 0541, 1420, 1639, 1657, 5338, 5422, 5864
CRYSTAL	0043, 0046, 0513, 0592, 1632
CS ELECTRONICS	0067, 0125

CTC CLATRONIC	0057, 0067, 0077, 0114, 0131, 0170, 0227, 0230, 0322, 0236, 0374, 0415, 0424, 0513, 0557, 1423, 1603, 1636
CXC (ERMESON)	0415, 0114, 0490, 0131, 0230, 1639, 0136, 1657, 1658, 1659, 0513, 1363, 0236, 0125, 0097, 0043, 0077, 0024, 1227, 0327, 0547, 0196, 0067, 1317, 0336, 1638
CYMATIC	0025, 0067, 1659
CYV	0513, 0540
D-VISION	0209, 0236, 0352, 0554
DEAWOO	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0153, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644, 5450
DAICHI	0209
DAIMOND	1637
DAINICHI	0067

DALMAN	1453
DANSAI	0067, 0329, 0513, 1608
DANTAX	0043, 1423
DATRONIC (DEAWOO)	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0153, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644
DAWA	0513
DAYMATER (MAGNADYNE)	0024, 0025, 0060, 0077, 0115, 1009, 1639, 1659
DAYTEK	0236, 0572, 1121
DAYTRON	0513, 0540, 1318
DAYTRONIC (DAEWOO)	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0153, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644
DCE	0557, 1603
DE GRAAF	0043

DECCA	0065, 0067, 0176, 0246, 0254, 0302, 0375, 0540, 0541, 1636
DEITRON	0513
DELTON	0057
DEMACOLOR	0236
DENKO	0322
DENTAL (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
DENVER	0043, 1546, 1638, 5609, 6120, 6162, 6190
DESMET	0513, 0236, 0246, 0114, 0025, 0230, 0043, 1619
DEWO	1085
DHS (ASTRA)	0067, 0296, 0302, 0354, 0415, 1485
DIADEM	0440
DIAMAT	0513, 0540

DIAMOND	0047, 0352, 0354, 1112, 1121, 1338
DIBOSS	1516, 1517
DICRA	5405, 5872, 5958, 6159
DIGATRON	0513, 0540
DIGIHOME	0557, 1435
DIGILINE	0043
DIGITOR	0236, 0540, 0555
DIK	0513, 0540
DIKOM	5416, 5437, 5851, 5873, 5888, 5958, 5963, 5965, 6114, 6159, 6189
DIKON	1551
DINASTY	0043, 0354
DISTAR	0236, 1085
DIUANAI	1535, 1587, 5416, 5439, 5484, 5831, 5875, 5965
DIXI	0513, 0540, 1667

DMTECH	1489
DOMEOS	0236, 0434
DOMLAND (DUAL-TEC)	0043, 0047, 0057, 0067, 0097, 0123, 0125, 0133, 0141, 0153, 0158, 0162, 0170, 0196, 0209, 0222, 0230, 0236, 0298, 0312, 0329, 0354, 0391, 0409, 0434, 0513, 0592, 1400, 1636, 1659
DOMOH	0236, 0513, 1639
DORIC	0052
DPM	5446
DTS	0153, 0513
DUAL-TEC	0043, 0047, 0057, 0067, 0097, 0123, 0125, 0133, 0141, 0153, 0158, 0162, 0170, 0196, 0209, 0222, 0230, 0236, 0298, 0312, 0329, 0354, 0391, 0409, 0434, 0513, 0592, 1400, 1636, 1659, 5422, 5449

DUMONT	0024, 0066, 0077, 0115, 0374, 0131, 0136, 0236, 0282, 0390, 0513, 1619, 1636, 1639
DUNAI	1659
DURABRND	0043, 0552, 0557
DUX	0540
DYNAMTIC	0074
DYNATRON (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
EASY LICING	1394, 1398, 1399, 1484, 1525, 5481, 5819, 5823, 2871, 6187
ECCO	1346
ECHOSTAR	0067, 0236

ECO LINE	0236
EDAN LINE	0043, 0236
EDISON	0549
EI	0162, 0227, 0230, 0236, 1423, 1657
EL	1394, 1398, 1399, 1484, 1525, 5481
ELBE	0025, 0043, 0067, 0073, 0170, 0222, 0230, 0233, 0236, 0237, 0255, 0295, 0428, 0429, 0440, 0528, 0541, 1425, 1449, 1450, 1452, 1453, 1454, 1529, 1594, 1595, 1619, 1659, 5481
ELCIT (MAGNADYNE)	0024, 0025, 0060, 0077, 0115, 1009, 1639, 1659
ELEKTA	0424, 0322, 0354, 0046, 0513
ELEKTRONIKA	0516, 1657
ELEKTRONSK A IND.	0025, 0230
ELEMIS	0043, 0230, 0336

ELG	0513, 0540
ELIN	0066, 0067, 0083, 0153, 0162, 0282, 0431, 0513
ELITE	0114, 0322, 0513
ELLEVISION	0322, 0425
ELMAN	0025, 0067, 0077, 0196, 1659, 1700
ELSAY	0236
ELTA	0057, 0067, 0322, 0435, 0513
E-MOTION	6185
EMATEC (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 1703, 2356, 4340, 4341
EMCO (IMPERIAL)	0043, 0057, 0060, 0102, 0131, 0170, 0227, 0236, 0298, 0374, 0435, 0513, 0522, 1227, 1619, 1636, 1650, 1659

EMERSON	0024, 0043, 0067, 0077, 0097, 0114, 0125, 1227, 0131, 0136, 0196, 0230, 0236, 0336, 0327, 0415, 0490, 0513, 0547, 1317, 1363, 1638, 1639, 1657, 1658, 1659
ENGEL	0230, 1563, 1611, 6181
ENZER	0566, 0579, 1332
ENIE	0529
EROICA	0329
ERRES (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0391, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672
ESC	0067, 0336, 0236, 0513, 0540
ESTEL	0230
ETCO	5338

ETRON	0384, 0415, 0513, 1063, 1082, 1648
EULANDER (ELBE)	0025, 0043, 0067, 0073, 0170, 0222, 0230, 0233, 0236, 0237, 0255, 0295, 0428, 0429, 0440, 0528, 0541, 1425, 1449, 1450, 1452, 1453, 1454, 1529, 1594, 1595, 1619, 1659
EUMIG	0114
EUROCOM	0230
EUROLINE	1631, 1636, 5338
EUROMAN	0067, 0322, 0336, 0513
EUROPA	0513, 0540
EUROPHON	0025, 0067, 0077, 0114, 0127, 0230, 0238, 1227, 1659
EUROSTATUS	0643
EUROVISION	1423
EVELUX	0592
EVERLINE	6186

EXCEL	0513, 0540
EXPERT	0153, 0204, 1654
EXQUISIT	0513, 0540
FAGOR	0435, 0513
FAMILY LIFE	0513, 0540
FELIX	0236, 0322, 0415
FENNER	0354, 0424, 0513, 1623
FERGUSON (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
FIDELIS	0043, 0067, 0296
FIDELITY	0067, 0176, 0329, 0391, 0415, 0513, 1713
FILSAI	0067
FINLANDIA	0083

FINLUX	0043, 0066, 0077, 0115, 0127, 0131, 0136, 0137, 0147, 0170, 0230, 0236, 0246, 0282, 0295, 0374, 0375, 0390, 0431, 0433, 0513, 0557, 0558, 1126, 1425, 1603, 1623, 5422, 5481
FIRST LINE	0043, 0057, 0067, 0097, 0114, 0123, 0176, 0177, 0203, 0230, 0237, 0298, 0302, 0352, 0354, 0375, 0391, 0440, 0513, 0541, 0557, 1009, 1420, 1425, 1435, 1453, 1636, 1654, 1659, 5338, 5422
FISHER	0363, 0133, 0066, 0123, 0314, 0115, 0197, 0149, 0184, 0290, 0024, 0391, 0373, 1131, 1657, 1658
FLINT	0073, 0513, 5873, 6160
FLORIDA	0067
FNR	0077
FORCE	1329, 1330

FORGESTONE (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
FORMENTI	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
FORTRESS	0024
FRABA	0236
FRIAC	0077, 0513, 0540
FRONTECH	0057, 0083, 0329, 1659, 1696
FST (DECCA)	0065, 0067, 0176, 0246, 0254, 0302, 0375, 0540, 0541, 1636
FUJI	0424
FUJITECH	0513

FUJITSU	0043, 0077, 0067, 0108, 0153, 0158, 0222, 0236, 0282, 0329, 0513, 1345, 1408
FUMEO	0158
FUNAI	0149, 0230, 0322, 0552, 0557, 1558, 1663, 5422, 5449, 5835
FURICHI	0595
FUSION	0557, 1435
FUTRONIC	0322
FUTURE	0513, 0540
FUTURETECH (EMERSON)	0024, 0043, 0067, 0077, 0097, 0114, 0125, 0131, 0136, 0196, 0230, 0236, 0327, 0336, 0415, 0490, 0513, 0547, 1227, 1317, 1363, 1638, 1639, 1657, 1658, 1659
GALA	0296, 0329
GALACTEX	0067, 0322
GALANT	0415, 0424

GALAXI (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
GALAXY	5458, 5460
GALAXY - GALAXIS	0057, 0067, 0227, 0236, 0374, 0409, 1636
GBC	0060, 0115, 0125, 0197, 0354, 0375, 0415, 0424, 0513, 1489, 1659, 5473
GE	0051, 0242, 0547, 1495
GEANTCASINO (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
GEBER	0162
GEC	0067, 0083, 0189, 0236, 0246, 0375, 0513, 1076, 1372, 1626
GELOSO	0025, 0060, 0080, 0115, 0354, 1659

GENERAL	0046, 0067, 0197, 0209, 0354, 0513
GENERAL CORPORATION	0043, 0067, 0108, 0153
GENERAL TECHNIC	0354
GENESIS	0513, 0540
GENEXXA	0540, 0162, 0390
GERICOM	1383
GIANT	0046, 0067, 0527
GITEM	0046, 0242, 1609, 1636
GM - GMC	0322, 0513, 1663
GOLD	1526, 5420, 5845, 5851, 5866, 5870
GOLT TOP	0424
GOLDFUNK	0094
GOLDHAND	0067
GOLDLINE	0073

GOLDSTAR (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0513, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207
GOLDTECH	0043, 0097, 0236
GOLDVISION	0123, 0236, 0322, 0424, 0505, 0513, 0557, 1636
GOODMANS	0043, 0051, 0067, 0097, 0141, 0209, 0242, 0322, 0327, 0352, 0354, 0415, 0513, 0541, 0545, 0554, 1423, 1603, 1608, 1636, 1659, 5422, 5481
GORENJE	0051, 0236, 0516, 0592, 1296, 1423, 1657, 1658
GPM	0322, 0329
GRADIENTE	0502

GRAETZ (ITT)	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713
GRANADA	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713
GRANDEN (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
GRANDIN	0043, 0073, 0114, 0141, 0170, 0209, 0230, 0236, 0352, 0422, 0424, 0541, 0557, 1354, 1383, 1412, 1425, 1438, 1453, 1548, 1549, 1564, 1569, 1603, 1654, 5864
GRADIENTE	0502

GREAT WALL	0322, 0490
GRENADIER	0230, 0513, 0547, 1174
GRONIC	0067, 0230, 0238, 1174, 1659
GRUNDIG	0096, 0295, 0327, 0351, 0549, 1450, 1609, 1649, 1652, 1693, 1694, 5334, 5864, 6202
GTRONIC	0236, 1084
GUTTA	1084
GTT	0043, 0236, 0374, 0424, 1638
H & B	0043
HADOR	1338
HAIER	0209, 5474
HALIFAX	0322
HAMMERSTEIN	0067, 0322, 0384, 0422, 1082
HAMPTON	0067, 0115
HANNOVER	1420

HANNSPREE	5819, 5822, 5867, 5960
HANSEATIC	0025, 0067, 0114, 0162, 0195, 0209, 0230, 0236, 0296, 0336, 0391, 0424, 0435, 0513, 0554, 0557, 1601, 1638, 1639, 1644, 1693
HANTAREX	0025, 0077, 0238, 1383, 1436, 1636
HARROW	0043
HARWOOD	0513, 0540
HAUPPAGE	0513, 0540
HB	0557, 1400, 1459, 1489, 1603, 5422
HCM	0123, 0322, 0424, 0513, 0543, 0540, 1659
HEDZON	0513, 0540
HEIRU	0322

HELECTRONIC (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
HEMMERMANN	0077, 0127, 0391, 1009
HENA	0513
HEXA	0204, 0230
HIFIVOX (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
HIGASHI	0067
HIGHIWA (KAISUI)	0424, 0067, 0236, 0415, 0073, 1420
HIGHLINE	0513, 0540
HIKONA (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
HILINE	0236, 0322, 0415

HINARI	0065, 0080, 0322, 0327, 0329, 0363, 0513, 5864
HISAWA	0073, 0236, 0557
HISENSE	0083, 0145, 0352, 0376, 5481, 6157, 6175
HISHITO (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
HISONIX	0415
HIT	0024
HITACHI	0037, 0043, 0052, 0067, 0082, 0083, 0094, 0095, 0119, 0137, 0142, 0147, 0160, 0178, 0189, 0197, 0209, 0285, 0296, 0326, 0329, 0358, 0431, 0433, 0473, 0499, 0525, 0547, 0554, 0569, 1016, 1076, 1254, 1259, 1369, 1423, 1501, 1626, 1643, 1644, 5422, 6114, 6201
HITSU	0073, 0513

HOHER	0043, 1516, 1400, 0170, 1603, 1383, 1423, 5422
HOME ELECTRONICS	1437
HORIZONT (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
HORNYPHON	0513, 0540
HOSHAI	0043, 0097, 0424
HOSPITALIERE	0043
HOWELL	0043
HUMAX	5818
HYD	1467, 1550
HYPER	0067, 0125, 0230, 0236, 0322, 0329, 0336, 0415, 0424, 0435, 0497, 0513, 1638, 1639, 1659

HYPSON	0025, 0043, 0097, 0141, 0170, 0209, 0236, 0336, 0557, 1425, 1434, 5422, 5864
I CAN	5334
I.V.	0513
IBERIA	0428, 0513
IBERVISAO	0391
ICE	0046, 0057, 0067, 0236, 0322, 0415, 0540
ICS	0067, 0322
IEG	0067
IJOY	6170
IKEA	6208
IMC	0058
IMPER	0032
IMPERIAL	0043, 0057, 0060, 0102, 0131, 0170, 0227, 0236, 0298, 0374, 0435, 0513, 1227, 1619, 1636, 1650, 1659, 5468, 5492, 5494

INCOBE	0123, 0290
INDESIT	0107
INDIANA	0513
INGELEN	0162
INGERSOLL	0513
INNO HIT	0025, 0043, 0067, 0075, 0077, 0115, 0209, 0227, 0296, 0332, 0375, 0375, 0424, 0513, 1423, 1633, 1638, 1639, 2058, 4367, 5422, 5965
INNOVATION	0513, 0540
INTERBUY	0125, 0176, 0322, 0415, 0505, 0540
INTERDISCOUN T	0092, 0119, 0242, 1352, 1636, 5338
INTERACTIVE	0176, 0513, 0540
INTERECCORD	0133

INTERFUNK	0042, 0046, 0047, 0062, 0069, 0079, 0092, 0096, 0162, 0302, 0352, 0374, 0513, 1617, 1626, 1632, 1636, 1654
INTERNAL	0513, 0540
INTERVISION	0046, 0067, 0077, 0209, 0322, 0351, 0435, 0505, 0540, 0542, 1657, 1659
INTRON	0322
INWAH	0209
IRRADIO	0043, 0075, 0097, 0125, 0136, 0230, 0236, 0322, 0296, 0329, 0415, 0513, 0528, 0557, 1084, 1126, 1269, 1296, 1439, 1400, 1459, 1516, 1517, 1525, 1612, 1636, 1638
ISKRA	0025, 0067, 1659
ITSUKAI	0424, 0513
ITAL TV	6203
ITC	0067, 0230, 0236

ITS	0067, 0236, 0322, 0415, 0540
ITT	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713
ITT / NOKIA	5415, 5422, 5481, 5823, 5864, 5877, 6114, 6178, 6183, 6190
ITV	0060, 0322, 0354, 0540
IZUMI	6182
JEC (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
JET POINT	0384, 1636
JMB	0513, 0540
JOCEL	0236, 0435
JOHNSON	0067

JPS	0505
JQ	5415, 5468
JRC	0435
JUBILEE	0540
JVC	0167, 0316, 0404, 0502, 1470, 1479, 1622, 1696, 1697
KABEL	0300
KAIDO	0083
KAISER	0424, 0513
KAISUI	0067, 0073, 0236, 0415, 0424, 1420
KAMAR	0515
KAMOSONIC	0123
KAMBROOK	0067, 0119, 0230, 0322

KAMP (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
KANGSLEY (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 1637, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1639, 1654
KAOSHO (SAMSUNG)	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267
KAPSCH (ITT)	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713

KARCHER	0067, 0209, 0236,3 0237, 0238, 0424, 0435, 0513, 0516, 1636
KATHREIN	0513
KAWA	0415
KAWASHO (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
KAYA	0322
KB ARISTROCRAT	0162, 0391
KELCINATOR	0062
KEN	1317
KENDO	0043, 0051, 0073, 0077, 0080, 0295, 0300, 0440, 0542, 1227, 1636, 1659, 5422, 5449
KENNEDY	0108, 0115, 0153, 0158, 0222, 0429

KENNEX	0043, 0097, 0209, 0236, 0550, 0552, 0557, 0921, 1423, 4367
KENYA	1327
KERION	0513, 1639
KEYMAT	0117, 0417, 0480, 0517, 0519, 0550, 0553, 0578, 1386, 1388, 1391, 1426, 1496, 1541, 2395, 4551, 5821, 5823
KEYSMART	1400
KIC	0067, 0237, 0515
KIMAY	0322
KINGDHOME	0043
KIOTA	0322, 0415, 1082
KITON	0043, 0513, 0540, 5422
KITT	0067, 0322, 0513
KITTEN	0513
KIYOGIN	0067, 0025, 0237, 1174, 1659

KLARMAX	0073, 0170, 0209, 0233, 0236, 0237, 0295, 0354, 0429, 0513, 0541, 1611
KOBALTRONIC (NEWMAR)	0067, 0123, 1174, 1659
KOLSTER	0067, 0077, 0237, 0322, 0513, 1174, 1227, 1614, 1659
KONG WAM (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
KONKA	0145, 0177, 0352, 0415, 1116, 1261, 1302, 1420
KORPEL	0513, 0540
KONTAKT	0549
KOSMOS	0513, 0540
KOTRON	0230, 0322
KRAKING	0230

KRIESLER (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
KRONNE	0067, 0230
KTV	1500
KUBA ELECTRONIC	0067, 0083, 0133, 0230, 0391
KUCCAI	0097
KURO (SANYO)	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
KYOTO	0230, 0246
L & S ELEKTRONIK	0557
LAVA	1516, 1517

LAVIS	0025, 0162, 1611
LAZER	0236
LCE	0415
LECSO	0513, 0540
LEGEND	0067, 0322, 0490, 0513
LENCO	0043, 0077, 0162, 0236, 0322, 0329, 0354, 0391, 0435, 0513, 5422, 6204
LENOIR	0043, 0067, 0097, 0141, 0322, 0236, 0354, 0409, 0424, 0513, 1009, 1343, 1394, 1396, 1398, 1399, 1400, 1401, 1638, 1639, 5871
LEVIS AUSTRIA	0513, 0540
LEXUS	0074, 0236, 0322
LEYCO	0236, 0322, 1646

LG	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207, 5417, 5443, 5496, 6113
LIFE	1435
LIFETEC	0043, 0097, 0209, 0236, 0322, 0354, 0513, 0536, 0555, 0557, 1638, 5422, 5449
LIGHTSTAR (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
LINTON	0133
LLOYD'S	0067, 0096, 0136, 0322, 0415, 0422, 0515, 1082, 1626
LME (PATH CINEMA)	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
LOCATEL	1579, 1580, 1581, 1582, 1583, 1584

LOEWE	0024, 0047, 0050, 0176, 0246, 0277, 0400, 0402, 0508, 0925, 1570, 1637, 2345, 4257, 4345
LOGIK	0043, 0097, 0374, 0384, 0422, 0513
LOVE (ELBE)	0025, 0043, 0067, 0073, 0170, 0222, 0230, 0233, 0236, 0237, 0295, 0428, 0429, 0440, 0528, 0541, 0255, 1425, 1449, 1450, 1452, 1453, 1454, 1529, 1594, 1595, 1619, 1659
LS ELEKTRONIK	0557
LTV (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
LUMA	0043, 0067, 0080, 0108, 0153, 0158, 0222, 0259, 0295, 0352, 0354, 0513
LUMATRON	0043, 5422
LUXMAY	0490, 0513, 0540

LUXOR	0052, 0075, 0082, 0083, 0123, 0137, 0147, 0162, 0170, 0178, 0192, 0252, 0390, 0431, 0433, 1016, 1704, 1713, 5499
LUXTRONIC	5422
LXI	0547
LYOTRON (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1614, 1659, 3044, 4206, 4207
M.D.C.	1638
MACROM	0480
MADISON	0236, 0540, 1636

MAGAVOX (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
MAGNADYNE	0024, 0025, 0060, 0077, 0115, 1009, 1639, 1659
MAGNAFON	0025, 0067, 0077, 0131, 0238, 1126, 1636, 1639, 1659
MAGNAVOX	0046, 1623
MAGNEX	0322, 1636
MAGNUM	0141, 0255, 0374, 1415, 1638
MAJESTIC	5477, 5478, 5479, 5868, 5875
MAKROSONIC	1324
MANDI	0352
MANDOR	0322

MANESTH	0052, 0067, 0114, 0236, 0322, 0540, 1608, 1623, 1654
MANHATTAN	0043, 0097, 0513, 5422
MARANTZ	0513, 0528
MARECH	0114, 0513
MARK	0336, 0654, 0513
MASCOM	0236
MASCOT	0057
MASUDA	0236, 0300, 0322, 0513
MATCH ITALIA	0322, 0513, 1636
MATSUI	0060, 0065, 0067, 0196, 0236, 0269, 0322, 0300, 0336, 0351, 0397, 0415, 0536, 0549, 1016, 5449, 5839, 5864
MATSUKA	0067, 0322
MATSUVIANA	0528
MAXAM	0322

MAXDORF	0322, 1084
MAXELL	0025, 0329, 0424, 5564, 5842, 5843
MAXWELL	0025, 0077, 0236
MAXIMAL	1648
MB LINE	0322
MC MICHAEL (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
MCE	0322, 0425, 0513
MECOA	0236
MEDIASONIC	0236
MEDIATOR	0513, 0540

MEDION	0043, 0097, 0209, 0236, 0352, 0552, 1396, 1412, 1435, 1455, 1638, 5422, 5449, 5864
MEGATRON	0547
MEGHA	0513
MELBOX (CLARIVOX)	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1667
MELECTRONIC	0060, 0066, 0133, 0136, 0137, 0147, 0181, 0209, 0236, 0282, 0295, 0351, 0354, 0390, 0508, 0513, 0588, 1009, 1614, 1631, 1638, 1644, 1703, 4340, 4341
MELVOX	0025, 0162
MEMOREX	0322
MEMPHIS	0067, 0322, 0490
MERCURY	0046, 0067, 0236, 0237, 0322, 0384, 0515
MERRIT	0162

METEOR	0238
METZ	0024, 0043, 0079, 0097, 0338, 0349, 0351, 0402, 0460, 0462, 0552, 1487, 1499, 1609, 5422
MGA	0322, 0354, 0513, 0547, 1637
MGAON	0322
MICROMAXX	0043, 0236, 0295, 0540
MICRON	0067
MICROSONIC	1131
MICROTEK	0236, 0242, 1084, 1127
MIGROS ELECTR	0295
MINATO	0513, 0540
MINERVA (GRUNDIG)	0096, 0295, 0327, 0351, 0549, 1491, 1450, 1609, 1649, 1652, 1693, 1694
MINERVA FRANCE	0549
MINOKA	0513, 0540

MISTRAL (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
MITRONIC	0329
MITSUBISHI	0024, 0043, 0047, 0065, 0149, 0197, 0230, 0353, 0354, 0425, 0527, 0547, 1379, 1637, 1644, 1661
MITSUTI GENERAL	0233, 0298
MIVAR	0105, 0408, 0025, 0058, 0068, 0067, 0075, 5451, 5605
MKC	0578
MKM	0238
MOBILE TV	0043
MOJAVE	1538
MOTION (UHER)	0077, 0083, 0108, 0114, 0133, 0153, 0176, 0238, 0513, 0540, 1126
MPMAN	5471, 6119

MTC	0083, 0176, 0296, 0336, 1296, 1657, 1659
MULTIMAT	0238
MULTISTANDAR D	0077
MULTITECH	0025, 0043, 0067, 0077, 0125, 0141, 0149, 0162, 0178, 0209, 0230, 0236, 0322, 0336, 0354, 0490, 0513, 0545, 0557, 1227, 1614, 1657, 1696
MURPHY	0083, 1626, 1696
MUSKILAND	0513, 0540
MUSTAG	1121
MYRYAD	0513, 0540
MYTV	6119
MVISION	5488
NAD	0162, 0391, 0547
NAGOYA	0230, 0441
NAIKO	0513, 0540

NAKAMURA	0513, 0540
NAONIS (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
NARITA	0067, 0322, 0354, 0547
NASSA NAGEL (ENGEL)	0230, 1611
NATIONAL	0310, 0518
NEC	0149, 0065, 0427, 1418, 0472, 0447, 0430, 1336, 0237, 0354, 0513, 5822, 5867
NECKERMANN	0024, 0046, 0047, 0057, 0060, 0069, 0080, 0083, 0114, 0133, 0140, 0148, 0167, 0170, 0174, 0176, 0178, 0195, 0209, 0215, 0227, 0230, 0236, 0295, 0300, 0312, 0337, 0351, 0352, 0374, 0409, 0467, 0508, 0513, 0540, 0541, 0555, 0588, 1352, 1609, 1629, 1361, 1632, 1636, 1638, 1639, 1656, 5338

NEI	0043, 0230, 0236, 0435, 0490, 0541, 0513, 1636, 1659
NEO	6114, 6203
NEOVIA	1301, 1383, 1459, 1450, 1516, 1517, 1542, 1543, 1568, 5468
NESCO	0125, 0312, 0327, 0375, 0440
NETSAT	0513, 0540
NEUFUNK	0043
NEVIR	6120, 6161, 6190, 6203
NEWGOLDVISIO N (SONOKO)	0123, 0236, 0322, 0424, 0505, 0513, 0557, 1636
NEWMAR	0067, 0123, 1174, 1659
NEWORLD (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
NEWTECH	0067, 0236, 0242
NEXIUS	0588, 1393, 1422, 1425
NEXTIER	1518

NFREN	1555
NICAMAGIC (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
NIKKAI	0067, 0082, 0141, 0322, 0329, 0513
NIKKEI	0043, 0097, 0170, 0322, 1399, 1425, 1467, 1550, 1537, 1636, 5481, 5609, 5825, 5839, 5851, 5872, 5957, 6190
NIKKO	0513, 0547
NIKKEY	5483
NISSAN	0384
NOBLEX	0149, 0184, 0197, 0354, 0415, 0422, 1327, 1661
NOBLIKO	0067, 0131, 0136, 1126, 1227

NOGAMATIC (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
NOKIA	0043, 0066, 0147, 0162, 0236, 0252, 0322, 0390, 0431, 0433, 0558, 1423, 1704, 5500
NORDING	0077, 0131
NORDLAND	0230
NORDMENDE	0049, 0052, 0062, 0090, 0092, 0094, 0095, 0115, 0119, 0170, 0229, 0242, 0352, 0424, 0455, 0557, 1045, 1400, 1422, 1423, 1425, 1435, 5415, 5486, 5492, 5819, 5823, 5832, 5833, 5864, 5871, 6188, 6203

NORDTON (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
NORDWAY	0298, 1657
NORFOLK	0441
NORM N	1636
NORMEREL	0540, 1630
NORTEK	0097, 0141, 1636
NORTON	0424
NORWAY	0298, 1657
NOVA	0329
NOVAK	0513, 0540
NOVATRONIC	0209, 0236, 0322, 0329, 0354, 0513, 1636
NUCLEAR (PRANDONI)	0077, 0080, 0083, 0097, 0115, 0302, 0352, 0592, 1126, 1227

O GENERAL	0149
OCEANIC	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341, 5468
OCTAL	0067
OCTAN (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
ODEON (AGASHI)	0236, 0322, 0513
OEC ELECTRONIC	0329, 1494
OK	6212
OKANO	0227, 0302, 0513
OLIDATA	1378
OLIVETTI	1379

OLMAL (ALBIRAL)	0025, 0236, 0237, 0513, 0322, 0125, 1659, 1174, 1639
OLYMPIA	1423
OLYMPIC	0424
OMEGA	0322, 0415
ONCEAS	0060, 0067
ONDIOLA	0236
ONIDA	0302
ONWA	0077, 0322, 0361, 0415
OPERA	0513, 0540
OR - ON	0424
ORAVA	0024, 0230, 0236, 0513, 0541
ORBISAT	0067
ORBIT	0513

ORION	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623, 5423, 5437, 5864, 6177
ORION (HUNGARY)	0046, 0119, 0203, 0236, 0269, 0415, 0441, 0513, 1059
ORLINE	0513, 0540
ORMOND	0043, 0097, 0513
ORSOWE	0025
OSAKA (SHORAI)	0195
OSAKI	0043, 0067, 0195, 0513
OSIO	0075, 0513
OSUME	0540
OTAKE	0195, 0300
OTF	0046, 1659

OTHER	5013, 5023, 5063
OTHER LINE	0025, 0067, 0236, 0435
OTTO VERSAND	0046, 0047, 0067, 0083, 0114, 0125, 0127, 0133, 0140, 0162, 0174, 0176, 0177, 0178, 0189, 0195, 0197, 0209, 0230, 0233, 0236, 0242, 0296, 0300, 0310, 0321, 0326, 0337, 0351, 0352, 0391, 0409, 0415, 0418, 0427, 0434, 0435, 0508, 0153, 0540, 0555, 1352, 1609, 1629, 1632, 1652, 1656, 1683, 1684
OVP	0236, 0513
PACIFIC	0513
PAEL	0067, 0096, 1126
PALLADIUM	0024, 0069, 0080, 0083, 0114, 0148, 0174, 0176, 0209, 0227, 0295, 0409, 0513, 0555, 0588, 1609, 1631, 1632, 1636
PALSONIK	0067, 0302, 0322, 0329

PANAMA	0057, 0067, 0236, 0322, 0513, 0540
PANASONIC	0260, 0287, 0310, 0349, 0402, 0427, 0518, 1411, 1609, 1626, 1659, 1684, 1712, 2027, 6116
PANAVISION	0236, 0123, 0424, 0572, 1121, 1131, 1325, 1326, 1446, 1447
PANDA	0310
PANORAMA	0067, 0505, 0536
PANORAMIC	0091
PATH CINEMA	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
PATH MARCONI (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
PCM	0114, 0236, 1639
PEACOCK	0046, 0067

PEEKTON	6161
PEONY	0425, 0527
PERDIO	0513
PERFEKT	0513
PERSHIN	0096, 0204
PHILHARMONIC	0060, 0067
PHILBIX (DESMET)	0025, 0043, 0114, 0230, 0236, 0246, 0513, 1619
PHILCO	0024, 0057, 0060, 0102, 0115, 0131, 0149, 0227, 0298, 0374, 0435, 0513, 0572, 1326, 1611, 1636, 1659
PHILIPS (F) (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705

PHOENIX	0043, 0046, 0114, 0115, 0236, 0238
PHONOLA (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1561, 1605, 1607, 1617, 1618, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
PIONEER	0095, 0119, 0162, 0170, 0302, 0464, 1508, 5817, 5820
PLANTRON	0322, 0513
PLASMATECH	1383, 1436
PLATINIUM	1509
PLAYDOR	0322
PLAYSONIC	0024, 0123, 0237, 0513
POLYTRON (KATHREIN)	0513

POP	0095, 0322
PORTLAND	0209, 0354, 0471, 1638
POWERPOINT	0513, 0540
PRANDONI	0025, 0043, 0077, 0080, 0083, 0097, 0115, 0302, 0352, 0592, 1126, 1227
PRECISION	0067, 0329
PREMIER	0322, 1116
PRIMA	0067, 0322, 0329, 0505
PRINCE (PRANDONI)	0025, 0043, 0077, 0080, 0083, 0097, 0115, 0302, 0352, 0592, 1126, 1227
PRINCESS	0329, 1425
PRINSTON	0141

PROCYON (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0532, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
PREFESSOR	0046
PROFEX	0131, 0162, 0230, 0298, 0435, 1696
PROFILINE	0043
PROFILO	0025, 0236, 0513
PROFITRONIC	0077, 0540, 1636
PROLINE	0043, 0295, 0554, 0375, 0230, 0418, 1619, 0170, 0540, 0513
PROSONIC	0236, 0415, 1638, 5338, 5437

PROTECH	0067, 0097, 0230, 0236, 0322, 0336, 0374, 0513, 1357, 1631, 1636, 1638, 1639, 5338
PROTEK	5822, 5867
PROTON	0547
PROVISION	0236, 0322, 0354, 0390, 0409, 0513, 0540, 1320
PVISION	1489, 5876
PYE (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
PYGMY	0024, 1621
QBELL	5416, 5822, 5867, 5874, 5963
QMEDIA	5965, 6170, 6184
QUADRAL	0074

QUADRIGA	0147, 0584
QUADRO	0043, 0074, 0552, 0566, 0579, 1112, 1410, 1423, 1502, 1503, 1505, 1506
QUALCRAFT	0329
QUASAR	0025, 0077, 0131, 0136, 0196, 0237, 0238, 0329, 1126, 1383
QUEENFIDELITY (DAEWOO)	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0513, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644

QUELLE	0043, 0046, 0047, 0065, 0066, 0067, 0069, 0074, 0075, 0077, 0083, 0094, 0096, 0097, 0102, 0108, 0123, 0125, 0136, 0137, 0140, 0147, 0148, 0149, 0162, 0164, 0167, 0174, 0176, 0184, 0195, 0196, 0197, 0215, 0222, 0230, 0236, 0242, 0259, 0282, 0287, 0290, 0295, 0296, 0298, 0300, 0302, 0310, 0312, 0322, 0326, 0329, 0337, 0339, 0351, 0352, 0375, 0390, 0391, 0409, 0418, 0427, 0431, 0433, 0434, 0471, 0513, 0516, 0540, 0552, 0555, 0558, 0592, 1126, 1352, 1629, 1632, 1636, 1639, 1649, 1650, 1652, 1653, 1654, 1656, 1657, 1658, 1672, 1674
QUESTAR	0149, 0197
R. LINE	0513, 0540
RADIALVA	0236, 0354, 0540

RADIOLA (PHILIPS)	0024, 0042, 0046, 0067, 0111, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1561, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
RADIOMARELLI	0060, 0024, 0077, 0025, 0115, 0230, 0374, 0236, 1009, 1639
RADIONETTE	0066, 0282, 1626, 1654
RDAIOSHACK	0513, 0540, 0547
RADIOTONE	0107, 0227, 0236, 0255, 0322, 0336, 0352, 0513, 0536, 1636, 1638
RANK / RBM	0230, 0295, 0435, 1626, 1696
RANK ARENA	0184
REALISTIC	0547
RECOR	0074, 0176, 0236, 0513, 0540, 1637

RED STAR	0513
REDDER	0197, 0233, 0237
REDIFFUSION	0052, 0162, 5338
REDO	0354
REDPOINT	0549
REFLEX	0043, 0097, 0236, 0513, 0540, 1636, 1639
RELISYS	1383
RENDER	0417, 0550, 1400, 1412, 1428, 1469, 1511, 5415, 5416, 5462
REVOX	0176, 0236, 0540
REX (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
RFT (BRUNS)	0024, 0077, 0242, 0336, 0363, 1623, 1667
RICONH	0513, 0540

RITAR	5445
RITZ	0230
RM 2000	0043, 0097, 0552, 1636, 1639, 5338
ROADSTAR	0043, 0076, 0097, 0141, 0170, 0236, 0352, 0528, 0557, 1343, 1400, 1423, 1435, 1451, 1453, 1469, 1525, 1603, 1623, 1636, 1646, 5451, 5864
ROBOTRON ELECTR	0024, 0363
ROBERTS	0327
RODEX	0513, 0540
ROSNER	0067
ROWA	0067, 0236, 0322, 0528
ROWSONIC	0067
ROYAL	0067, 0236, 0322, 0274, 0424, 0543, 1305, 1420

RUEFACH (LENCO)	0043, 0077, 0162, 0236, 0322, 0329, 0354, 0391, 0435, 0513
RUKOPIR	0513, 0540
RUNCO	1360
SABA	0025, 0043, 0051, 0055, 0089, 0090, 0092, 0094, 0095, 0119, 0164, 0181, 0229, 0242, 0513, 1603, 1626, 5334, 5422, 6114, 6203
SAGEM	0073, 1552
SAINEL	0230
SAISHO	0065, 0067, 0083, 0196, 0237, 0300, 0322, 0354, 0418
SAITO (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 1703, 2356, 4340, 4341
SAIVOD	0043, 0236, 0513, 0540
SAKAI	0067

SAKIO	0322, 0354
SALORA	0052, 0075, 0080, 0082, 0083, 0137, 0147, 0162, 0170, 0178, 0192, 0236, 0252, 0390, 0431, 0433, 1016, 1659, 1703, 1704
SAMBERS	0025, 0077, 0131, 0237, 0238, 0329, 1124, 1126
SAMPO	0046
SAMSUNG	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267, 5063, 5419, 5441, 5444, 5447, 5451, 5472, 5498, 6111
SAND	0170
SANDOR (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
SANDRA COLOR	0025, 0067

SANSUI	0149, 0236, 0322, 0415, 0424, 0513, 0540, 0541, 0557, 0588, 1340, 1423, 1469, 1636, 5338, 5451, 5437, 5827, 5961
SANWA (SANYO)	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
SANYO	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
SAR	0067, 0083, 0513
SATRONIC	0057
SATUM (URANYA)	0025, 0114, 0136, 0227, 0236, 0354, 0513
SAVE	0513, 0540

SAVVILLE (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
SBR (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
SCHAUB	5428
SCHAUB LORENZ	0043, 0052, 0062, 0097, 0147, 0162, 0178, 0227, 0236, 0252, 0322, 0354, 0374, 0384, 0400, 0424, 0431, 0433, 0435, 0508, 0513, 0557, 1393, 1400, 1459, 1469, 1475, 1489, 1603, 1626, 1636, 1638, 1639, 1654, 5609

SCHNEIDER	0042, 0043, 0067, 0077, 0080, 0097, 0115, 0125, 0133, 0141, 0153, 0170, 0209, 0222, 0230, 0236, 0298, 0302, 0329, 0352, 0374, 0391, 0415, 0434, 0513, 0533, 0592, 1269, 1423, 1426, 1496, 1516, 1533, 1623, 1636, 1639, 1648, 1659, 2395, 4551, 5864
SCHNEIDER (F) (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
SCOTLAND (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654

SCOTT	0114, 0327, 0547, 1317, 1638, 1639, 6119
SEARS (SANYO)	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
SEAWAY	0043
SEDIP (PATH CINEMA)	025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
SEELVER	0043, 0513, 0540
SEG	0043, 0046, 0057, 0067, 0077, 0097, 0123, 0131, 0209, 0230, 0236, 0252, 0322, 0329, 0363, 0435, 0513, 0552, 0555, 1227, 1423, 1639, 1659, 5338
SEI (SINUDYNE)	0024, 0043, 0077, 0115, 0127, 0170, 0192, 0195, 0196, 0222, 0236, 0295, 0300, 0352, 0391, 0409, 0471, 0528, 0555, 0581, 0588, 1009, 1022, 1422, 1425, 1430, 1433, 1434, 1565, 1622, 1623, 1624, 1639

SEIGA (MITSUBISHI)	0024, 0043, 0047, 0065, 0149, 0197, 0230, 0353, 0354, 0425, 0527, 0547, 1379, 1637, 1644, 1661
SEIKO	0354
SEITECH	5871
SELECO	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
SELECT	0043
SEMP	0337
SENDAY	0236
SENTRA	0207, 1608
SET	0435, 0513
SHARP	0067, 0149, 0197, 0321, 1307, 1421, 1429, 1624, 1863, 5422, 5455, 5844, 5864, 6114

SHINELCO	5828, 5829, 5841, 5842, 5843, 5850, 5851, 5863, 5869
SHINTOSHI	0513, 0540
SHIVAKI	0111, 0230, 0513, 0540
SHIWAN (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
SHINED	0322
SHORAI	0195
SHOV	0067, 0322, 0415, 0513
SIAREM	0224, 0025, 0077, 0115
SICANTIC (LUXOR)	0052, 0075, 0082, 0083, 0123, 0137, 0147, 0162, 0170, 0178, 0192, 0252, 0390, 0431, 0433, 1016, 1704, 1713
SICE	1652
SIDEC	0230
SIEL	0230

SIEMENS	0039, 0069, 0102, 0148, 0184, 0236, 0329, 0351, 1652
SIEMSEN	5481
SIERA	0513, 0540
SIESTA	0336, 1657
SILVA	0123, 0149, 0298, 0302, 0322, 0329, 0513
SILVER	0149, 0322, 0513, 0540
SIMATEC (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
SIMTEL	0133, 0322, 0424
SINGER	0024, 0025, 0060, 0067, 0077, 0115, 0236, 0415, 0429, 0513, 0540, 1227, 1311, 1638

SINUDYNE	0024, 0043, 0077, 0115, 0127, 0170, 0192, 0195, 0196, 0222, 0236, 0295, 0300, 0352, 0391, 0409, 0471, 0528, 0555, 0581, 0588, 1009, 1422, 1425, 1433, 1434, 1565, 1622, 1623, 1624, 1639, 5338, 5851, 5864, 6177
SINOTECH	0322, 0374, 1084, 1251
SIREL	0025
SKANTIC (LUXOR)	0052, 0075, 0082, 0083, 0123, 0137, 0147, 0162, 0170, 0178, 0192, 0252, 0390, 0431, 0433, 1016, 1703, 1704, 1713
SKAY	0424, 0513, 0540
SKY LINE	0067, 0141
SLAVA	0067
SLIDING	1383, 1412, 1426, 1453, 1496, 1516, 1543, 1549, 1555, 1564, 1569, 2395, 4551

SMARAGD	0549
SMR (MAXWELL)	0025, 0077, 0236
SOLAVOX	0082, 0162, 1648, 1654, 1713
SOMBER (CLARIVOX)	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1667
SONICX	0236
SONIKO	0236, 0540
SONITRON	0024, 0067, 0290
SONNECLAIR	0513, 0540
SONOKO	0123, 0236, 0322, 0424, 0505, 0513, 0557, 1636, 6211
SONOLOR	0162, 0431
SONORO (AGASHI)	0236, 0322, 0513
SONTEC	0125, 0513, 1639, 1657

SONY	0065, 0140, 0149, 0174, 0215, 0339, 0373, 0513, 0785, 1084, 1352, 1356, 1470, 1528, 1656, 1672, 1674, 5414, 5436, 5452, 5499, 6115, 6179, 6117
SOUND COLOR	0043, 0141, 0143, 0170, 0236, 0322, 0415, 0557, 1415, 1603, 1636, 1638
SOUND DESIGN	0547
SOUNDVISION	0077, 0513
SOUNDWAVE	0074, 0322, 0513
SOUNDZONE	5864
SOUTHERN CROSS	1614
SOWTECH	1657
SPARKLE	0513
SPECTRA	0236, 0322, 0354
SPECTRUM	0547

SPORT GENEXXA (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
SSANGYONG (SAMSUNG)	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267
SSS /FUNAI)	0149, 0230, 0322, 0552, 0557, 1558, 1663
STAG (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
STANDARD	0046, 0060, 0067, 0114, 0513
STAR	0236, 5470, 5475
STARLINE	0236
STARLITE	0322, 1638
STARLUX	0067, 0513

START	0513
STASSFURT (BRUNS)	0024, 0077, 0242, 0336, 0363, 1623, 1667
STENWAY	0424
STERLING	0043, 0352
STERN (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
STRATO	0322, 0513, 0540
STRONG	1586, 5467
STT SONIG	0046
STV	0162
STVI	0067, 0230
SUNIC LINE	0513
SUNKAI	0043, 0073, 0177, 0195, 0300, 0447, 0513, 0549
SUNNY	0415

SUNNYSKY	5433
SUNSTAR	0043, 0236, 0322, 1639
SUNWATT	0046
SUNWOOD	0513
SUPERLA	0025, 0230
SUPERSONIC	0236, 0322, 0415, 1637
SUPERTECH	0236, 0298, 0415, 0513, 1638, 1646
SUPERTONE (PATH CINEMA)	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
SUPRA	0067, 0123, 0322, 0329, 0354, 0422, 0547
SUPREME	0060, 0136
SWISSTEC	5819, 5821
SYCLINE	0067
SYDNEY	0067
SYSLINE	0513, 0540
SYTEL (DESMET)	0025, 0043, 0114, 0230, 0236, 0246, 0513, 1619

TADISTAR	0374
TAISHO	0230
TAKARA	0043
TALENT	1085
TALITA (CLARIVOX)	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1667
TAMASHI	1323
TANDBERG	0024, 0050, 0092, 0094, 0222, 0246, 0295, 0349, 0440
TANDY	0067, 0080, 0083
TASHIKO	0080
TASTER	0046, 0322
TAUTO	0541
TCL	1523
TATUNG	0375, 0246, 0067, 0375, 0176, 0236, 0254, 0065, 0513, 0242, 1636

TCM	0209
TD DESIGN	0176
TDA	0557
TEAM	0424
TEAC / TEAK	0043, 0046, 0047, 0222, 0391, 0562, 1269, 1510, 1607, 1637, 5965, 6205, 6206, 6207
TEC (DUAL-TEC)	0043, 0047, 0057, 0067, 0097, 0123, 0125, 0133, 0141, 0153, 0158, 0162, 0170, 0196, 0209, 0222, 0230, 0236, 0298, 0312, 0329, 0354, 0391, 0409, 0434, 0513, 0592, 1400, 1636, 1659
TECCO	0067, 0092
TECHLINE	0043, 0077, 0097, 0236, 0540, 0552
TECHNEMA (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654

TECHNICAL	0043
TECHNILAND	0302
TECHNICS	0310, 0427
TECHNISAT	0177, 0236, 0555, 1425, 1623, 4127, 4214
TECHNISSON	0557, 1603
TECHNOL	0067, 0176, 0322, 0354, 0513
TECHWOOD	0043, 1423
TECNIMAGEN	0170, 1452
TECNISON	0067
TECO (AMSTRAD)	0043, 0143, 0196, 0222, 0236, 0322, 0415, 0513, 1343, 1410, 1415, 1423, 1425, 1469, 1559, 1638, 1639
TECSONIC	1532
TEDELEX	0046, 0067, 0230, 0236, 0302, 0490, 0528, 1243, 1523

TEINEL, SA	1639, 1659
TEK	1127
TEKA	1127
TEKNANT	0424, 0513
TEKNIKA	1614
TEKON	0384
TELEAVIA (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
TELECHROM	0424, 0513
TELECOR	0513, 0540
TELEFUSION	0513, 0540
TELEGAZI	0162, 0391, 0513, 0540
TELEKTRON	0077
TELEMASTER	0513
TELEMEISTER	0540

TELEPOINT	0236
TELERENT	0176
TELESONIC	0513, 1338
TELESTAR	0074, 0236, 0302, 0322, 0336, 0536, 5864
TELESYSTEM	1400, 1426, 1475, 2008, 1496, 1548, 2395, 4551, 5482, 5489, 5838, 5873
TELETECH	0043, 0057, 0097, 0236, 0540
TELETON	0067, 0083, 0108, 0149, 0153, 0158
TELEVIEW	0513, 0540
TELEWIRE	5485
TELEXA	0077
TELRA	0513
TEMPEST	0067, 0513, 0540
TENNESSEE	0236, 0540
TEMCO (SHORAI)	0195

TENSAI	0043, 0046, 0060, 0066, 0067, 0077, 0097, 0114, 0195, 0209, 0230, 0236, 0238, 0282, 0302, 0352, 0354, 0415, 0513, 0540, 1632, 1636, 1639, 1659
TESLA	0024, 0046, 0230, 0236, 0237, 0352, 0415, 0528, 5338
TESLA SLOW (TESLA)	0024, 0046, 0230, 0236, 0237, 0352, 0415, 0528
TETTRAN	0114, 0230
TEVION	0043, 0209, 0236, 0513, 0557, 1603, 5481, 5851
TEXET	0067
TFT	1493
THES	1526, 1600, 5433, 5434, 5437, 5476, 5564, 5826, 5847, 5873, 6158, 6162
THOMSON 2100	5023
THOMSON 3004	5013

THORN	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
TIME	1400, 1489, 1537
TMK	0196, 0547
TOBISHI	0067, 0195, 0322, 0384
TOBO	0322
TOKO (KATHREIN)	0513
TOKAI	0043, 0236, 0322, 0435, 0540
TOKIWA (TOKAI)	0043, 0236, 0322, 0435, 0540
TOKYO	0384, 0424, 1608
TOMASHI (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
TOMITA	0067
TOPSHOW	0322
TOPVISION	0230, 0238, 0435, 0513

TORRE (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
TOWADA	0077, 0230
TRAN CONT.	0043, 0097, 0170, 0513, 0588, 1383, 1425, 1434, 1437, 1452, 1453, 1564, 1569
TRANSONIC	0322, 0513, 0528, 0536, 1607
TREVI	0149, 0230, 0424, 1343, 1525, 1549, 5825, 5883, 5884, 5885, 5886, 5887, 5888, 5958, 5965, 6159, 6203
TRIAD	0237, 0513, 0540
TRIDENT	0067
TRILUX	0521
TRISTAR	0046, 0374
TRIVISION	1490

TRIUMPH	0196, 0513, 0540
TSOSHI (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
TSVISION	5831, 5887
TTR	1455
TV STAR	1696
TVD	0043
UHER	0077, 0083, 0108, 0114, 0133, 0153, 0176, 0238, 0513, 0540, 1126
ULTRAVISION	0237, 0290
ULTRAVOX	0050, 0077, 0354, 0067, 0513, 0236, 0409, 0125, 0115, 0189, 0024, 1639
UNDERWOOD	1391
UNIC RADIO	0025, 0067, 0123, 0435, 1657, 1659
UNIMOR	0236, 0336, 0153, 1657
UNITECH	5864

UNITED	0043, 0141, 0145, 0541, 0557, 1400, 1423, 1603, 1657, 5415, 5422, 5433, 5437, 5454, 5476, 5833, 5849, 5850, 5864, 6120
UNITRON	0595
UNIVERSUM (QUELLE)	0043, 0046, 0047, 0065, 0066, 0067, 0069, 0074, 0075, 0077, 0083, 0094, 0096, 0097, 0102, 0108, 0123, 0125, 0136, 0137, 0140, 0147, 0148, 0149, 0162, 0164, 0167, 0174, 0176, 0184, 0195, 0196, 0197, 0215, 0222, 0230, 0236, 0242, 0259, 0282, 0287, 0290, 0295, 0296, 0298, 0300, 0302, 0310, 0312, 0322, 0326, 0329, 0337, 0339, 0351, 0352, 0375, 0390, 0391, 0409, 0418, 0427, 0431, 0433, 0434, 0471, 0513, 0516, 0540, 0552, 0555, 0558, 0592, 1126, 1352, 1629, 1632, 1636, 1639, 1649, 1650, 1652, 1653, 1654, 1656, 1657, 1658, 1672, 1674

UNIVOX	0024, 0162, 0237, 0540, 1659
UNK	0025, 0043, 0230, 0236, 0375, 0557, 1636
URANIA (SAMBERS)	0025, 0077, 0131, 0237, 0238, 0329, 1124, 1126
URANYA	0025, 0114, 0136, 0227, 0236, 0354, 0513
UTAX	0067
VANGUARD	0083, 0123
VENTANA	0043
VDTECH	6161
VESTEL	0042, 0043, 0057, 0083, 0097, 0230, 0236, 0298, 0513, 0552, 1423, 1631, 1636, 1639, 5338, 6114
VEXA	0067, 0424, 0513
VICEROY	0067, 0322, 0329, 1082
VIDELOGIC	0067, 0322
VIDECON	0046

VIDEOMAC	0067, 0322
VIDEON	0236
VIDEOSAT	0057, 0125
VIDEOSYSTEM	0540, 1636
VIDEOTON	0043, 0060, 0067, 0097, 0119, 0178, 0290, 0302, 0374, 0391, 0435, 0441, 0540, 1423, 1659
VIDESON	0230
VIDITAL	0322
VIDIKRON	0077, 0114, 1661
VISIOLA (PATH CINEMA)	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
VISION 2000	0236, 0322, 0540, 1636
VISION MAGIC	1412
VISIONREX	0025
VISIOSAT	1599

VISTA (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
VISTAR	0203, 0431
VSM	0181
VORTEC	0145, 0513, 0540
VOXSON	0024, 0080, 0136, 0322, 1223, 5609, 5850
WAGNER	1654
WALKIE	0153, 0295
WALKVISION	0043
WALTHAM (VIDEOTON)	0043, 0060, 0067, 0097, 0119, 0178, 0290, 0302, 0374, 0391, 0435, 0441, 0540, 1423, 1659
WATSON	0043, 0046, 0080, 0097, 0105, 0114, 0115, 0196, 0209, 0236, 0322, 0513, 0536, 0552, 1636, 1639

WATT RADIO	0067, 0077, 0115, 0060, 0227, 0238, 0298, 0513, 1657
WEBER	0047, 0125, 0322
WEGA VISION	0024, 0149
WEGAVOX	0043, 0057, 0097, 0141, 0236, 0302, 0322, 0374, 0528, 0540, 0555, 0592
WELLFUND	0424
WELLINGTON	0043
WELLTECH	0557
WELTBlich	0114, 0236, 0513, 0540, 1638, 1639, 1646
WESTON	0424, 0435, 0540
WESTWOOD	0043, 0170, 0540, 1338
WHARFEDALE	0170, 0540, 1338

WHITE WESTHINGHOUS E	0067, 0077, 0083, 0108, 0114, 0115, 0131, 0136, 0153, 0227, 0230, 0236, 0295, 0322, 0374, 0424, 0435, 0513, 0541, 1636, 1639, 1658, 1659
WILSON	0043
WINDSOR	0043, 0097, 0513
WINDSTAR (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
WINDY SAM	0540
WINNER	1346
WINSTON	0043, 0424, 0513
WINTERNITZ	0097, 0354, 0497
WORLD TECH	0513
WORLDVIEW	0046, 0415, 1636
WOV	1450
WREMEN	0238
XCELLENT	0513, 1338, 1638

XENA	0204
XONYCS	0236
XRIPTON	0074, 0236, 0540, 1638
YAMISHI	0424, 0540
YOTAKA	0513
YUMATU	0074, 0322, 0374, 0415
ZAMPA	0052
ZANELA	0321
ZANUSSI (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
ZAPP	5338, 5414, 5418, 5422
ZEM	5338, 5418, 5422
ZEPHIR	5464, 5825
ZOPPAS (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653

AEG	0043, 1423, 5422, 5481, 5609, 6157
GRUNDIG	0096, 0295, 0327, 0351, 0549, 1450, 1609, 1649, 1652, 1693, 1694, 5334, 5864, 6202
HISENSE	0083, 0145, 0352, 0376, 5481, 6157, 6175
LG	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207, 5417, 5443, 5496, 6113
MEDION	0043, 0097, 0209, 0236, 0352, 0552, 1396, 1412, 1435, 1455, 1638, 5422, 5449, 5864
PANASONIC	0260, 0287, 0310, 0349, 0402, 0427, 0518, 1411, 1609, 1626, 1659, 1684, 1712, 2027, 6116

PHILIPS	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705, 5338, 5402, 5418, 5497, 5830, 5834, 5962, 6114, 6210, 6209
SAMSUNG	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267, 5063, 5419, 5441, 5444, 5447, 5451, 5472, 5498, 6111
SHARP	0067, 0149, 0197, 0321, 1307, 1421, 1429, 1624, 1863, 5422, 5455, 5844, 5864, 6114
SONY	0065, 0140, 0149, 0174, 0215, 0339, 0373, 0513, 0785, 1084, 1352, 1356, 1470, 1528, 1656, 1672, 1674, 5414, 5436, 5452, 5499, 6115, 6179, 6117

TELEFUNKEN	0051, 0092, 0094, 0095, 0102, 0107, 0119, 0141, 0164, 0229, 0242, 0378, 0513, 0528, 0540, 0566, 0579, 1191, 1269, 1301, 1616, 1650, 5422, 6114
THOMSON	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026, 5836, 5837
TOSHIBA	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694, 5422, 5448, 5558, 6112, 6121
@DIKON	1551, 1525
A R SYSTEM	0237, 0322, 1636, 0540, 0246, 5422
ACCENT	0322, 0176, 1637, 0540, 0131
ACCUPHASE	0540

ACEC (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
ACER	1363, 1480, 1585
ACOUSTIC SOLUTIONS	5422
ADB	5334
ADMIRAL	0024, 0080, 0222, 0428, 0429, 0440
ADYSON	0505, 0329, 0123
AEA	0513, 0540
AG	0557, 5965, 6165, 6166
AGASHI	0322, 0236, 0513
AGB (SABA)	0024, 0025, 0043, 0051, 0055, 0089, 0090, 0092, 0094, 0095, 0119, 0181, 0229, 0242, 0513, 1626

AGEF (BRUNS)	1632, 0242, 0336, 0363, 1667, 0024, 0077
AIKO	0067, 0513, 1608
AIM	0237, 0329, 0352, 0354, 0508, 0513, 1302
AIOSTAY	0136
AIWA	0529, 0581, 1038
AKAI	0043, 0067, 0074, 0143, 0147, 0162, 0236, 0290, 0296, 0298, 0337, 0345, 0352, 0354, 0361, 0375, 0415, 0431, 0433, 0513, 0515, 0549, 0558, 1243, 1311, 1314, 1396, 1423, 1623, 1636, 1652, 1659, 1684, 5827, 5840, 5864, 5961, 5964, 6120, 6164, 6173, 6174, 6183
AKARI	1321
AKI	0236, 1638
AKIBA	0513, 0540
AKIO	1318

AKIRA	1485, 0141, 1637, 1251, 0374, 0236
AKITA (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
AKITO	0540, 0513
AKTRON (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
AKURA	0143, 0231, 0190, 0322, 0513, 0176, 0236, 0540
ALBA	0300, 0236, 0415, 0513, 1659, 5839, 5864
ALBATRON	1378
ALBIRAL	0025, 0236, 0237, 0513, 0322, 0125, 1659, 1174, 1639
ALBRECHT	1586

ALHORI	0067
ALKOS (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
ALLTEL	0550, 1451, 0145, 1383, 5821
ALLORGAN	0391, 0108, 0067
ALTEK	1494, 1399, 1526, 1392, 1401, 1395, 1546, 5421
ALTUS	0557, 1603
AMBASSADOR	0196
AMPLIVISION	0067, 0237
AMSTRAD	0043, 0143, 0196, 0222, 0236, 0322, 0415, 0513, 1343, 1410, 1415, 1423, 1425, 1469, 1559, 1578, 1587, 1588, 1638, 1639, 1666, 1711, 5481, 5851
ANAM	0513, 0540
ANDERSSON	5422
ANEX	1636, 1639

ANGLO	0322
ANIS	0322, 0336
ANITECH	0077, 0114, 0322, 0329, 0424, 0505, 0513, 0540
ANSONIC	0043, 0057, 0077, 0141, 0236, 0322, 0336, 1657, 5422
ANTARES	5469, 5487
AOC	1540
AQP (GRUNDIG)	0096, 0295, 0327, 0351, 0549, 1450, 1609, 1649, 1652, 1693, 1694
ARCAM	0067
ARCELIK	0141, 0230, 0557
ARCENCIEL (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
ARDEM	0141, 0541, 0336, 0557
ARGENTINA	0568, 0569, 0570, 0572

ARISTONA (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
ARPHONE (DESMET)	0025, 0043, 0114, 0230, 0236, 0246, 0513, 1619
ARTHUR MARTIN (SALORA)	0075, 0080, 0082, 0083, 0137, 0147, 0162, 0170, 0178, 0192, 0236, 0390, 0431, 0433, 1016, 1659
ART-TECH	0424, 0513, 1638
ASA	0066, 0136, 0282, 0390, 0513
AS-BERG	0131, 0077, 0302, 0374, 1636, 0513
ASORA	0322

ASHTON (EMERSON)	1638, 0415, 0114, 0490, 0131, 0230, 1639, 0136, 1657, 1658, 1659, 0513, 1363, 0236, 0125, 0097, 0043, 0077, 0024, 1227, 0327, 0547, 0196, 0067, 1317, 0336
ASTRA	0415, 0329, 0296, 0302, 0067, 0654, 1485
ASTRO SOUND	0237, 0230
ASUKA	0067, 0322, 1659
ATAKI	0424
ATEC	1597
ATLANTIC (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
AUDIOLA	5491, 5868

AUDIOSONIC	0513, 0557, 0141, 0067, 0125, 0149, 0111, 1638, 0230, 0123, 0025, 1227, 0077, 1696, 0162, 0322, 0060, 0490, 0424, 0336, 0354, 0545, 0236, 0209, 1636, 0557, 1657
AUDIOTON	0114, 0067, 0125
AUDIOVOX	0572
AURORA	0024, 0067, 0354
AUSIND	0131, 0136, 1126
AUTOVOX	1423, 0123, 0136, 1126, 0131, 1124, 0391, 1126, 1653, 0108, 1367, 0043, 0552, 5449, 6120
AUVISAT	1456
AVERMEDIA	1515
AVIOUS	1550
AWA	0149, 0067, 0354, 0184, 0540, 0513, 0236
AXXWNT	0236
BAIRD	0375, 0378, 1668, 5481

BANG & OLUFSEN	0024, 0398
BARCO	0146, 1128, 0024, 0090
BARCOM	0329
BASIC LINE	0203, 1423, 0513, 0424, 0097, 0043, 0236, 0354, 0373, 0557, 0230, 0141
BASTIDE	0067
BAUMATIC	0322
BAUER	0069, 0114, 0236, 1302
BAUR	0046, 0083, 0133, 0140, 0162, 0165, 0174, 0176, 0178, 0215, 0236, 0259, 0290, 0337, 0351, 0352, 0391, 0434, 0467, 0508, 0528, 1352, 1632, 1637, 1652, 1656, 1676
BAZIN	0067, 0441
BEAUMARK	0547
BEKNTEKNIK	0337, 0207, 1657

BEKO	0141, 0207, 0227, 0230, 0236, 0336, 0540, 0541, 0557, 1400, 1435, 1603, 6202
BELSON	1472
BELSTAR	5422
BENNET	0513, 0540
BENQ	1593
BENSTEN	1511, 0550, 0145, 1491
BEON	0513, 0540
BESTAR	0114, 0336, 0415, 0435, 0540, 0513, 1657
BIAZET	0052, 0236
BIFONIC	0067
BIGSTON	0322, 0354
BINATONE	0067
BLACK DIAMOND	0043, 0540
BLACK STRIP	1608

BLACKWAY	0351
BLAUPUNKT	0039, 0069, 0096, 0102, 0148, 0149, 0165, 0266, 0351, 0522, 1693, 6162, 6185
BALUSONIC	0067
BLOOM	0043, 1386, 1390, 1399, 1415, 1433, 5422, 5481, 5851
BLUEH	5824
BLUE MEDIA	1590
BLUE SKY	0043, 0051, 0065, 0097, 0141, 0236, 0513, 0541, 0549, 0557, 1423, 1425, 1556, 1560, 1603, 1619, 5422, 5481, 5864
BLUE STAR	1648, 1659, 5864
BLUETECH	5825
BLUSENS	6118, 6171, 6172, 6173

BOCA (AMSTRAD)	0043, 0143, 0196, 0222, 0236, 0322, 0415, 0513, 1343, 1410, 1415, 1423, 1425, 1469, 1559, 1638, 1639
BONDSTEC	0125
BOOTS	0067
BOSCH/BAUER	0069
BOSTON	0067, 1621
BOTECH	1575
BPL	0513, 0540
BRANDT	0051, 1435
BRANDT ELECTRONIQUE (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
BRAUN	0067
BRAVO	5456, 5493
BRIGMTON	0067, 0237

BRINKMANN	0513, 0540
BRIONVEGA	0295, 0247, 1367, 1124, 0222, 0024, 0428, 0223, 0440, 1181, 1622
BRITANNIA	0067, 0237
BROKLINE	1319
BROKSONIC	0236, 1323
BROTHER	0043, 0322
BROWN	1317
BRUNS	0242, 0336, 1667, 0024, 0363, 0077, 1623
BSR	0300, 0158, 0329, 1659
BUSH	0097, 0052, 0083, 0043, 0236
CADMOS (DESMET)	0025, 0114, 0230, 0236, 0246, 0513, 1319
CALIFORNIA (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654

CAMPER	0141, 0336, 0513, 1696
CANAIS	0042
CANALERA	1507
CANALSANTE (SIDECE)	0230
CANTON	0252
CANDLE (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207
CAPSONIC	0322, 1636
CARAD	0513, 0540
CARENA	0236, 0540
CARREFOUR	0513, 0540, 5338

CARYONSE (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1633, 1672, 1705
CASCADE	0513, 0540
CASIO	0409, 0540, 1611
CASONIO (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
CAT	1529, 1535, 1536
CATHAT	0513, 0540
CBM	1458
CCE	0513, 0540
CDV	1410, 1464, 5464, 5868, 5872, 6176
CELINT	0052

CENTURION	0513, 0540
CENTURY	0024, 0057, 1227
CEY	1028
CGE	0057, 0102, 0131, 0227, 0298, 0473, 0374, 1636, 1638, 1650, 1659
CGM	0043, 0097, 0227, 0236, 0322, 0336, 0424, 0513, 1657, 1659
CIE	0060, 0196, 0354, 0513
CIHAN	0115, 0230
CINEMA	0043
CITIZEN	1324
CLARITRONIC	1657
CLARIVOX	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1657
CALTRONIC	0540, 5449
CLAYTON	0043, 0230, 0513

COFADEL (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
COLOR MAT	0024
COLUMBIA	0046
COMBITECH (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
COMET	0513, 0536, 1425, 1492
COMPUTRON	0415, 0431, 0513

CONCERTO (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207
CONDOR	0043, 0114, 0131, 0227, 0236, 0259, 0322, 0374, 0424, 0513, 0540
CANFORAMA (SONOLOR)	0431
CONIC	0296, 0329
CONRAC	1435
CONRAD	0043
CONTEC	0322, 0197, 0067, 0540, 0184, 0424
CONTI M.	0236

CONTIN. EDIS. (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
CONTINENTAL	0114, 0549, 1636, 1639
COSMEL	0490, 0513, 0540, 1636
COSMOS	0513
CRC	0046
CROSLEY	0024, 0057, 0115, 0131
CROWN	0043, 0057, 0077, 0097, 0131, 0141, 0236, 0336, 0374, 0540, 0541, 1420, 1639, 1657, 5338, 5422, 5864
CRYSTAL	0043, 0046, 0513, 0592, 1632
CS ELECTRONICS	0067, 0125

CTC CLATRONIC	0057, 0067, 0077, 0114, 0131, 0170, 0227, 0230, 0322, 0236, 0374, 0415, 0424, 0513, 0557, 1423, 1603, 1636
CXC (ERMESON)	0415, 0114, 0490, 0131, 0230, 1639, 0136, 1657, 1658, 1659, 0513, 1363, 0236, 0125, 0097, 0043, 0077, 0024, 1227, 0327, 0547, 0196, 0067, 1317, 0336, 1638
CYMATIC	0025, 0067, 1659
CYV	0513, 0540
D-VISION	0209, 0236, 0352, 0554
DEAWOO	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0153, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644, 5450
DAICHI	0209
DAIMOND	1637
DAINICHI	0067

DALMAN	1453
DANSAI	0067, 0329, 0513, 1608
DANTAX	0043, 1423
DATRONIC (DEAWOO)	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0153, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644
DAWA	0513
DAYMATER (MAGNADYNE)	0024, 0025, 0060, 0077, 0115, 1009, 1639, 1659
DAYTEK	0236, 0572, 1121
DAYTRON	0513, 0540, 1318
DAYTRONIC (DAEWOO)	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0153, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644
DCE	0557, 1603
DE GRAAF	0043

DECCA	0065, 0067, 0176, 0246, 0254, 0302, 0375, 0540, 0541, 1636
DEITRON	0513
DELTON	0057
DEMACOLOR	0236
DENKO	0322
DENTAL (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
DENVER	0043, 1546, 1638, 5609, 6120, 6162, 6190
DESMET	0513, 0236, 0246, 0114, 0025, 0230, 0043, 1619
DEWO	1085
DHS (ASTRA)	0067, 0296, 0302, 0354, 0415, 1485
DIADEM	0440
DIAMAT	0513, 0540

DIAMOND	0047, 0352, 0354, 1112, 1121, 1338
DIBOSS	1516, 1517
DICRA	5405, 5872, 5958, 6159
DIGATRON	0513, 0540
DIGIHOME	0557, 1435
DIGILINE	0043
DIGITOR	0236, 0540, 0555
DIK	0513, 0540
DIKOM	5416, 5437, 5851, 5873, 5888, 5958, 5963, 5965, 6114, 6159, 6189
DIKON	1551
DINASTY	0043, 0354
DISTAR	0236, 1085
DIUANAI	1535, 1587, 5416, 5439, 5484, 5831, 5875, 5965
DIXI	0513, 0540, 1667

DMTECH	1489
DOMEOS	0236, 0434
DOMLAND (DUAL-TEC)	0043, 0047, 0057, 0067, 0097, 0123, 0125, 0133, 0141, 0153, 0158, 0162, 0170, 0196, 0209, 0222, 0230, 0236, 0298, 0312, 0329, 0354, 0391, 0409, 0434, 0513, 0592, 1400, 1636, 1659
DOMOH	0236, 0513, 1639
DORIC	0052
DPM	5446
DTS	0153, 0513
DUAL-TEC	0043, 0047, 0057, 0067, 0097, 0123, 0125, 0133, 0141, 0153, 0158, 0162, 0170, 0196, 0209, 0222, 0230, 0236, 0298, 0312, 0329, 0354, 0391, 0409, 0434, 0513, 0592, 1400, 1636, 1659, 5422, 5449

DUMONT	0024, 0066, 0077, 0115, 0374, 0131, 0136, 0236, 0282, 0390, 0513, 1619, 1636, 1639
DUNAI	1659
DURABRND	0043, 0552, 0557
DUX	0540
DYNAMTIC	0074
DYNATRON (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
EASY LICING	1394, 1398, 1399, 1484, 1525, 5481, 5819, 5823, 2871, 6187
ECCO	1346
ECHOSTAR	0067, 0236

ECO LINE	0236
EDAN LINE	0043, 0236
EDISON	0549
EI	0162, 0227, 0230, 0236, 1423, 1657
EL	1394, 1398, 1399, 1484, 1525, 5481
ELBE	0025, 0043, 0067, 0073, 0170, 0222, 0230, 0233, 0236, 0237, 0255, 0295, 0428, 0429, 0440, 0528, 0541, 1425, 1449, 1450, 1452, 1453, 1454, 1529, 1594, 1595, 1619, 1659, 5481
ELCIT (MAGNADYNE)	0024, 0025, 0060, 0077, 0115, 1009, 1639, 1659
ELEKTA	0424, 0322, 0354, 0046, 0513
ELEKTRONIKA	0516, 1657
ELEKTRONSK A IND.	0025, 0230
ELEMIS	0043, 0230, 0336

ELG	0513, 0540
ELIN	0066, 0067, 0083, 0153, 0162, 0282, 0431, 0513
ELITE	0114, 0322, 0513
ELLEVISION	0322, 0425
ELMAN	0025, 0067, 0077, 0196, 1659, 1700
ELSAY	0236
ELTA	0057, 0067, 0322, 0435, 0513
E-MOTION	6185
EMATEC (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 1703, 2356, 4340, 4341
EMCO (IMPERIAL)	0043, 0057, 0060, 0102, 0131, 0170, 0227, 0236, 0298, 0374, 0435, 0513, 0522, 1227, 1619, 1636, 1650, 1659

EMERSON	0024, 0043, 0067, 0077, 0097, 0114, 0125, 1227, 0131, 0136, 0196, 0230, 0236, 0336, 0327, 0415, 0490, 0513, 0547, 1317, 1363, 1638, 1639, 1657, 1658, 1659
ENGEL	0230, 1563, 1611, 6181
ENZER	0566, 0579, 1332
ENIE	0529
EROICA	0329
ERRES (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0391, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672
ESC	0067, 0336, 0236, 0513, 0540
ESTEL	0230
ETCO	5338

ETRON	0384, 0415, 0513, 1063, 1082, 1648
EULANDER (ELBE)	0025, 0043, 0067, 0073, 0170, 0222, 0230, 0233, 0236, 0237, 0255, 0295, 0428, 0429, 0440, 0528, 0541, 1425, 1449, 1450, 1452, 1453, 1454, 1529, 1594, 1595, 1619, 1659
EUMIG	0114
EUROCOM	0230
EUROLINE	1631, 1636, 5338
EUROMAN	0067, 0322, 0336, 0513
EUROPA	0513, 0540
EUROPHON	0025, 0067, 0077, 0114, 0127, 0230, 0238, 1227, 1659
EUROSTATUS	0643
EUROVISION	1423
EVELUX	0592
EVERLINE	6186

EXCEL	0513, 0540
EXPERT	0153, 0204, 1654
EXQUISIT	0513, 0540
FAGOR	0435, 0513
FAMILY LIFE	0513, 0540
FELIX	0236, 0322, 0415
FENNER	0354, 0424, 0513, 1623
FERGUSON (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
FIDELIS	0043, 0067, 0296
FIDELITY	0067, 0176, 0329, 0391, 0415, 0513, 1713
FILSAI	0067
FINLANDIA	0083

FINLUX	0043, 0066, 0077, 0115, 0127, 0131, 0136, 0137, 0147, 0170, 0230, 0236, 0246, 0282, 0295, 0374, 0375, 0390, 0431, 0433, 0513, 0557, 0558, 1126, 1425, 1603, 1623, 5422, 5481
FIRST LINE	0043, 0057, 0067, 0097, 0114, 0123, 0176, 0177, 0203, 0230, 0237, 0298, 0302, 0352, 0354, 0375, 0391, 0440, 0513, 0541, 0557, 1009, 1420, 1425, 1435, 1453, 1636, 1654, 1659, 5338, 5422
FISHER	0363, 0133, 0066, 0123, 0314, 0115, 0197, 0149, 0184, 0290, 0024, 0391, 0373, 1131, 1657, 1658
FLINT	0073, 0513, 5873, 6160
FLORIDA	0067
FNR	0077
FORCE	1329, 1330

FORGESTONE (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
FORMENTI	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
FORTRESS	0024
FRABA	0236
FRIAC	0077, 0513, 0540
FRONTECH	0057, 0083, 0329, 1659, 1696
FST (DECCA)	0065, 0067, 0176, 0246, 0254, 0302, 0375, 0540, 0541, 1636
FUJI	0424
FUJITECH	0513

FUJITSU	0043, 0077, 0067, 0108, 0153, 0158, 0222, 0236, 0282, 0329, 0513, 1345, 1408
FUMEO	0158
FUNAI	0149, 0230, 0322, 0552, 0557, 1558, 1663, 5422, 5449, 5835
FURICHI	0595
FUSION	0557, 1435
FUTRONIC	0322
FUTURE	0513, 0540
FUTURETECH (EMERSON)	0024, 0043, 0067, 0077, 0097, 0114, 0125, 0131, 0136, 0196, 0230, 0236, 0327, 0336, 0415, 0490, 0513, 0547, 1227, 1317, 1363, 1638, 1639, 1657, 1658, 1659
GALA	0296, 0329
GALACTEX	0067, 0322
GALANT	0415, 0424

GALAXI (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
GALAXY	5458, 5460
GALAXY - GALAXIS	0057, 0067, 0227, 0236, 0374, 0409, 1636
GBC	0060, 0115, 0125, 0197, 0354, 0375, 0415, 0424, 0513, 1489, 1659, 5473
GE	0051, 0242, 0547, 1495
GEANTCASINO (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
GEBER	0162
GEC	0067, 0083, 0189, 0236, 0246, 0375, 0513, 1076, 1372, 1626
GELOSO	0025, 0060, 0080, 0115, 0354, 1659

GENERAL	0046, 0067, 0197, 0209, 0354, 0513
GENERAL CORPORATION	0043, 0067, 0108, 0153
GENERAL TECHNIC	0354
GENESIS	0513, 0540
GENEXXA	0540, 0162, 0390
GERICOM	1383
GIANT	0046, 0067, 0527
GITEM	0046, 0242, 1609, 1636
GM - GMC	0322, 0513, 1663
GOLD	1526, 5420, 5845, 5851, 5866, 5870
GOLT TOP	0424
GOLDFUNK	0094
GOLDHAND	0067
GOLDLINE	0073

GOLDSTAR (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0513, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207
GOLDTECH	0043, 0097, 0236
GOLDVISION	0123, 0236, 0322, 0424, 0505, 0513, 0557, 1636
GOODMANS	0043, 0051, 0067, 0097, 0141, 0209, 0242, 0322, 0327, 0352, 0354, 0415, 0513, 0541, 0545, 0554, 1423, 1603, 1608, 1636, 1659, 5422, 5481
GORENJE	0051, 0236, 0516, 0592, 1296, 1423, 1657, 1658
GPM	0322, 0329
GRADIENTE	0502

GRAETZ (ITT)	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713
GRANADA	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713
GRANDEN (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
GRANDIN	0043, 0073, 0114, 0141, 0170, 0209, 0230, 0236, 0352, 0422, 0424, 0541, 0557, 1354, 1383, 1412, 1425, 1438, 1453, 1548, 1549, 1564, 1569, 1603, 1654, 5864
GRADIENTE	0502

GREAT WALL	0322, 0490
GRENADIER	0230, 0513, 0547, 1174
GRONIC	0067, 0230, 0238, 1174, 1659
GRUNDIG	0096, 0295, 0327, 0351, 0549, 1450, 1609, 1649, 1652, 1693, 1694, 5334, 5864, 6202
GTRONIC	0236, 1084
GUTTA	1084
GTT	0043, 0236, 0374, 0424, 1638
H & B	0043
HADOR	1338
HAIER	0209, 5474
HALIFAX	0322
HAMMERSTEIN	0067, 0322, 0384, 0422, 1082
HAMPTON	0067, 0115
HANNOVER	1420

HANNSPREE	5819, 5822, 5867, 5960
HANSEATIC	0025, 0067, 0114, 0162, 0195, 0209, 0230, 0236, 0296, 0336, 0391, 0424, 0435, 0513, 0554, 0557, 1601, 1638, 1639, 1644, 1693
HANTAREX	0025, 0077, 0238, 1383, 1436, 1636
HARROW	0043
HARWOOD	0513, 0540
HAUPPAGE	0513, 0540
HB	0557, 1400, 1459, 1489, 1603, 5422
HCM	0123, 0322, 0424, 0513, 0543, 0540, 1659
HEDZON	0513, 0540
HEIRU	0322

HELECTRONIC (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
HEMMERMANN	0077, 0127, 0391, 1009
HENA	0513
HEXA	0204, 0230
HIFIVOX (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
HIGASHI	0067
HIGHIWA (KAISUI)	0424, 0067, 0236, 0415, 0073, 1420
HIGHLINE	0513, 0540
HIKONA (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
HILINE	0236, 0322, 0415

HINARI	0065, 0080, 0322, 0327, 0329, 0363, 0513, 5864
HISAWA	0073, 0236, 0557
HISENSE	0083, 0145, 0352, 0376, 5481, 6157, 6175
HISHITO (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
HISONIX	0415
HIT	0024
HITACHI	0037, 0043, 0052, 0067, 0082, 0083, 0094, 0095, 0119, 0137, 0142, 0147, 0160, 0178, 0189, 0197, 0209, 0285, 0296, 0326, 0329, 0358, 0431, 0433, 0473, 0499, 0525, 0547, 0554, 0569, 1016, 1076, 1254, 1259, 1369, 1423, 1501, 1626, 1643, 1644, 5422, 6114, 6201
HITSU	0073, 0513

HOHER	0043, 1516, 1400, 0170, 1603, 1383, 1423, 5422
HOME ELECTRONICS	1437
HORIZONT (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
HORNYPHON	0513, 0540
HOSHAI	0043, 0097, 0424
HOSPITALIERE	0043
HOWELL	0043
HUMAX	5818
HYD	1467, 1550
HYPER	0067, 0125, 0230, 0236, 0322, 0329, 0336, 0415, 0424, 0435, 0497, 0513, 1638, 1639, 1659

HYPSON	0025, 0043, 0097, 0141, 0170, 0209, 0236, 0336, 0557, 1425, 1434, 5422, 5864
I CAN	5334
I.V.	0513
IBERIA	0428, 0513
IBERVISAO	0391
ICE	0046, 0057, 0067, 0236, 0322, 0415, 0540
ICS	0067, 0322
IEG	0067
IJOY	6170
IKEA	6208
IMC	0058
IMPER	0032
IMPERIAL	0043, 0057, 0060, 0102, 0131, 0170, 0227, 0236, 0298, 0374, 0435, 0513, 1227, 1619, 1636, 1650, 1659, 5468, 5492, 5494

INCOBE	0123, 0290
INDESIT	0107
INDIANA	0513
INGELEN	0162
INGERSOLL	0513
INNO HIT	0025, 0043, 0067, 0075, 0077, 0115, 0209, 0227, 0296, 0332, 0375, 0375, 0424, 0513, 1423, 1633, 1638, 1639, 2058, 4367, 5422, 5965
INNOVATION	0513, 0540
INTERBUY	0125, 0176, 0322, 0415, 0505, 0540
INTERDISCOUN T	0092, 0119, 0242, 1352, 1636, 5338
INTERACTIVE	0176, 0513, 0540
INTERECCORD	0133

INTERFUNK	0042, 0046, 0047, 0062, 0069, 0079, 0092, 0096, 0162, 0302, 0352, 0374, 0513, 1617, 1626, 1632, 1636, 1654
INTERNAL	0513, 0540
INTERVISION	0046, 0067, 0077, 0209, 0322, 0351, 0435, 0505, 0540, 0542, 1657, 1659
INTRON	0322
INWAH	0209
IRRADIO	0043, 0075, 0097, 0125, 0136, 0230, 0236, 0322, 0296, 0329, 0415, 0513, 0528, 0557, 1084, 1126, 1269, 1296, 1439, 1400, 1459, 1516, 1517, 1525, 1612, 1636, 1638
ISKRA	0025, 0067, 1659
ITSUKAI	0424, 0513
ITAL TV	6203
ITC	0067, 0230, 0236

ITS	0067, 0236, 0322, 0415, 0540
ITT	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713
ITT / NOKIA	5415, 5422, 5481, 5823, 5864, 5877, 6114, 6178, 6183, 6190
ITV	0060, 0322, 0354, 0540
IZUMI	6182
JEC (TOSHIBA)	0043, 0197, 0207, 0259, 0296, 0337, 0351, 0386, 0467, 0523, 0557, 1423, 1608, 1678, 1681, 1694
JET POINT	0384, 1636
JMB	0513, 0540
JOCEL	0236, 0435
JOHNSON	0067

JPS	0505
JQ	5415, 5468
JRC	0435
JUBILEE	0540
JVC	0167, 0316, 0404, 0502, 1470, 1479, 1622, 1696, 1697
KABEL	0300
KAIDO	0083
KAISER	0424, 0513
KAISUI	0067, 0073, 0236, 0415, 0424, 1420
KAMAR	0515
KAMOSONIC	0123
KAMBROOK	0067, 0119, 0230, 0322

KAMP (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
KANGSLEY (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 1637, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1639, 1654
KAOSHO (SAMSUNG)	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267
KAPSCH (ITT)	0043, 0052, 0062, 0066, 0083, 0096, 0108, 0136, 0149, 0153, 0162, 0192, 0236, 0252, 0290, 0322, 0327, 0374, 0390, 0391, 0433, 0513, 1423, 1626, 1654, 1713

KARCHER	0067, 0209, 0236, 3 0237, 0238, 0424, 0435, 0513, 0516, 1636
KATHREIN	0513
KAWA	0415
KAWASHO (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
KAYA	0322
KB ARISTROCRAT	0162, 0391
KELCINATOR	0062
KEN	1317
KENDO	0043, 0051, 0073, 0077, 0080, 0295, 0300, 0440, 0542, 1227, 1636, 1659, 5422, 5449
KENNEDY	0108, 0115, 0153, 0158, 0222, 0429

KENNEX	0043, 0097, 0209, 0236, 0550, 0552, 0557, 0921, 1423, 4367
KENYA	1327
KERION	0513, 1639
KEYMAT	0117, 0417, 0480, 0517, 0519, 0550, 0553, 0578, 1386, 1388, 1391, 1426, 1496, 1541, 2395, 4551, 5821, 5823
KEYSMART	1400
KIC	0067, 0237, 0515
KIMAY	0322
KINGDHOME	0043
KIOTA	0322, 0415, 1082
KITON	0043, 0513, 0540, 5422
KITT	0067, 0322, 0513
KITTEN	0513
KIYOGIN	0067, 0025, 0237, 1174, 1659

KLARMAX	0073, 0170, 0209, 0233, 0236, 0237, 0295, 0354, 0429, 0513, 0541, 1611
KOBALTRONIC (NEWMAR)	0067, 0123, 1174, 1659
KOLSTER	0067, 0077, 0237, 0322, 0513, 1174, 1227, 1614, 1659
KONG WAM (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
KONKA	0145, 0177, 0352, 0415, 1116, 1261, 1302, 1420
KORPEL	0513, 0540
KONTAKT	0549
KOSMOS	0513, 0540
KOTRON	0230, 0322
KRAKING	0230

KRIESLER (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
KRONNE	0067, 0230
KTV	1500
KUBA ELECTRONIC	0067, 0083, 0133, 0230, 0391
KUCCAI	0097
KURO (SANYO)	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
KYOTO	0230, 0246
L & S ELEKTRONIK	0557
LAVA	1516, 1517

LAVIS	0025, 0162, 1611
LAZER	0236
LCE	0415
LECSON	0513, 0540
LEGEND	0067, 0322, 0490, 0513
LENCO	0043, 0077, 0162, 0236, 0322, 0329, 0354, 0391, 0435, 0513, 5422, 6204
LENOIR	0043, 0067, 0097, 0141, 0322, 0236, 0354, 0409, 0424, 0513, 1009, 1343, 1394, 1396, 1398, 1399, 1400, 1401, 1638, 1639, 5871
LEVIS AUSTRIA	0513, 0540
LEXUS	0074, 0236, 0322
LEYCO	0236, 0322, 1646

LG	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1612, 1614, 1659, 3044, 4206, 4207, 5417, 5443, 5496, 6113
LIFE	1435
LIFETEC	0043, 0097, 0209, 0236, 0322, 0354, 0513, 0536, 0555, 0557, 1638, 5422, 5449
LIGHTSTAR (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
LINTON	0133
LLOYD'S	0067, 0096, 0136, 0322, 0415, 0422, 0515, 1082, 1626
LME (PATH CINEMA)	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
LOCATEL	1579, 1580, 1581, 1582, 1583, 1584

LOEWE	0024, 0047, 0050, 0176, 0246, 0277, 0400, 0402, 0508, 0925, 1570, 1637, 2345, 4257, 4345
LOGIK	0043, 0097, 0374, 0384, 0422, 0513
LOVE (ELBE)	0025, 0043, 0067, 0073, 0170, 0222, 0230, 0233, 0236, 0237, 0295, 0428, 0429, 0440, 0528, 0541, 0255, 1425, 1449, 1450, 1452, 1453, 1454, 1529, 1594, 1595, 1619, 1659
LS ELEKTRONIK	0557
LTV (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
LUMA	0043, 0067, 0080, 0108, 0153, 0158, 0222, 0259, 0295, 0352, 0354, 0513
LUMATRON	0043, 5422
LUXMAY	0490, 0513, 0540

LUXOR	0052, 0075, 0082, 0083, 0123, 0137, 0147, 0162, 0170, 0178, 0192, 0252, 0390, 0431, 0433, 1016, 1704, 1713, 5499
LUXTRONIC	5422
LXI	0547
LYOTRON (LG)	0043, 0067, 0075, 0082, 0083, 0123, 0125, 0141, 0145, 0153, 0158, 0170, 0227, 0277, 0230, 0236, 0275, 0329, 0352, 0384, 0513, 0529, 0542, 0547, 0555, 0557, 0587, 0925, 1439, 1459, 1476, 1606, 1607, 1614, 1659, 3044, 4206, 4207
M.D.C.	1638
MACROM	0480
MADISON	0236, 0540, 1636

MAGAVOX (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
MAGNADYNE	0024, 0025, 0060, 0077, 0115, 1009, 1639, 1659
MAGNAFON	0025, 0067, 0077, 0131, 0238, 1126, 1636, 1639, 1659
MAGNAVOX	0046, 1623
MAGNEX	0322, 1636
MAGNUM	0141, 0255, 0374, 1415, 1638
MAJESTIC	5477, 5478, 5479, 5868, 5875
MAKROSONIC	1324
MANDI	0352
MANDOR	0322

MANESTH	0052, 0067, 0114, 0236, 0322, 0540, 1608, 1623, 1654
MANHATTAN	0043, 0097, 0513, 5422
MARANTZ	0513, 0528
MARECH	0114, 0513
MARK	0336, 0654, 0513
MASCOM	0236
MASCOT	0057
MASUDA	0236, 0300, 0322, 0513
MATCH ITALIA	0322, 0513, 1636
MATSUI	0060, 0065, 0067, 0196, 0236, 0269, 0322, 0300, 0336, 0351, 0397, 0415, 0536, 0549, 1016, 5449, 5839, 5864
MATSUKA	0067, 0322
MATSUVIANA	0528
MAXAM	0322

MAXDORF	0322, 1084
MAXELL	0025, 0329, 0424, 5564, 5842, 5843
MAXWELL	0025, 0077, 0236
MAXIMAL	1648
MB LINE	0322
MC MICHAEL (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
MCE	0322, 0425, 0513
MECOA	0236
MEDIASONIC	0236
MEDIATOR	0513, 0540

MEDION	0043, 0097, 0209, 0236, 0352, 0552, 1396, 1412, 1435, 1455, 1638, 5422, 5449, 5864
MEGATRON	0547
MEGHA	0513
MELBOX (CLARIVOX)	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1667
MELECTRONIC	0060, 0066, 0133, 0136, 0137, 0147, 0181, 0209, 0236, 0282, 0295, 0351, 0354, 0390, 0508, 0513, 0588, 1009, 1614, 1631, 1638, 1644, 1703, 4340, 4341
MELVOX	0025, 0162
MEMOREX	0322
MEMPHIS	0067, 0322, 0490
MERCURY	0046, 0067, 0236, 0237, 0322, 0384, 0515
MERRIT	0162

METEOR	0238
METZ	0024, 0043, 0079, 0097, 0338, 0349, 0351, 0402, 0460, 0462, 0552, 1487, 1499, 1609, 5422
MGA	0322, 0354, 0513, 0547, 1637
MGAON	0322
MICROMAXX	0043, 0236, 0295, 0540
MICRON	0067
MICROSONIC	1131
MICROTEK	0236, 0242, 1084, 1127
MIGROS ELECTR	0295
MINATO	0513, 0540
MINERVA (GRUNDIG)	0096, 0295, 0327, 0351, 0549, 1491, 1450, 1609, 1649, 1652, 1693, 1694
MINERVA FRANCE	0549
MINOKA	0513, 0540

MISTRAL (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
MITRONIC	0329
MITSUBISHI	0024, 0043, 0047, 0065, 0149, 0197, 0230, 0353, 0354, 0425, 0527, 0547, 1379, 1637, 1644, 1661
MITSUTI GENERAL	0233, 0298
MIVAR	0105, 0408, 0025, 0058, 0068, 0067, 0075, 5451, 5605
MKC	0578
MKM	0238
MOBILE TV	0043
MOJAVE	1538
MOTION (UHER)	0077, 0083, 0108, 0114, 0133, 0153, 0176, 0238, 0513, 0540, 1126
MPMAN	5471, 6119

MTC	0083, 0176, 0296, 0336, 1296, 1657, 1659
MULTIMAT	0238
MULTISTANDAR D	0077
MULTITECH	0025, 0043, 0067, 0077, 0125, 0141, 0149, 0162, 0178, 0209, 0230, 0236, 0322, 0336, 0354, 0490, 0513, 0545, 0557, 1227, 1614, 1657, 1696
MURPHY	0083, 1626, 1696
MUSKILAND	0513, 0540
MUSTAG	1121
MYRYAD	0513, 0540
MYTV	6119
MVISION	5488
NAD	0162, 0391, 0547
NAGOYA	0230, 0441
NAIKO	0513, 0540

NAKAMURA	0513, 0540
NAONIS (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
NARITA	0067, 0322, 0354, 0547
NASSA NAGEL (ENGEL)	0230, 1611
NATIONAL	0310, 0518
NEC	0149, 0065, 0427, 1418, 0472, 0447, 0430, 1336, 0237, 0354, 0513, 5822, 5867
NECKERMANN	0024, 0046, 0047, 0057, 0060, 0069, 0080, 0083, 0114, 0133, 0140, 0148, 0167, 0170, 0174, 0176, 0178, 0195, 0209, 0215, 0227, 0230, 0236, 0295, 0300, 0312, 0337, 0351, 0352, 0374, 0409, 0467, 0508, 0513, 0540, 0541, 0555, 0588, 1352, 1609, 1629, 1361, 1632, 1636, 1638, 1639, 1656, 5338

NEI	0043, 0230, 0236, 0435, 0490, 0541, 0513, 1636, 1659
NEO	6114, 6203
NEOVIA	1301, 1383, 1459, 1450, 1516, 1517, 1542, 1543, 1568, 5468
NESCO	0125, 0312, 0327, 0375, 0440
NETSAT	0513, 0540
NEUFUNK	0043
NEVIR	6120, 6161, 6190, 6203
NEWGOLDVISIO N (SONOKO)	0123, 0236, 0322, 0424, 0505, 0513, 0557, 1636
NEWMAR	0067, 0123, 1174, 1659
NEWORLD (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
NEWTECH	0067, 0236, 0242
NEXIUS	0588, 1393, 1422, 1425
NEXTIER	1518

NFREN	1555
NICAMAGIC (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0115, 0136, 0170, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
NIKKAI	0067, 0082, 0141, 0322, 0329, 0513
NIKKEI	0043, 0097, 0170, 0322, 1399, 1425, 1467, 1550, 1537, 1636, 5481, 5609, 5825, 5839, 5851, 5872, 5957, 6190
NIKKO	0513, 0547
NIKKEY	5483
NISSAN	0384
NOBLEX	0149, 0184, 0197, 0354, 0415, 0422, 1327, 1661
NOBLIKO	0067, 0131, 0136, 1126, 1227

NOGAMATIC (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
NOKIA	0043, 0066, 0147, 0162, 0236, 0252, 0322, 0390, 0431, 0433, 0558, 1423, 1704, 5500
NORDING	0077, 0131
NORDLAND	0230
NORDMENDE	0049, 0052, 0062, 0090, 0092, 0094, 0095, 0115, 0119, 0170, 0229, 0242, 0352, 0424, 0455, 0557, 1045, 1400, 1422, 1423, 1425, 1435, 5415, 5486, 5492, 5819, 5823, 5832, 5833, 5864, 5871, 6188, 6203

NORDTON (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
NORDWAY	0298, 1657
NORFOLK	0441
NORM N	1636
NORMEREL	0540, 1630
NORTEK	0097, 0141, 1636
NORTON	0424
NORWAY	0298, 1657
NOVA	0329
NOVAK	0513, 0540
NOVATRONIC	0209, 0236, 0322, 0329, 0354, 0513, 1636
NUCLEAR (PRANDONI)	0077, 0080, 0083, 0097, 0115, 0302, 0352, 0592, 1126, 1227

O GENERAL	0149
OCEANIC	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341, 5468
OCTAL	0067
OCTAN (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
ODEON (AGASHI)	0236, 0322, 0513
OEC ELECTRONIC	0329, 1494
OK	6212
OKANO	0227, 0302, 0513
OLIDATA	1378
OLIVETTI	1379

OLMAL (ALBIRAL)	0025, 0236, 0237, 0513, 0322, 0125, 1659, 1174, 1639
OLYMPIA	1423
OLYMPIC	0424
OMEGA	0322, 0415
ONCEAS	0060, 0067
ONDIOLA	0236
ONIDA	0302
ONWA	0077, 0322, 0361, 0415
OPERA	0513, 0540
OR - ON	0424
ORAVA	0024, 0230, 0236, 0513, 0541
ORBISAT	0067
ORBIT	0513

ORION	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623, 5423, 5437, 5864, 6177
ORION (HUNGARY)	0046, 0119, 0203, 0236, 0269, 0415, 0441, 0513, 1059
ORLINE	0513, 0540
ORMOND	0043, 0097, 0513
ORSOWE	0025
OSAKA (SHORAI)	0195
OSAKI	0043, 0067, 0195, 0513
OSIO	0075, 0513
OSUME	0540
OTAKE	0195, 0300
OTF	0046, 1659

OTHER	5013, 5023, 5063
OTHER LINE	0025, 0067, 0236, 0435
OTTO VERSAND	0046, 0047, 0067, 0083, 0114, 0125, 0127, 0133, 0140, 0162, 0174, 0176, 0177, 0178, 0189, 0195, 0197, 0209, 0230, 0233, 0236, 0242, 0296, 0300, 0310, 0321, 0326, 0337, 0351, 0352, 0391, 0409, 0415, 0418, 0427, 0434, 0435, 0508, 0153, 0540, 0555, 1352, 1609, 1629, 1632, 1652, 1656, 1683, 1684
OVP	0236, 0513
PACIFIC	0513
PAEL	0067, 0096, 1126
PALLADIUM	0024, 0069, 0080, 0083, 0114, 0148, 0174, 0176, 0209, 0227, 0295, 0409, 0513, 0555, 0588, 1609, 1631, 1632, 1636
PALSONIK	0067, 0302, 0322, 0329

PANAMA	0057, 0067, 0236, 0322, 0513, 0540
PANASONIC	0260, 0287, 0310, 0349, 0402, 0427, 0518, 1411, 1609, 1626, 1659, 1684, 1712, 2027, 6116
PANAVISION	0236, 0123, 0424, 0572, 1121, 1131, 1325, 1326, 1446, 1447
PANDA	0310
PANORAMA	0067, 0505, 0536
PANORAMIC	0091
PATH CINEMA	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
PATH MARCONI (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
PCM	0114, 0236, 1639
PEACOCK	0046, 0067

PEEKTON	6161
PEONY	0425, 0527
PERDIO	0513
PERFEKT	0513
PERSHIN	0096, 0204
PHILHARMONIC	0060, 0067
PHILBIX (DESMET)	0025, 0043, 0114, 0230, 0236, 0246, 0513, 1619
PHILCO	0024, 0057, 0060, 0102, 0115, 0131, 0149, 0227, 0298, 0374, 0435, 0513, 0572, 1326, 1611, 1636, 1659
PHILIPS (F) (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705

PHOENIX	0043, 0046, 0114, 0115, 0236, 0238
PHONOLA (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1561, 1605, 1607, 1617, 1618, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
PIONEER	0095, 0119, 0162, 0170, 0302, 0464, 1508, 5817, 5820
PLANTRON	0322, 0513
PLASMATECH	1383, 1436
PLATINIUM	1509
PLAYDOR	0322
PLAYSONIC	0024, 0123, 0237, 0513
POLYTRON (KATHREIN)	0513

POP	0095, 0322
PORTLAND	0209, 0354, 0471, 1638
POWERPOINT	0513, 0540
PRANDONI	0025, 0043, 0077, 0080, 0083, 0097, 0115, 0302, 0352, 0592, 1126, 1227
PRECISION	0067, 0329
PREMIER	0322, 1116
PRIMA	0067, 0322, 0329, 0505
PRINCE (PRANDONI)	0025, 0043, 0077, 0080, 0083, 0097, 0115, 0302, 0352, 0592, 1126, 1227
PRINCESS	0329, 1425
PRINSTON	0141

PROCYON (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0532, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
PREFESSOR	0046
PROFEX	0131, 0162, 0230, 0298, 0435, 1696
PROFILINE	0043
PROFILO	0025, 0236, 0513
PROFITRONIC	0077, 0540, 1636
PROLINE	0043, 0295, 0554, 0375, 0230, 0418, 1619, 0170, 0540, 0513
PROSONIC	0236, 0415, 1638, 5338, 5437

PROTECH	0067, 0097, 0230, 0236, 0322, 0336, 0374, 0513, 1357, 1631, 1636, 1638, 1639, 5338
PROTEK	5822, 5867
PROTON	0547
PROVISION	0236, 0322, 0354, 0390, 0409, 0513, 0540, 1320
PVISION	1489, 5876
PYE (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
PYGMY	0024, 1621
QBELL	5416, 5822, 5867, 5874, 5963
QMEDIA	5965, 6170, 6184
QUADRAL	0074

QUADRIGA	0147, 0584
QUADRO	0043, 0074, 0552, 0566, 0579, 1112, 1410, 1423, 1502, 1503, 1505, 1506
QUALCRAFT	0329
QUASAR	0025, 0077, 0131, 0136, 0196, 0237, 0238, 0329, 1126, 1383
QUEENFIDELITY (DAEWOO)	0060, 0067, 0209, 0236, 0352, 0354, 0361, 0375, 0502, 0513, 0545, 0554, 0557, 1390, 1412, 1449, 1450, 1453, 1601, 1644

QUELLE	0043, 0046, 0047, 0065, 0066, 0067, 0069, 0074, 0075, 0077, 0083, 0094, 0096, 0097, 0102, 0108, 0123, 0125, 0136, 0137, 0140, 0147, 0148, 0149, 0162, 0164, 0167, 0174, 0176, 0184, 0195, 0196, 0197, 0215, 0222, 0230, 0236, 0242, 0259, 0282, 0287, 0290, 0295, 0296, 0298, 0300, 0302, 0310, 0312, 0322, 0326, 0329, 0337, 0339, 0351, 0352, 0375, 0390, 0391, 0409, 0418, 0427, 0431, 0433, 0434, 0471, 0513, 0516, 0540, 0552, 0555, 0558, 0592, 1126, 1352, 1629, 1632, 1636, 1639, 1649, 1650, 1652, 1653, 1654, 1656, 1657, 1658, 1672, 1674
QUESTAR	0149, 0197
R. LINE	0513, 0540
RADIALVA	0236, 0354, 0540

RADIOLA (PHILIPS)	0024, 0042, 0046, 0067, 0111, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1561, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
RADIOMARELLI	0060, 0024, 0077, 0025, 0115, 0230, 0374, 0236, 1009, 1639
RADIONETTE	0066, 0282, 1626, 1654
RDAIOSHACK	0513, 0540, 0547
RADIOTONE	0107, 0227, 0236, 0255, 0322, 0336, 0352, 0513, 0536, 1636, 1638
RANK / RBM	0230, 0295, 0435, 1626, 1696
RANK ARENA	0184
REALISTIC	0547
RECOR	0074, 0176, 0236, 0513, 0540, 1637

RED STAR	0513
REDDER	0197, 0233, 0237
REDIFFUSION	0052, 0162, 5338
REDO	0354
REDPOINT	0549
REFLEX	0043, 0097, 0236, 0513, 0540, 1636, 1639
RELISYS	1383
RENDER	0417, 0550, 1400, 1412, 1428, 1469, 1511, 5415, 5416, 5462
REVOX	0176, 0236, 0540
REX (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
RFT (BRUNS)	0024, 0077, 0242, 0336, 0363, 1623, 1667
RICONH	0513, 0540

RITAR	5445
RITZ	0230
RM 2000	0043, 0097, 0552, 1636, 1639, 5338
ROADSTAR	0043, 0076, 0097, 0141, 0170, 0236, 0352, 0528, 0557, 1343, 1400, 1423, 1435, 1451, 1453, 1469, 1525, 1603, 1623, 1636, 1646, 5451, 5864
ROBOTRON ELECTR	0024, 0363
ROBERTS	0327
RODEX	0513, 0540
ROSNER	0067
ROWA	0067, 0236, 0322, 0528
ROWSONIC	0067
ROYAL	0067, 0236, 0322, 0274, 0424, 0543, 1305, 1420

RUEFACH (LENCO)	0043, 0077, 0162, 0236, 0322, 0329, 0354, 0391, 0435, 0513
RUKOPIR	0513, 0540
RUNCO	1360
SABA	0025, 0043, 0051, 0055, 0089, 0090, 0092, 0094, 0095, 0119, 0164, 0181, 0229, 0242, 0513, 1603, 1626, 5334, 5422, 6114, 6203
SAGEM	0073, 1552
SAINEL	0230
SAISHO	0065, 0067, 0083, 0196, 0237, 0300, 0322, 0354, 0418
SAITO (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 1703, 2356, 4340, 4341
SAIVOD	0043, 0236, 0513, 0540
SAKAI	0067

SAKIO	0322, 0354
SALORA	0052, 0075, 0080, 0082, 0083, 0137, 0147, 0162, 0170, 0178, 0192, 0236, 0252, 0390, 0431, 0433, 1016, 1659, 1703, 1704
SAMBERS	0025, 0077, 0131, 0237, 0238, 0329, 1124, 1126
SAMPO	0046
SAMSUNG	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267, 5063, 5419, 5441, 5444, 5447, 5451, 5472, 5498, 6111
SAND	0170
SANDOR (OCEANIC)	0052, 0062, 0083, 0147, 0162, 0178, 0203, 0204, 0251, 0252, 0431, 0433, 1626, 1654, 2356, 4340, 4341
SANDRA COLOR	0025, 0067

SANSUI	0149, 0236, 0322, 0415, 0424, 0513, 0540, 0541, 0557, 0588, 1340, 1423, 1469, 1636, 5338, 5451, 5437, 5827, 5961
SANWA (SANYO)	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
SANYO	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
SAR	0067, 0083, 0513
SATRONIC	0057
SATUM (URANYA)	0025, 0114, 0136, 0227, 0236, 0354, 0513
SAVE	0513, 0540

SAVVILLE (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
SBR (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
SCHAUB	5428
SCHAUB LORENZ	0043, 0052, 0062, 0097, 0147, 0162, 0178, 0227, 0236, 0252, 0322, 0354, 0374, 0384, 0400, 0424, 0431, 0433, 0435, 0508, 0513, 0557, 1393, 1400, 1459, 1469, 1475, 1489, 1603, 1626, 1636, 1638, 1639, 1654, 5609

SCHNEIDER	0042, 0043, 0067, 0077, 0080, 0097, 0115, 0125, 0133, 0141, 0153, 0170, 0209, 0222, 0230, 0236, 0298, 0302, 0329, 0352, 0374, 0391, 0415, 0434, 0513, 0533, 0592, 1269, 1423, 1426, 1496, 1516, 1533, 1623, 1636, 1639, 1648, 1659, 2395, 4551, 5864
SCHNEIDER (F) (PHILIPS)	0024, 0042, 0046, 0067, 0119, 0120, 0133, 0153, 0302, 0352, 0391, 0522, 0536, 0540, 0584, 0585, 0586, 1317, 1364, 1366, 1380, 1383, 1415, 1557, 1605, 1607, 1617, 1618, 1619, 1623, 1629, 1630, 1631, 1632, 1633, 1672, 1705
SCOTLAND (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654

SCOTT	0114, 0327, 0547, 1317, 1638, 1639, 6119
SEARS (SANYO)	0024, 0043, 0123, 0149, 0184, 0197, 0227, 0290, 0312, 0314, 0363, 0373, 0375, 1360, 1423, 1657, 1658, 1661, 1668
SEAWAY	0043
SEDIP (PATH CINEMA)	025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
SEELVER	0043, 0513, 0540
SEG	0043, 0046, 0057, 0067, 0077, 0097, 0123, 0131, 0209, 0230, 0236, 0252, 0322, 0329, 0363, 0435, 0513, 0552, 0555, 1227, 1423, 1639, 1659, 5338
SEI (SINUDYNE)	0024, 0043, 0077, 0115, 0127, 0170, 0192, 0195, 0196, 0222, 0236, 0295, 0300, 0352, 0391, 0409, 0471, 0528, 0555, 0581, 0588, 1009, 1022, 1422, 1425, 1430, 1433, 1434, 1565, 1622, 1623, 1624, 1639

SEIGA (MITSUBISHI)	0024, 0043, 0047, 0065, 0149, 0197, 0230, 0353, 0354, 0425, 0527, 0547, 1379, 1637, 1644, 1661
SEIKO	0354
SEITECH	5871
SELECO	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
SELECT	0043
SEMP	0337
SENDAY	0236
SENTRA	0207, 1608
SET	0435, 0513
SHARP	0067, 0149, 0197, 0321, 1307, 1421, 1429, 1624, 1863, 5422, 5455, 5844, 5864, 6114

SHINELCO	5828, 5829, 5841, 5842, 5843, 5850, 5851, 5863, 5869
SHINTOSHI	0513, 0540
SHIVAKI	0111, 0230, 0513, 0540
SHIWAN (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
SHINED	0322
SHORAI	0195
SHOV	0067, 0322, 0415, 0513
SIAREM	0224, 0025, 0077, 0115
SICANTIC (LUXOR)	0052, 0075, 0082, 0083, 0123, 0137, 0147, 0162, 0170, 0178, 0192, 0252, 0390, 0431, 0433, 1016, 1704, 1713
SICE	1652
SIDEC	0230
SIEL	0230

SIEMENS	0039, 0069, 0102, 0148, 0184, 0236, 0329, 0351, 1652
SIEMSEN	5481
SIERA	0513, 0540
SIESTA	0336, 1657
SILVA	0123, 0149, 0298, 0302, 0322, 0329, 0513
SILVER	0149, 0322, 0513, 0540
SIMATEC (ORION)	0043, 0065, 0127, 0141, 0170, 0195, 0196, 0236, 0269, 0300, 0322, 0329, 0352, 0409, 0415, 0418, 0447, 0471, 0472, 0513, 0555, 0557, 0588, 1009, 1251, 1368, 1422, 1425, 1623
SIMTEL	0133, 0322, 0424
SINGER	0024, 0025, 0060, 0067, 0077, 0115, 0236, 0415, 0429, 0513, 0540, 1227, 1311, 1638

SINUDYNE	0024, 0043, 0077, 0115, 0127, 0170, 0192, 0195, 0196, 0222, 0236, 0295, 0300, 0352, 0391, 0409, 0471, 0528, 0555, 0581, 0588, 1009, 1422, 1425, 1433, 1434, 1565, 1622, 1623, 1624, 1639, 5338, 5851, 5864, 6177
SINOTECH	0322, 0374, 1084, 1251
SIREL	0025
SKANTIC (LUXOR)	0052, 0075, 0082, 0083, 0123, 0137, 0147, 0162, 0170, 0178, 0192, 0252, 0390, 0431, 0433, 1016, 1703, 1704, 1713
SKAY	0424, 0513, 0540
SKY LINE	0067, 0141
SLAVA	0067
SLIDING	1383, 1412, 1426, 1453, 1496, 1516, 1543, 1549, 1555, 1564, 1569, 2395, 4551

SMARAGD	0549
SMR (MAXWELL)	0025, 0077, 0236
SOLAVOX	0082, 0162, 1648, 1654, 1713
SOMBER (CLARIVOX)	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1667
SONICX	0236
SONIKO	0236, 0540
SONITRON	0024, 0067, 0290
SONNECLAIR	0513, 0540
SONOKO	0123, 0236, 0322, 0424, 0505, 0513, 0557, 1636, 6211
SONOLOR	0162, 0431
SONORO (AGASHI)	0236, 0322, 0513
SONTEC	0125, 0513, 1639, 1657

SONY	0065, 0140, 0149, 0174, 0215, 0339, 0373, 0513, 0785, 1084, 1352, 1356, 1470, 1528, 1656, 1672, 1674, 5414, 5436, 5452, 5499, 6115, 6179, 6117
SOUND COLOR	0043, 0141, 0143, 0170, 0236, 0322, 0415, 0557, 1415, 1603, 1636, 1638
SOUND DESIGN	0547
SOUNDVISION	0077, 0513
SOUNDWAVE	0074, 0322, 0513
SOUNDZONE	5864
SOUTHERN CROSS	1614
SOWTECH	1657
SPARKLE	0513
SPECTRA	0236, 0322, 0354
SPECTRUM	0547

SPORT GENEXXA (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654
SSANGYONG (SAMSUNG)	0067, 0075, 0082, 0170, 0209, 0227, 0296, 0312, 0322, 0352, 0375, 0384, 0422, 0453, 0513, 0515, 0528, 0542, 0547, 0565, 1328, 1356, 1382, 1404, 1405, 1644, 1657, 1658, 2066, 4267
SSS /FUNAI)	0149, 0230, 0322, 0552, 0557, 1558, 1663
STAG (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
STANDARD	0046, 0060, 0067, 0114, 0513
STAR	0236, 5470, 5475
STARLINE	0236
STARLITE	0322, 1638
STARLUX	0067, 0513

START	0513
STASSFURT (BRUNS)	0024, 0077, 0242, 0336, 0363, 1623, 1667
STENWAY	0424
STERLING	0043, 0352
STERN (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
STRATO	0322, 0513, 0540
STRONG	1586, 5467
STT SONIG	0046
STV	0162
STVI	0067, 0230
SUNIC LINE	0513
SUNKAI	0043, 0073, 0177, 0195, 0300, 0447, 0513, 0549
SUNNY	0415

SUNNYSKY	5433
SUNSTAR	0043, 0236, 0322, 1639
SUNWATT	0046
SUNWOOD	0513
SUPERLA	0025, 0230
SUPERSONIC	0236, 0322, 0415, 1637
SUPERTECH	0236, 0298, 0415, 0513, 1638, 1646
SUPERTONE (PATH CINEMA)	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
SUPRA	0067, 0123, 0322, 0329, 0354, 0422, 0547
SUPREME	0060, 0136
SWISSTEC	5819, 5821
SYCLINE	0067
SYDNEY	0067
SYSLINE	0513, 0540
SYTEL (DESMET)	0025, 0043, 0114, 0230, 0236, 0246, 0513, 1619

TADISTAR	0374
TAISHO	0230
TAKARA	0043
TALENT	1085
TALITA (CLARIVOX)	0024, 0025, 0096, 0204, 0237, 0490, 0540, 1611, 1659, 1667
TAMASHI	1323
TANDBERG	0024, 0050, 0092, 0094, 0222, 0246, 0295, 0349, 0440
TANDY	0067, 0080, 0083
TASHIKO	0080
TASTER	0046, 0322
TAUTO	0541
TCL	1523
TATUNG	0375, 0246, 0067, 0375, 0176, 0236, 0254, 0065, 0513, 0242, 1636

TCM	0209
TD DESIGN	0176
TDA	0557
TEAM	0424
TEAC / TEAK	0043, 0046, 0047, 0222, 0391, 0562, 1269, 1510, 1607, 1637, 5965, 6205, 6206, 6207
TEC (DUAL-TEC)	0043, 0047, 0057, 0067, 0097, 0123, 0125, 0133, 0141, 0153, 0158, 0162, 0170, 0196, 0209, 0222, 0230, 0236, 0298, 0312, 0329, 0354, 0391, 0409, 0434, 0513, 0592, 1400, 1636, 1659
TECCO	0067, 0092
TECHLINE	0043, 0077, 0097, 0236, 0540, 0552
TECHNEMA (FORMENTI)	0025, 0043, 0067, 0083, 0114, 0136, 0170, 0196, 0227, 0230, 0236, 0322, 0354, 0435, 0513, 0541, 0542, 1619, 1636, 1637, 1639, 1654

TECHNICAL	0043
TECHNILAND	0302
TECHNICS	0310, 0427
TECHNISAT	0177, 0236, 0555, 1425, 1623, 4127, 4214
TECHNISSON	0557, 1603
TECHNOL	0067, 0176, 0322, 0354, 0513
TECHWOOD	0043, 1423
TECNIMAGEN	0170, 1452
TECNISON	0067
TECO (AMSTRAD)	0043, 0143, 0196, 0222, 0236, 0322, 0415, 0513, 1343, 1410, 1415, 1423, 1425, 1469, 1559, 1638, 1639
TECSONIC	1532
TEDELEX	0046, 0067, 0230, 0236, 0302, 0490, 0528, 1243, 1523

TEINEL, SA	1639, 1659
TEK	1127
TEKA	1127
TEKNANT	0424, 0513
TEKNIKA	1614
TEKON	0384
TELEAVIA (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
TELECHROM	0424, 0513
TELECOR	0513, 0540
TELEFUSION	0513, 0540
TELEGAZI	0162, 0391, 0513, 0540
TELEKTRON	0077
TELEMASTER	0513
TELEMEISTER	0540

TELEPOINT	0236
TELERENT	0176
TELESONIC	0513, 1338
TELESTAR	0074, 0236, 0302, 0322, 0336, 0536, 5864
TELESYSTEM	1400, 1426, 1475, 2008, 1496, 1548, 2395, 4551, 5482, 5489, 5838, 5873
TELETECH	0043, 0057, 0097, 0236, 0540
TELETON	0067, 0083, 0108, 0149, 0153, 0158
TELEVIEW	0513, 0540
TELEWIRE	5485
TELEXA	0077
TELRA	0513
TEMPEST	0067, 0513, 0540
TENNESSEE	0236, 0540
TEMCO (SHORAI)	0195

TENSAI	0043, 0046, 0060, 0066, 0067, 0077, 0097, 0114, 0195, 0209, 0230, 0236, 0238, 0282, 0302, 0352, 0354, 0415, 0513, 0540, 1632, 1636, 1639, 1659
TESLA	0024, 0046, 0230, 0236, 0237, 0352, 0415, 0528, 5338
TESLA SLOW (TESLA)	0024, 0046, 0230, 0236, 0237, 0352, 0415, 0528
TETTRAN	0114, 0230
TEVION	0043, 0209, 0236, 0513, 0557, 1603, 5481, 5851
TEXET	0067
TFT	1493
THES	1526, 1600, 5433, 5434, 5437, 5476, 5564, 5826, 5847, 5873, 6158, 6162
THOMSON 2100	5023
THOMSON 3004	5013

THORN	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
TIME	1400, 1489, 1537
TMK	0196, 0547
TOBISHI	0067, 0195, 0322, 0384
TOBO	0322
TOKO (KATHREIN)	0513
TOKAI	0043, 0236, 0322, 0435, 0540
TOKIWA (TOKAI)	0043, 0236, 0322, 0435, 0540
TOKYO	0384, 0424, 1608
TOMASHI (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
TOMITA	0067
TOPSHOW	0322
TOPVISION	0230, 0238, 0435, 0513

TORRE (THOMSON)	0051, 0055, 0089, 0090, 0092, 0094, 0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230, 0242, 0455, 0549, 0732, 1045, 1435, 1445, 1478, 2026
TOWADA	0077, 0230
TRAN CONT.	0043, 0097, 0170, 0513, 0588, 1383, 1425, 1434, 1437, 1452, 1453, 1564, 1569
TRANSONIC	0322, 0513, 0528, 0536, 1607
TREVI	0149, 0230, 0424, 1343, 1525, 1549, 5825, 5883, 5884, 5885, 5886, 5887, 5888, 5958, 5965, 6159, 6203
TRIAD	0237, 0513, 0540
TRIDENT	0067
TRILUX	0521
TRISTAR	0046, 0374
TRIVISION	1490

TRIUMPH	0196, 0513, 0540
TSOSHI (KAISUI)	0067, 0073, 0236, 0415, 0424, 1420
TSVISION	5831, 5887
TTR	1455
TV STAR	1696
TVD	0043
UHER	0077, 0083, 0108, 0114, 0133, 0153, 0176, 0238, 0513, 0540, 1126
ULTRAVISION	0237, 0290
ULTRAVOX	0050, 0077, 0354, 0067, 0513, 0236, 0409, 0125, 0115, 0189, 0024, 1639
UNDERWOOD	1391
UNIC RADIO	0025, 0067, 0123, 0435, 1657, 1659
UNIMOR	0236, 0336, 0153, 1657
UNITECH	5864

UNITED	0043, 0141, 0145, 0541, 0557, 1400, 1423, 1603, 1657, 5415, 5422, 5433, 5437, 5454, 5476, 5833, 5849, 5850, 5864, 6120
UNITRON	0595
UNIVERSUM (QUELLE)	0043, 0046, 0047, 0065, 0066, 0067, 0069, 0074, 0075, 0077, 0083, 0094, 0096, 0097, 0102, 0108, 0123, 0125, 0136, 0137, 0140, 0147, 0148, 0149, 0162, 0164, 0167, 0174, 0176, 0184, 0195, 0196, 0197, 0215, 0222, 0230, 0236, 0242, 0259, 0282, 0287, 0290, 0295, 0296, 0298, 0300, 0302, 0310, 0312, 0322, 0326, 0329, 0337, 0339, 0351, 0352, 0375, 0390, 0391, 0409, 0418, 0427, 0431, 0433, 0434, 0471, 0513, 0516, 0540, 0552, 0555, 0558, 0592, 1126, 1352, 1629, 1632, 1636, 1639, 1649, 1650, 1652, 1653, 1654, 1656, 1657, 1658, 1672, 1674

UNIVOX	0024, 0162, 0237, 0540, 1659
UNK	0025, 0043, 0230, 0236, 0375, 0557, 1636
URANIA (SAMBERS)	0025, 0077, 0131, 0237, 0238, 0329, 1124, 1126
URANYA	0025, 0114, 0136, 0227, 0236, 0354, 0513
UTAX	0067
VANGUARD	0083, 0123
VENTANA	0043
VDTECH	6161
VESTEL	0042, 0043, 0057, 0083, 0097, 0230, 0236, 0298, 0513, 0552, 1423, 1631, 1636, 1639, 5338, 6114
VEXA	0067, 0424, 0513
VICEROY	0067, 0322, 0329, 1082
VIDELOGIC	0067, 0322
VIDECON	0046

VIDEOMAC	0067, 0322
VIDEON	0236
VIDEOSAT	0057, 0125
VIDEOSYSTEM	0540, 1636
VIDEOTON	0043, 0060, 0067, 0097, 0119, 0178, 0290, 0302, 0374, 0391, 0435, 0441, 0540, 1423, 1659
VIDESON	0230
VIDITAL	0322
VIDIKRON	0077, 0114, 1661
VISIOLA (PATH CINEMA)	0025, 0067, 0114, 0204, 0230, 0237, 0435, 1659
VISION 2000	0236, 0322, 0540, 1636
VISION MAGIC	1412
VISIONREX	0025
VISIOSAT	1599

VISTA (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
VISTAR	0203, 0431
VSM	0181
VORTEC	0145, 0513, 0540
VOXSON	0024, 0080, 0136, 0322, 1223, 5609, 5850
WAGNER	1654
WALKIE	0153, 0295
WALKVISION	0043
WALTHAM (VIDEOTON)	0043, 0060, 0067, 0097, 0119, 0178, 0290, 0302, 0374, 0391, 0435, 0441, 0540, 1423, 1659
WATSON	0043, 0046, 0080, 0097, 0105, 0114, 0115, 0196, 0209, 0236, 0322, 0513, 0536, 0552, 1636, 1639

WATT RADIO	0067, 0077, 0115, 0060, 0227, 0238, 0298, 0513, 1657
WEBER	0047, 0125, 0322
WEGA VISION	0024, 0149
WEGAVOX	0043, 0057, 0097, 0141, 0236, 0302, 0322, 0374, 0528, 0540, 0555, 0592
WELLFUND	0424
WELLINGTON	0043
WELLTECH	0557
WELTBlich	0114, 0236, 0513, 0540, 1638, 1639, 1646
WESTON	0424, 0435, 0540
WESTWOOD	0043, 0170, 0540, 1338
WHARFEDALE	0170, 0540, 1338

WHITE WESTINGHOUSE	0067, 0077, 0083, 0108, 0114, 0115, 0131, 0136, 0153, 0227, 0230, 0236, 0295, 0322, 0374, 0424, 0435, 0513, 0541, 1636, 1639, 1658, 1659
WILSON	0043
WINDSOR	0043, 0097, 0513
WINDSTAR (THORN)	0051, 0217, 0229, 0237, 0242, 0254, 0302, 0322, 0378, 0455, 0513, 1616, 1663, 1700
WINDY SAM	0540
WINNER	1346
WINSTON	0043, 0424, 0513
WINTERNITZ	0097, 0354, 0497
WORLD TECH	0513
WORLDVIEW	0046, 0415, 1636
WOV	1450
WREMEN	0238
XCELLENT	0513, 1338, 1638

XENA	0204
XONYCS	0236
XRIPTON	0074, 0236, 0540, 1638
YAMISHI	0424, 0540
YOTAKA	0513
YUMATU	0074, 0322, 0374, 0415
ZAMPA	0052
ZANELA	0321
ZANUSSI (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653
ZAPP	5338, 5414, 5418, 5422
ZEM	5338, 5418, 5422
ZEPHIR	5464, 5825
ZOPPAS (SELECO)	0062, 0080, 0108, 0153, 0158, 0170, 0197, 0222, 0236, 0242, 0295, 0352, 0390, 0428, 0429, 0435, 0440, 0522, 0541, 1181, 1623, 1642, 1653