

Now Hear Mpow.

Air 2.4G Wireless Gaming Headset
The Air 2.4 GHz Wireless Gaming Headset
comes with a 50mm Dual Chamber, which
satisfies your need for sound. You can move
freely, react faster, communicate clearly, and
lead your squad to victory. Born for every
game fanatic, and engineered for winning.



Part Number: BH415AR/AS/AD



TABLE OF CONTENTS



Product overview	0 ⁻
Headset Power/ Mic button	03
Headset LED guide	O <u>r</u>
Headset charging	06
Basic Setup	O ^r ,
Headset connection (PC)	03
Headset connection (MAC)	1(
Headset connection and config	uration (PS4 /PS4 Slim/PS4 Pro/)12
,	7
Headset connection (wired)	
Troubleshooting Tips	1e
Technical Specifications	




PRODUCT OVERVIEW



A. Headband adjustment slider

B. Detachable noise cancellation mic

- C. Mic mute button
- D. Microphone port

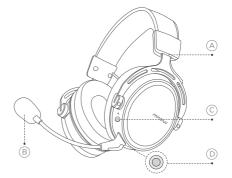




PRODUCT OVERVIEW



- F Volume wheel
- F Power Button
- G Power LFD
- H.USB charge port
- I. 3.5mm Audio Port
- J. USB charge cable
- K.3.5mm headphone cable
- L.2.4G Wireless adapter
- M.Wireless status light

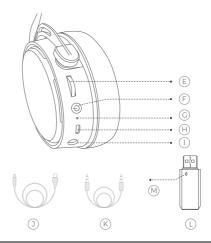




HEADSET POWER/ MIC BUTTON



Power ON/OFF

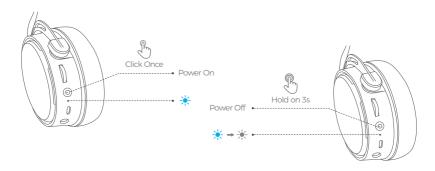




HEADSET POWER/ MIC BUTTON



MIC ON/OFF

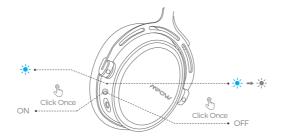



HEADSET LED GUIDE



How to Connect








HEADSET CHARGING



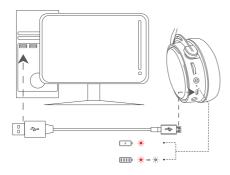


Power LED	Charge status
Breathing	Charging
Off	Charging complete

It is recommended to fully charge the headset before first use.



BASIC SETUP




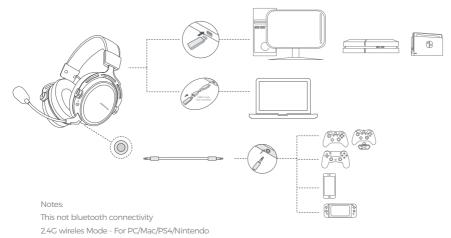



HEADSET CONNECTION (PC)



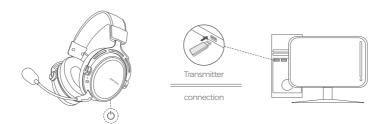

To use the headset wirelessly on your PC:

- 1. Connect the wireless adapter to a USB port on your PC.
- 2. Press the power button on the headset for 3 seconds to power on.
- 3. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.

 Note: If it is your first time using the headset you may need to set the headset as the default input and output device.



HEADSET CONNECTION (PC)



Headset Windows configuration



1.open the 'Control Panel', click on 'All Control Panel Items', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device'.




2.Click on the 'Recording' tab, then right-click 'MPOW wireless gaming headset' and select 'Set as Default Device'



HEADSET CONNECTION (MAC)



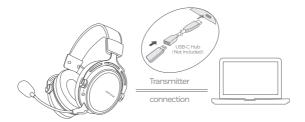

To use the headset wirelessly on your MAC:

- 1. Connect the wireless adapter to a USB port on your MAC.
- 2. Press the power button on the headset for 3 seconds to power on.
- 3. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.



HEADSET CONNECTION (MAC)



Headset MAC configuration

1.Click on 'System Preference...'



3.Click on 'Output', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device'.



2.Click on the 'Sound', then go to the next step.2.Click on the 'Sound', then go to the next step.



 
4.Click on 'Input', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device'.





MPOW HEADSET CONNECTION AND CONFIGURATION (PS4 /PS4 SLIM/PS4 PRO/)





To use the headset wirelessly with PlayStation 4 (PS4)

- 1. Turn on your PS4 game console
- 2. Connect the wireless adapter to a USB port on your PS4.
- 3. Press the power button on the headset for 3 seconds to power on.
- 4. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.



MPOW HEADSET CONNECTION AND CONFIGURATION (PS4 /PS4 SLIM/PS4 PRO/)



Headset PlayStation 4 configuration

1.Click the 'settings' in the screen.



3.Click on the 'Audio Devices' tab. then go to the next step.



2.Click on the 'Devices' tab, then go to the next step.



 
4.Click on 'Input Device' and 'Output Device', right-click on 'MPOW wireless gaming headset' and select 'Set as Default Device', adjust the 'volume control (headphones)'.





HEADSET CONNECTION(NINTENDO)






To use the headset wirelessly with Nintendo Switch

- 1. Turn on your Nintendo Switch Then plug the Switch into the docking station and connect the monitor.
- 2. Connect the wireless adapter to a USB port on your Nintendo docking station.
- 3. Press the power button on the headset for 3 seconds to power on.
- 4. When the wireless adapter status light is solid and the headset ear cup LED is solid, the headset is connected.



HEADSET CONNECTION (WIRED)



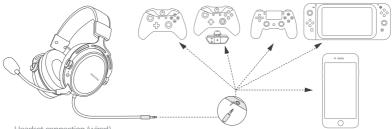

Headset connection (wired)

The headset can be used as a wired headphone with the included 3.5mm audio cable. To use the headset in wired headphone mode:

- 1. Connect the 3.5mm headphone cable to the headphone port on the headset
- 2. Plug the 3.5mm headphone cable into your device

Note: The microphone are not functional in this configuration.



TROUBLESHOOTING TIPS



No sound/low sound				
Possible cause	Solution			
Volume control turned down	Press the Volume Up button on the Ear Force Headset Audio Controller If necessary, press the Game button of the Chat/Game Mix.			
Loose connector	Confirm that each plug is inserted firmly and fully			
App Problem	Close the active App and re-open it. Alternatively power on/off your Xbox One. At times the Audio Output in a particular Application may need to be reset.			

Microphone not working	
Possible cause	Solution
Chat volume control turned down	Press the Chat Button on the Chat/Game Mix of the Ear Force Headset Audio Controller.
Loose connector	Confirm that each plug is inserted firmly and fully.

Voice interrupted		
Weak	Weak signal	Checkthe default sound device is selected for this headset
rroun		Check the network

If your issue is not resolved by these steps, please visit: support@xmpow.com or email us thought Amazon.



Charles Concit it

TECHNICAL SPECIFICATIONS



Standby Time

Speaker Sensitvity	MIC Sensitvity	Standby Time
99±3dB	-38±3dB	200H+
Playing Time	Charging Time	Battery Capacity
17H	3~4H	1100mAh
Charging Input	Connectivity	Frequency
5V === 1000mA	2.4GHz Wireless 3.5mm Audio Cable	20-20kHz

MIC Concit (it)