


# OPPO Enco W11

True Wireless Headphones

oppo

## Overview

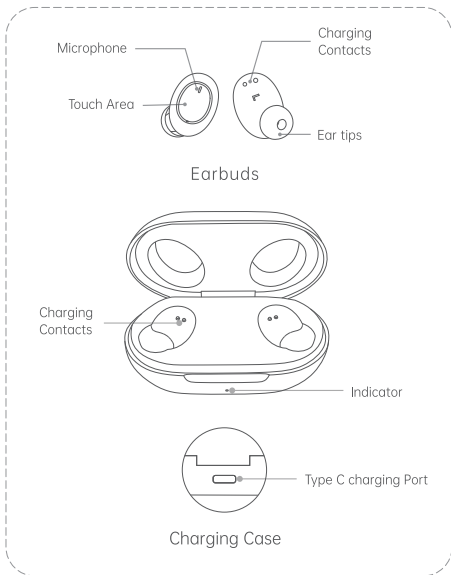

### In the Box

The box contains the OPPO Enco W11 True Wireless Headphones, the USB-C cable, S, M, L size ear tips (the size M ear tips are mounted on the earbuds), the Quick Start Guide, and the warranty card.

## Bluetooth Pairing

1. When using for the first time, open the Charging Case and the earbuds will start pairing automatically.
2. Turn on Bluetooth on your device:
  - Normal Pairing: On the Bluetooth interface, search and select "OPPO Enco W11".
  - Quick Pairing: Hold near unlocked OPPO phone, then follow the onscreen instructions.

※ Not all models support quick pairing. For details, please visit [www.oppo.com](http://www.oppo.com).

## Automatic Connection

After the pairing record has been recorded, open the Charging Case, then the earbuds will connect to your device automatically. If the connection fails, the earbuds turn to pairing mode.

## Pairing with Other Devices

Disable Bluetooth feature on your device, the earbuds will start pairing automatically, the earbuds then are available for pairing with a new device.

## Charging

### Check Charge Status

The Indicator shows charge status of the earbuds when they are in Charging Case. Otherwise, the Indicator shows charge status of the Charging Case.

The indicator color indicates the battery level, red indicates low battery, yellow indicates medium power, and green indicates high battery.

### Charge the Earbuds

The earbuds charge while in the Charging Case and the lid close.

## Charge the Charging Case

Use the USB-C cable to charge the Charging Case. The Indicator will light up when charging.

- ※ If there is sweat or liquid on the Charging Contacts, clean them before charging. Otherwise corrosion and damage may occur.
- ※ The earbuds and the Charging Case could be damaged when they are out of battery for over 2 months, please charge in time.

## Touch Control

Function	L	R
Play / Pause	•	•
Previous Track	• •	
Next Track		• •
Increase Volume		press and hold
Decrease Volume	press and hold	
Answer/End a call	• •	• •
Voice Assistant	• • •	• • •

- ※ "•" means touch it once.
- ※ Whether voice assistant is supported depends on the brand and the model of the device.

## Resetting

1. With the earbuds in the Charging Case and lid open, and disconnect the earbuds with the device.
2. Press and hold the right/R earbuds until the Indicator flashes red three times. Then the earbuds have been restored to factory settings.

## Specifications

Model	ETI41
Charging Case Model	ETI42
Driver	8 mm dynamic driver
Frequency response range	20 Hz - 20 kHz
Microphone sensitivity	-38 dBV/Pa
Bluetooth codec	AAC/SBC
Bluetooth version	5.0
Bluetooth range	10 m
Battery type	Rechargeable Lithium-ion battery
Battery capacity	40 mAh (Earbuds) 400 mAh (Charging Case)
Playtime (50% volume)*	5 h (single charge) 20 h (with Charging Case)
Charging time	2 h (Earbuds) 2 h (Earbuds + Charging case)
Charging input (charging case)	5 V = 1 A

※ The battery capacity, audio playtime, and charging time were tested in our OPPO laboratories at a temperature of 25°C using an OPPO standard charger. The actual results may differ slightly based on environmental factors and the charger used.

※ All these specifications were obtained based on tests performed by OPPO laboratories.

※ This guide is provided for reference only. Please refer to your actual device for its final functions and features.