 
 


OPPO Enco W51
True Wireless Headphones

oppo

Overview

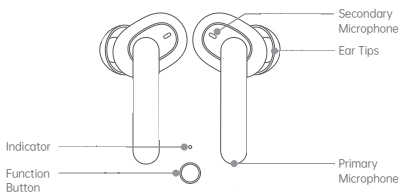

Quick Start Guide

Warranty Card

Bluetooth Pairing

1. When using for the first time, open the Charging Case and the headphones will start pairing automatically.
2. Turn on Bluetooth on your device:
 - Normal Pairing: On the Bluetooth interface, search and select "OPPO Enco W51."
 - Quick Pairing: Hold near unlocked OPPO phone, then follow the onscreen instructions.

※ Not all models support quick pairing. For details, please visit www.oppo.com.




Automatic Connection

After the pairing record has been recorded, with the headphones in the Charging Case and lid open, then the headphones will connect to your device automatically.



Pairing with New Devices

With the headphones in the Charging Case and lid open, press and hold the Function Button until the Indicator blinks. The headphones then are available for pairing with a new device.

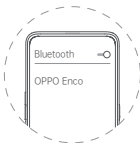

Wearing Detection

When you listen to music while wearing both units of the headphones, the music playback will be paused if either of them is removed. When the removed unit is worn again, the music playback will be resumed.

Touch Control

During media playback, double tap on the right headphone to play the next track, double tap on the left headphone to switch the audio effects.

During a call, double tap to answer / end the call.



Audio Effects

Switching audio effects: double tap on the left headphone.

- Balance mode: excellent audio balanced for every frequency.
- Bass mode: enhanced, rich and smooth bass.

Charging

Check charge status

- The Indicator shows charge status of the headphones when they are in Charging Case. Otherwise, the Indicator shows charge status of the Charging Case.
- The indicator color indicates the battery level, red indicates low battery, yellow indicates medium power, and green indicates high battery.
- When the remaining battery charge of the Charging Case is low (the indicator lights red), the Charge Case can only complete one full charge of the headphones at most. Please charge the Charging Case in time.

Charge the headphones

The headphones charge while in the Charging Case.

※ If the device is left to lie idle for long periods, charge it every two months; otherwise, the headphones may not work properly.

Charge the Charging Case

Use the USB-C Cable to charge the Charging Case. The Indicator will light up when charging.

Resetting

1. With the headphones in the Charging Case and lid open.
2. Press and hold the Function Button for 15s until the Indicator flashes red three times. Then the headphones have been restored to factory settings.