


ZEALOT
狂热者
HIFI



S32 Outdoor Wireless Speaker

1.Product Overview

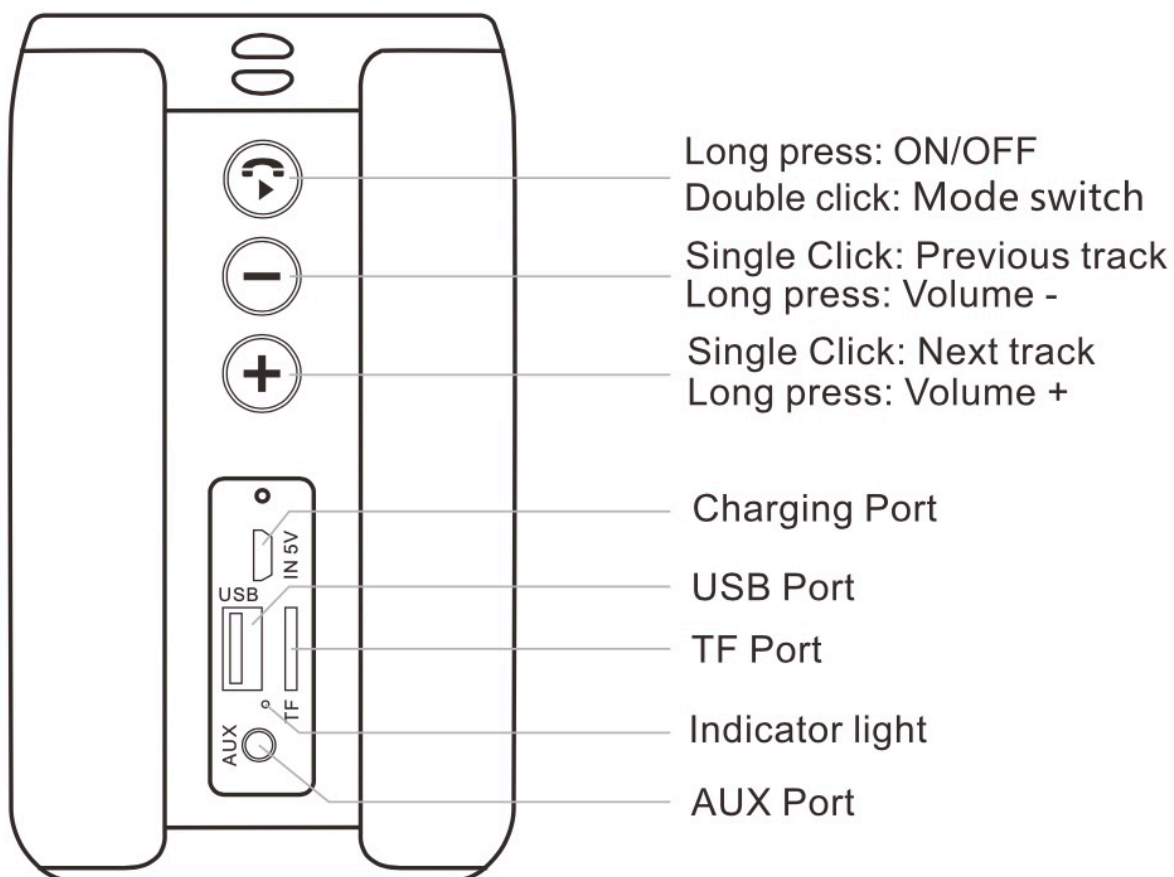

2.Power On/Power Off

Long press “” for 3 seconds.

3.Product function introduction


Mode switching sequence:

Bluetooth→Insert TF Card

→Audio Cable(AUX)→


USB→Radio

(When TF Card and AUX cable inserted together, the last inserted content will be defaulted to the playback mode.)

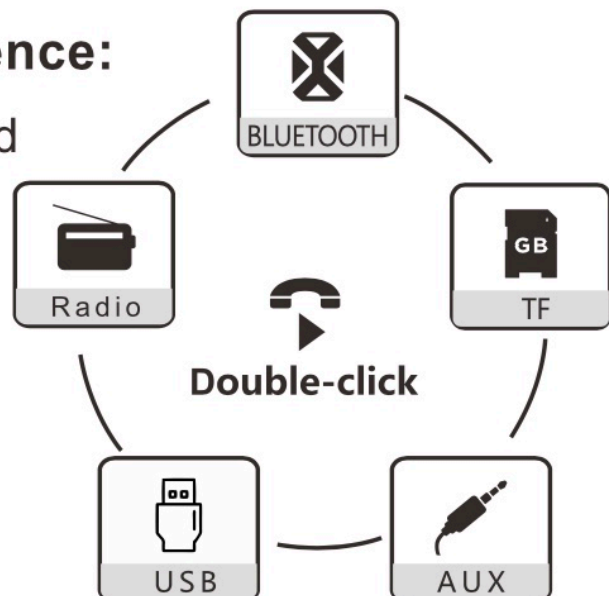




①Bluetooth Mode

Bluetooth connection:






Long press “”, after hearing the warning tone “**Blue-Tooth Mode**”, search for the bluetooth device “ZEALOT-S29” and click on the connection, then you can play music from your phone.

How to reconnect? 1. Your speakers will try to reconnect to the lost connection. 2. If the speaker does not attempt to reconnect, push the key to restart or manually reconnect via the phone's Bluetooth device menu.

When incoming call:

- Single click "": answer the phone;
- Long press "": reject to answer the call;
- Double click "": call back the last outgoing call

When playing music:

- Single click “ ,  ” button is switching the previous and
- next track;
- Long Press “ ,  ” button is adjusting the volume;
- Single click“  ” button is Play / Pause;

②TF Card Mode

Insert TF card, It will play music from TF card after hearing the warning tone “ **Music Mode** ”.



③Aux Mode

Connect with audio cable, it will switch to aux mode after hearing the warning tone “ **Linein Mode** ”.

④USB Mode

You will hear the voice “**USB Mode**” when you insert the USB disk, then you can play the music from the USB disk.

⑤Audio Mode

- Double click “” button, switch to audio mode after hearing the warning tone “ **Radio Mode** ”.
- Single click “” button is searching channel automatically, after the search is completed, the first station searched will be played.
- Single click “**—** , **+**” is adjusting the previous and the next broadcasting station;
- Long Press “**—** , **+**” button is adjusting the volume.
(Plug in the charging cable for better radio reception)

4.Product Specifications

Input voltage: 5V

Transmission distance: 10m

Frequency response: 20Hz-20KHz

Operating Voltage: 3.7V

Dimension: 74*74*123mm

Speaker: 4Ω5W

SNR: ≥85dB

Distortion: < 1%

Weight: 350g

5.Charging

- When the battery is low, you will hear the tone “**low Battery Please Charge**”, then please charge it .
 - Plug the USB cable to the adaptor (or Computer's USB port) to charge the speaker, the red indicator light will be on when charging, the indicator light will be off when fully charged.
 - Charging time may vary by different adapter, different USB charging port of computer.
-

6.Notice

- Do not throw this product into fire or water.
- Do not modify, repair or disassemble the speaker.
- Do not make it contact with combustible materials directly.
- Please keep the device away from damp and dusty environments.
- Before charging please check whether the charger model is suitable for this product.
- Do not use the Bluetooth function while charging.
- The device will automatically lose power when it's in standby,it's recommended to charge the speaker once a month.

Please keep your speaker and mobile phone within 10m working range.

Any wrong modification to the speaker may damage the speaker.
Improper replacement of batteries can lead to an explosion hazard.

