

Instruction Manual

Before operation, make sure that you have installed 2xAAA batteries into the learning remote control.

Step 1

Hold the sending end of the original remote control aiming at the receiving end of Learning Remote. (distance 2cm--5cm)



Step 2

Press 'POWER'  and 'CH ^'  buttons simultaneously. The LED will start **blinking** constantly, the learning system is on.



Step 3

Press the button of learning remote control (such as POWER button) until the LED stop blinking and **keep lighting up**, release the button.



Step 4



Press the button of the original remote control and hold about 3 seconds (such as POWER button), when receiving the correct data, the LED will **blink 3 times** quickly and then turn into blinking constantly, then release the button of the original remote control.



Step 5

To learn other buttons, repeat Step 3 + Step 4.

Step 6

Exit. When learning is completed, press 'POWER'  and 'CH ^'  buttons simultaneously again to exit learning state, the LED off.



Note: The learning remote control will exit learning state if there is no any button is pressed in 10 seconds.