



## MOVEMENT INSTRUCTION

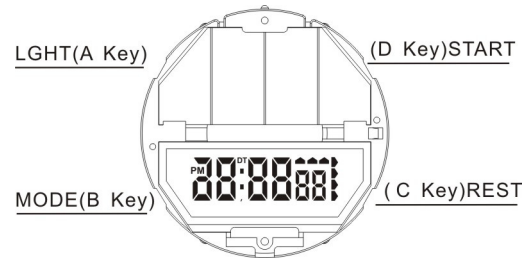

### A. Features


- ◆ 6 Digits LCD Display, Display Hour, Minute, Second, Month, Day and week
- ◆ Daily Alarm and Chime hourly
- ◆ Snooze
- ◆ 12/24H format selectable, Auto Calendar
- ◆ 1/100 second Chronograph with split functions
- ◆ EL backlight

### B. Operational Manual

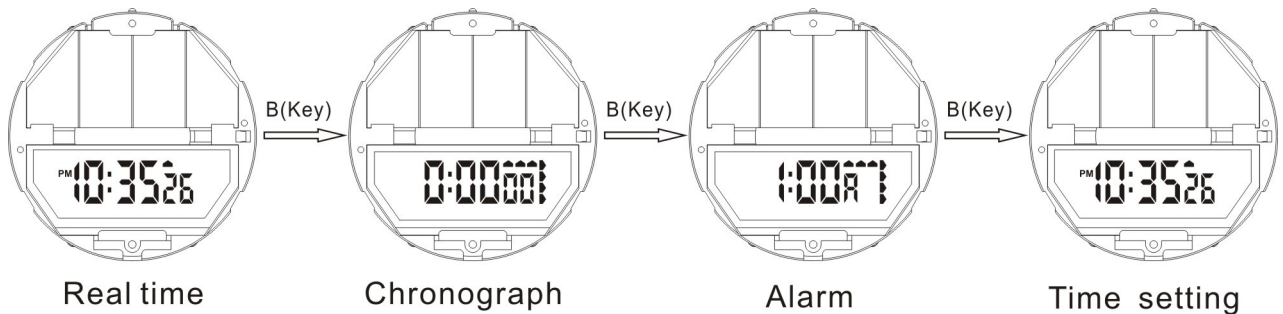

1. At any state, press A key EL backlight for 3s.

#### 2. Real Time

- ◆ Press C key to display Alarm, Press D key to display Date.
- ◆ Turn On/Off Alarm Chime
  - a) Press C+D key to turn On/Off Alarm, indicator “” displaying for On.
  - b) Press C+B key to turn On/Off Chime, all days of week displaying for On

#### 3. Chronograph

- ◆ The display range of the Chronograph is 23 hours, 59 minutes, 59.99 seconds.
- ◆ Press D key to Start/Stop running
- ◆ When stop, press C key to zero.
- ◆ When running, press C key to split count
- ◆ Then press D key to exit split count, and stop counting.
- ◆ When exit split count, press C key to display all counts, and press C key again to zero
- ◆ When running, press B key to return to Real Time Mode, and it running at back.

#### 4. Daily Alarm

- ◆ “Hour” flashing once entry Daily Alarm.

- ◆ Press C key to select “Hour” or “Minute” setting.
- ◆ Press D key to adjust the flashing item
- ◆ Press C key to confirm
- ◆ Press B key to return to Real Time mode.
- ◆ Alarm Snooze ON/OFF

At Alarm sounding state, press C key to stop sounding, and press D key to ON/OFF snooze function. When Snooze function be ON, it will sound five minutes later, and auto stop after sounding for a minute.

## **5. Time Setting**

- ◆ “second” flashing when loading, press D key to zero, Press C key to select item as following sequence: Minute-----Hour-----Day-----Month-----Week
- ◆ Press D key to adjust the flashing item.
- ◆ When setting “Hour” , “H” display for 24H format, “A” or “P” for 12H format.
- ◆ Press D key while the seconds are in the range of 00 to 59 resets them to 00 and the minutes are unchanged.