


True Wireless Earbuds

Model No.: BTHS-TWS110

User Manual	EN
Bedienungsanleitung	DE
Mode d'emploi	FR
Manuale di Istruzioni	IT
Manual de Usuario	ES

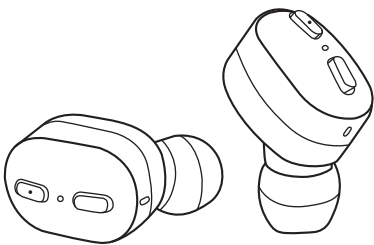


Scan for FAQ




www.avantree.com

Product Overview

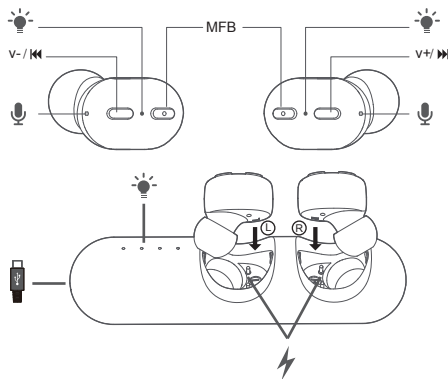

Choose a snug-fitting pair of earbud tips - M works for most (Fig.1)

Insert earbud and adjust for secure fit (Fig.2)



(Fig.1)



(Fig.2)

Specifications:

- BT Version: 5.0
- Support profiles: HSP,HFP,A2DP,AVRCP
- Operational range: up to 10 meters
- Charge voltage: DC 5V / 0.5-2A
- Charging time:
 - For earbuds: about 1 hour
 - For charging case: about 2.5 hours
- Play time: up to 4 hours
- Talk time: up to 5 hours
- Earbud size: 60*14.9*13.7mm
- Earbuds weight: 10.86g
- Charging case size: 103*27mm
- Weight with charging case: 45g

Any questions? Contact:

Support@avantree.com

(Response Time: 1 working day)

Self-service Support:

- More FAQs on support.avantree.com
- 100+ Step by step video Guide – youtube.com/avantree/playlists

Telephone Support (Mon-Fri):

- USA / CANADA +1 800 232 2078
- EU / Asia telephone No. refer to http://www.avantree.com/contact-us

WARNINGS / CAUTIONS

- Permanent hearing loss may result from long-term exposure to sound at high volumes.
- This product contains small parts which may be a choking hazard. Not suitable for children under age of 3.
- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture.
- Do NOT make unauthorized alterations to this product.
- Do NOT expose products containing batteries to excessive heat (e.g. direct sunlight, fire, etc.).
- Do not leave a fully charged battery connected to a charger; overcharging may shorten its life

Declaration of Conformity

CE: The product is in conformity with the essential requirements of Article 3.1 (a) (b), 3.2 of Directive 1999/5/EC and the essential requirements of Directive 2004/108/EC.

FCC: This device complies with part 15 of the FCC Rules.Operation is subject to the condition that this device does not cause harmful interference

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AITE-BTHS-TWS110

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Dispose of the packaging and this product in accordance with the latest provisions.



Z-PKQG-TWS110-V1

Note: Please fully charge the charging case before use.

Basic operation

FUNCTION	OPERATION
Power On	Take out from charging case.OR short press about 1s, LED light will illuminate WHITE about 1s
Power Off	Put the earbuds into the charging case and they will power off and commence charging. Or long press for about 5s, LED light will illuminate RED for about 2s, then turn off.
Pairing	Once powered on, they will connect with each other and RIGHT earbud will enter pairing emode. The LED will flash WHITE and RED alternately.
Play / Pause	Short press once
Volume Up / Down	Short press the in the RIGHT / LEFT earbud
Previous / Next Track	Long press the in the LEFT / RIGHT earbud
Answer / End A Call	Short press once
Active Voice Assistant - Siri / Google Assistant (Phone feature)	Long press about 1s then release

LED indicator status of earbuds

Earbuds status	LED indicator
Ready to pair	Flashes WHITE and RED alternately
Connected	Turns off
Not connected	Flashes WHITE once every 5s
Charging	Solid RED
Fully charged	Turns off

Connect to a mobile device

NOTE: Pair the RIGHT earbud with your mobile device ONLY.

First use >

1. Remove both earbuds from the charging case. They will connect to each other, and then the RIGHT earbud will enter pairing mode within 5-10s. Its LED light will flash WHITE and RED alternately.
2. Activate Bluetooth on your device. Search and select "Avantree TWS110" to connect. All the LEDs will turn off once connected. Now you can stream audio.

After first use (Reconnect), please >

1. Ensure the Bluetooth on your device is on.
2. Turn on the RIGHT earbud then the LEFT. Wait for 5~10 seconds, they will connect to the LAST PAIRED device.

Note: If it fails to reconnect, please click "Avantree TWS110" on your device to manually connect.

Connect to a NEW device>

1. Make sure the Bluetooth on previously connected device is off.
2. Follow the steps in the "First use" section to connect to a new device.

Mono earbud use >


The RIGHT earbud can be used individually for mono playback or calls. For volume down and previous track controls, please use your connected mobile device.

Charging

Charge the earbuds >

When you hear a voice prompt "battery low", please put the earbuds into the charging case to charge. It normally takes about 1 hour to fully charge.During charging the LED on the earbud will illuminate red. When fully charged, the LED will turn off.

Charge the charging case >

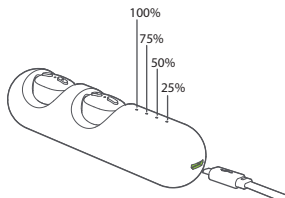

A fully charged case can charge the earbuds 5-6 times, providing up to an additional 24 hours of play time.

When all the LEDs on the case flashes white rapidly about 5 times every 20 seconds, you should fully recharge the case (takes about 2.5 hours). Please use a DC 5V / 0.5-2A USB wall charger / car charger / computer USB port with the included Micro USB cable to charge.

While charging, the LED will flash white based on the battery level. When fully charged, all the LEDs will stay white until you pull off the charging cable.

Reset / clear pairing history

If the earbuds exhibit abnormal behavior, e.g. can't pair with device, sound cutting in & out, very short range, static noise, buttons not responding, etc., please 'reset' your pairing history:

1. **Power off both earbuds manually** – remove from the charging case, then long press for about 5s, LED light will illuminate RED for about 2s, then turn off.
2. Long press about 10s from off status. **DO NOT RELEASE** until LED flashes WHITE and RED simultaneously (looks PINK) 3 times. It will power off thereafter.

Note:The connection between two earbuds will be also cleared. Turn on both earbuds **SIMULTANEOUSLY** to connect them. Then refer to "First use" section to connect again.

HINWEIS: Bitte laden Sie den Ladekoffer vor dem Gebrauch vollständig auf.

Grundbedienung

FUNKTION	BEDIENUNG
Strom an	Nehmen Sie die Ohrhörer von der Ladebasis ODER drücken Sie kurz ungefähr 1 Sekunde lang auf , die LED-Anzeige leuchtet ungefähr 1 Sekunde lang WEISS auf
Strom aus	Legen Sie die Ohrhörer direkt in die Ladehülle, dadurch werden diese ausgeschaltet und aufgeladen.Oder drücken Sie länger für ungefähr 5 Sekunden auf , die LED-Anzeige leuchtet ungefähr 2 Sekunden lang ROT auf und geht dann aus.
Paarung	Sobald eingeschaltet verbinden sich die Ohrhörer miteinander, und der RECHTE Ohrhörer geht in den Paarungsmodus. Die LED-Anzeige blinkt abwechselnd WEISS und ROT auf.
Abspielen / Pause	Kurz auf drücken
Lautstärke höher / niedriger drücken	Kurz auf am RECHTEN/ LINKEN Ohrhörer drücken
Voriges / nächstes Lied drücken	Länger auf am RECHTEN/ LINKEN Ohrhörer drücken
Anruf annehmen/ beenden	Kurz auf drücken
Sprachassistenten Aktivieren - Siri / Google Assistant (Telefonfunktion)	Ungefähr 1 Sekunde lang auf drücken und dann loslassen

LED Anzeigen Ohrhörer-Status

Ohrhörer-Status	LED-Anzeige
Bereit zur Paarung	Blinkt abwechselnd WEISS und ROT
Verbunden	Geht aus
Nicht verbunden	Blinkt alle 5 Sekunden
Wird geladen	Durchgehend ROT WEISS auf
Vollständig aufgeladen	Geht aus

Verbindung mit einem mobilen Gerät

HINWEIS:Paaren Sie NUR den RECHTEN Ohrhörer mit Ihrem mobilen Gerät.

Bei der ersten Verwendung>

1. Schalten Sie zuerst den RECHTEN Ohrhörer ein, und dann den LINKEN. Diese verbinden sich automatisch miteinander, und der RECHTE Ohrhörer geht dann nach 5-10 Sekunden in den Paarungsmodus. Die LED-Anzeige blinkt abwechselnd WEISS und ROT auf.
2. Aktivieren Sie die Bluetooth-Funktion auf Ihrem Gerät. Suchen und wählen Sie „Avantree TWS110“, um eine Verbindung herzustellen. Alle LED-Anzeigen gehen aus, sobald eine Verbindung besteht. Jetzt können Sie Audio streamen.

Nach der ersten Verbindung (erneute Verbindung) gehen Sie bitte wie folgt vor>

1. Stellen Sie sicher, dass die Bluetooth-Funktion auf Ihrem Gerät aktiviert ist.
2. Schalten Sie den RECHTEN Ohrhörer ein, und dann den LINKEN. Warten Sie 5-10 Sekunden, die Ohrhörer verbinden sich mit dem ZULETZT GEPAARTEN Gerät.

Hinweis: sollte keine Verbindung mit Ihrem Gerät hergestellt werden, klicken Sie bitte auf dem Gerät auf „Avantree TWS110“und stellen Sie die Verbindung manuell her.

Verbindung mit einem neuen Gerät>

1. Stellen Sie sicher, dass die Bluetooth-Funktion am zuvor verbundenen Gerät deaktiviert ist.
2. Befolgen Sie die Schritte wie „bei der ersten Verwendung“, um eine Verbindung mit einem neuen Gerät herzustellen.

Einzelne Verwendung der Ohrhörer>


Der RECHTE Ohrhörer kann auch einzeln für Mono-Playback oder Anrufe verwendet werden. Um die Lautstärkeniedriger zu stellen oder zum vorigen Lied zurückzukehren, können Sie das mit dem Ohrhörer verbundene mobile Gerät verwenden.

Ladevorgang

Aufladen der Ohrhörer>

Wenn Sie die Sprachansage „niedriger Akku“ hören, sollten Sie die Ohrhörer zum Aufladen in die Ladehülle legen. Der vollständige Ladevorgang beträgt normalerweise 1 Stunde.Während des Ladevorgangs leuchtet die LED-Anzeige am Ohrhörer durchgehend rot. Sobald der Ladevorgang abgeschlossen ist, geht die LED-Anzeige aus.

Aufladen der Ladehülle>

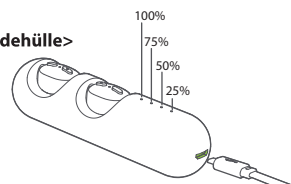

Eine voll aufgeladene Hülle kann die Ohrstöpsel 5-6 Mal aufladen, wodurch bis zu 24 Stunden zusätzliche Spielzeit erreicht werden kann.

Wenn alle LED-Leuchten am Gehäuse alle 20 Sekunden 5 Mal schnell weiß aufleuchten, sollten Sie das Gehäuse vollständig aufladen (dauert ungefähr 2,5 Stunden). Bitte verwenden Sie hierzu einen DV 5V / 0,5-2A USB-Wandanschluss / Autoanschluss / Computer USB-Anschluss und das mitgelieferte Mikro-USB-Kabel.

Während des Ladevorgangs blinkt die LED-Anzeige weiß auf, je nach Batteriestatus. Sobald der Ladevorgang beendet ist, leuchten die LED-Anzeigen durchgehend weiß auf, bis Sie das Ladekabel ziehen.

Paarungshistorie zurücksetzen/ löschen

Sollten sich die Ohrhörer nicht wie gewünscht verhalten,wenn zum Beispiel keine Paarung mit einem Gerät hergestellt werden kann, es zu Tonverzögerungen kommt,die Reichweite sehr kurz ist, statische Geräusche zu hören sind oder die Tasten nicht funktionieren usw., setzen Sie bitte die Paarungshistorie zurück:

1. **Schalten Sie beide Ohrhörer manuell aus** – nehmen Sie diese aus der Ladehülle, und drücken Sie ungefähr 5 Sekunden lang auf . Die LED-Anzeige wird 2 Sekunden lang ROT aufleuchten und dann ausgehen.
2. Drücken Sie ungefähr 10 Sekunden lang im ausgeschalteten Zustand auf . **LASSEN SIE DIE TASTE NICHT LOS**, bis die LED-Anzeige 3 Mal gleichzeitig WEISS und ROT aufleuchtet (wie PINK). Danach schaltet sich der Ohrhörer aus.

Hinweis: Die Verbindung zwischen den beiden Ohrhörern wird dadurch auch gelöscht. Schalten Sie beide Ohrhörer **GLEICHZEITIG** ein, um diese miteinander zu verbinden. Befolgen Sie die Schritte wie in „bei der ersten Verwendung“ beschrieben, um erneut eine Verbindung herzustellen.