



LAISIMO™

L3 200W TOUCH

TEMPERATURE CONTROL MOD



USER MANUAL

DIRECTORY

Technical Parameters	1
Main Features	2
Battery Installation	2
Turn On Device	3
Home Page Instruction	4
Second Page Instruction	5
System Protection	10
Battery Change Requirements	11

▶ Please read the instruction manual carefully before use.

TECHNICAL PARAMETERS:

Variable Wattage Range: 5.0W-200.0W

Working Mode: Ti; Ni; SS; PWR; TCR

Output Voltage Range: 0.5V-7.5V

Atomizer Ohm Range: 0.05ohm-2.5ohm

Battery Voltage Range: 6.2V-8.4V

Temperature Range: 100°C-300°C \ 212°F-572°F

Customize Wallpaper: Log in www.laisimo.com to download related file to DIY your own wallpaper

Bluetooth Function: Download LAISIMO APP from Google play or App Store with key word: LAISIMO



MAIN FEATURES:

- ★ 2.4" TFT Screen
- ★ Low Resistance Protection
- ★ Output Short-Circuit Protection
- ★ Heat Protection
- ★ Low Voltage Protection
- ★ Input High Voltage Warning
- ★ Reverse Battery Protection

OPERATION INSTRUCTIONS:

BATTERY INSTALLATION

Insert battery into battery slot with the positive and negative poles aligned as illustrated; ensure ribbon is wrapped around battery to make removal of the battery easier. To remove the battery, pull on the loose end of the ribbon to lift the battery out of its slot.



TURN ON DEVICE

Once batteries are installed, the device enters into "TURN OFF MODE" with "LAISIMO" logo displayed. Press fire button 5 times consecutively within 3 seconds to turn on device. Then you can see home page:




Home Page Instruction:

- 1: Temperature adjustment: press "+" "-" or by sliding the line to adjust
- 2: Wattage adjustment: press "+" "-" or by sliding the line to adjust
- 3: Red Circle: shortcut key to adjust DIY mode
- 4: Lock /Unlock Screen Function: when screen locked, you can still vape. Refer to the following pictures to lock/unlock screen



Second Page Instruction:

Slide up from the bottom screen to the top, you can enter to the second page.

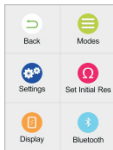

1. Back: Click Back icon, you can back to home page. You can also back to home page by pressing fire button once.

2. Settings:

2.1 Lock : YES \ NO

Click YES, device will be locked; After locking the device, press fire button 3 times continuously in 3 seconds to unlock it .

2.2 System Off: YES \ NO

Click YES, device will be turned off . You can also turn off device by pressing the fire button five times continuously

2.3 C\F: Switch Temperature Unit from Celsius to Fahrenheit

2.4 Max Puffs 0-1000 P (0 means unlimited puffs per day)

2.5 Working Time:

TC mode /DIY mode: 10-20 seconds

Power mode: 5-10 seconds

2.6 Bluetooth Sleep: 5-30 Min

2.7 Factory Reset: YES \ NO (Note : press this button, all data will be back to factory settings, but year, month, day will not be cleared)

2.8 Version: Check the version of your device or firmware

2.9 Help:Factory website to get more information

3:Display: Click into sub-menus

3.1 Wallpaper: Changing wallpaper by sliding left or right

3.2 Font Color: Click to select the font color you prefer to be displayed on the main interface

3.3 Screen Turn Dark: 5-10 seconds

3.4 Screen Turn Off: 5-20 seconds

3.5 Screen Brightness: 10 % - 100%

3.6 Date: Month, day, years.

3.7 Time: format of 24H or 12H are available.

Nickel Titanium and Stainless Steel

4. Modes:

4.1 TC mode : Nickel , Titanium and SS mode.




4.2 Power Mode :

4.3 DIY Mode : DIY TCR Mode : DIY1, DIY2, DIY3 to adjust TCR from 0.00050—0.00800;

Here is the form of Temperature Coefficient of Resistance(TCR) for Vaping Wire Types for your reference.

Ni200	0.00600-0.00700
Titanium	0.00300-0.00400
NiFe	0.00300-0.00400
SS(303, 304, 316, 317)	0.00080-0.00200

4.4 DIY Power Curve mode: DIY4, DIY5, DIY6.

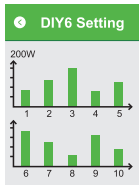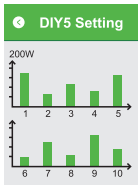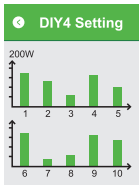

5. Set the initial res:

In TC mode, with NI, SS or TI coil, pls check the initial resistance of atomizer first in this menu.

Note: When installing a new atomizer, please make sure the atomizer is cold when checking the initial resistance, otherwise it can not read resistance accurately.

6. Bluetooth: ON / OFF

SYSTEM PROTECTION

- ⊙ ATOMIZER SHORT: When there is short circuit, system will remind “ATOMIZER SHORT”.
- ⊙ ATOMIZER REMOVE
- ⊙ CHECK BATTERY: When battery level is too low to match the current wattage/temperature setting, system will remind you “CHECK BATTERY”.
- ⊙ LOW BATTERY
- ⊙ HIGH TEMPERATURE: When the temperature for chip electronic components are overheating, system will remind HIGH TEMPERATURE and stop working .
- ⊙ Energy-saving Mode: left device not operated, display screen will darken in 8 seconds and enter into sleep mode in 15 seconds.

(PS:you can set the length of screen turn dark time under the Display menu)

BATTERY CHANGE REQUIREMENTS

When battery level is lower than 6.2V, system will remind you “LOW BATTERY” and with no output. When battery level is too low to match your current setting wattage or temperature, system will remind you “CHECK BATTERY” and output will be closed. When battery level is lower than 6.1V , system can not be set up. Then it is time to replace batteries or to get your batteries charged.

TIPS:

Please read the instruction manual carefully before use.

- 1.The L3 is not suitable for persons under the age of 18, pregnant or nursing women, persons at risk of heart disease, persons with hypertension and diabetes, or anyone taking medication for depression or asthma.
- 2.This device may include small parts. Please keep out of reach of children and pets.
- 3.Do not store the unit in excessively hot or cold environments.
- 4.Do not install the battery backwards—the device will not power on.
- 5.Do not abuse or leave the device unattended.
- 6.The device is sold purely for recreational purposes—it is not a smoking cessation device and has not been tested or approved for use as such.

Limited 90-Day Warranty

Improper use will void the warranty.

More information about warranty please refer to warranty card.

LAISIMO™

L3 200W TOUCH

TEMPERATURE CONTROL MOD

www.laisimo.com



MADE IN CHINA