

# SB17

## **Security Information**

This appliance was designed and manufactured to ensure your safety. The security mechanisms incorporated in the product will protect you if you observe the following procedures for installation, use and troubleshooting: read carefully the following instructions and observe them before handling and installing your hardware. Save these instructions so that you can refer to later. Some people are susceptible to seizures or have loss of consciousness at the sight of certain kinds of flashing lights or frequent elements in our environment. Those people are exposed to attacks when they watch certain images or playing certain video games. These phenomena may occur even though the subject has no established medical history or has never been confronted with an epileptic seizure. If you have already submitted symptoms related to epilepsy (seizures or loss of consciousness) in the presence of light stimulations, consult your doctor.

## **General**

Do not shake the product under penalty of damaging it.

Use only parts and accessories (power supply...) specified by the manufacturer.

The illustrations of the product may vary from the actual product.

## **Security**

To avoid fire or electric shock, do not place the appliance near objects filled with liquid.

If a heavy object or liquid should fall on the device, have it checked by qualified personnel before using it again.

In operation, the surface of the housing gives off heat; therefore, do not cover it or put an object on it.

## **Cleaning**

Never open the product to clean otherwise will void the warranty.

Unplug the product from the wall outlet before cleaning the product.

Clean the outside of the product with a soft, dry cloth. Never use abrasive cloth, scouring powder or solvent such as alcohol or gasoline.

## **Troubleshooting**

Refer all servicing to qualified personnel. Troubleshooting is necessary if the appliance has been damaged in any way: plug or power cord damaged, liquid spilled on the product, introduction of small objects in the product, exposure to rain or

moisture, malfunctions, dropping the product...

### **Environment**

Your STOREX product has been tested in the laboratory; It complies with the European directives for CE marking in force at the time of its marketing.

Traceability of the components of your STOREX product has been carried out; we showed us the conformity of the product with environmental directive (ROHS) in force at the time of its marketing.

At the end of life, do not dispose in the garbage but bring to your site who will move the product in a chain of electrical, electromechanical and electronic waste (WEEE) recycling.

### **Guarantee conditions**

**STOREX's** available guarantee is valid for 2 years for your product and 3 months for its accessories (power supply, USB cables...).

**STOREX** guarantees your products against any manufacturing or assembling faults. This guarantee only applies to the first purchase of your product by the end user and is not transferable if the device is resold. This warranty does not cover any incompatibilities found by end user apart from recommendations specified on the packaging, or any other incompatibility generated by other hardware or software on the computer that is connected to your product.

Proof of purchase must be presented to our services to apply **STOREX** guarantee. The guarantee doesn't cover failures or defects induced by non-compliance to this manual's instructions, neglect, alteration, improper installation or maintenance, reparation or alteration not authorized by **STOREX**, improper tests, accident or external factor such as (not exhaustive) excessive heat or dampness, power failures or bad installation / uninstalling of your product.

The only contractual obligation endorsed by **STOREX** pertains to the reparation or replacement of a defective product. In no case, **STOREX** cannot be held responsible for any loss of data, or its consequences induced by operational fault or a product failure. In any case, **STOREX** won't be bound to any financial responsibility for any amount exceeding the value of the product purchased by the end user. This guarantee is well defined and cannot be modified, decreased or increased without written consent from **STOREX**. In addition, **STOREX** cannot be held responsible for any technical advice or service provided in relation to your product. For any request not covered by this guarantee, please contact **STOREX** support or log on to [www.e-storex.com](http://www.e-storex.com) to order accessories.

You are not the grantee of this current warranty. This warranty covers only your product and is governed by French law.

### **Note:**

<p><b>STOREX</b>™ reserves the right to modify the user manual without prior notice according to the product's evolutions. You can find the latest version of the manual on our website: <a href="http://www.storex.eu">http://www.storex.eu</a></p>
--

### Charging device

Please charge the device before using.  
Make sure the charging thimbles match the points well.



### Turn the Device On/Off

Press and hold the touch button for 4 seconds to turn on the smart band, to turn off the smart band return to the home screen and press and hold the touch button for 4 seconds.

### Time & Date


After the device has been connected successful with your phone, the time will auto synchronize correctly with your phone, if not please select "Sync" in the App to allow synchronous data.



**Heart Rate Monitor** : Press and hold the button 2 seconds to turn on/off the heart rate monitor, it will be better to wear the smart bracelet on your left hand, make sure the heart rate sensor is in contact with your skin.



Pedometer

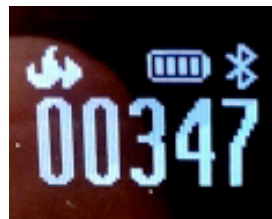


Calories



Distance

### Auto and Manual Screen Light

Press and hold the button for 2 seconds to change between auto and manual light levels. please kindly know from 0:00am to 6:00am, auto screen light will be off.

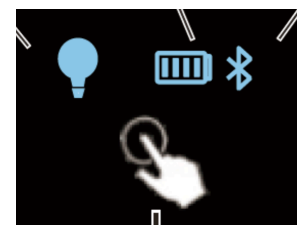

## Bluetooth Paring

- 1.turn on the smart bracelet.
- 2.Turn on the Bluetooth of your smart phone.
- 3.Download the application HPLUS WATCH in your smart phone by searching in PlayStore or AppStore, or you can scan the below QR code:





Google Play  
<http://play.google.com/store/apps/details?id=com.richtechie.hplus>



IOS

Apple Store  
<http://itunes.apple.com/us/app/hpluswatch/id1021512165?l=zh&ls=1&mt=8>

- 4.Taping the Bluetooth on the setting of the App, then the devices bluetooth name will appear, select to get pair.

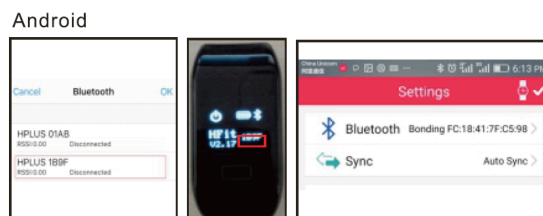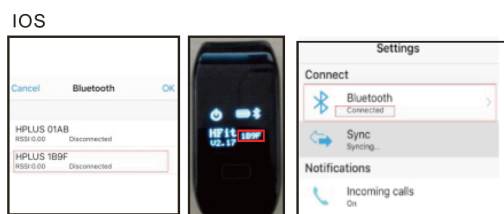

## Bluetooth Remove

1. delete the bluetooth on the APP
2. Turn off the App on the smart phone
- 3.Remove the bluetooth on the setting of the smart phone.


## How to use application

After installing HPLUS WATCH application, you may required to fill your personal information such as gender, age, weight etc.

Then please connect the device via Bluetooth


### 1. Dashboard:

You can check all data here, today, yesterday, and data summary (distance, steps, calories, heart rate and sleeping monitor data).

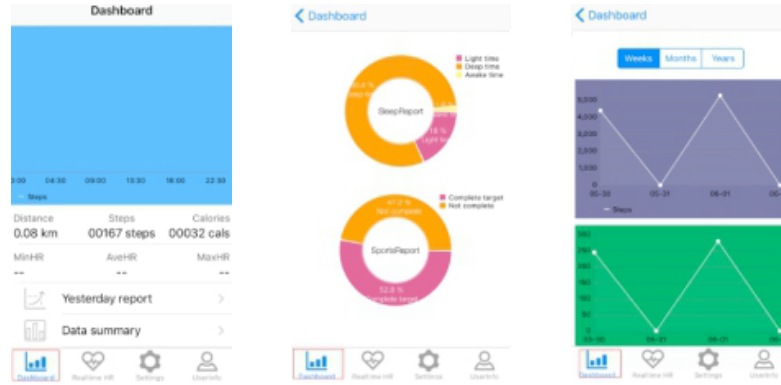

### 2. Realtime HR:

Recording your heart rate tested data.

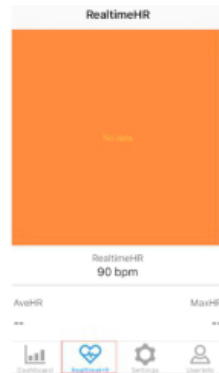


### 3. Settings

- (a)Bluetooth: tap to find out device bluetooth name get pair, please make sure your bluetooth is open on your smart phone.
  - (b)Sync: click to allow sync data from smart bracelet(Android will Auto Sync)
  - (c)Alarm clock: set alarm clock.
  - (d)Sit notification: set for periodic notification reminder.
  - (e)Time Mode: set 24 hours mode or 12 hours mode
  - (f)Unit: set Metric or Imperial (android only)
  - (g)Incoming calls: turn on this function for incoming call notice
  - (h)Message Push: turn on this function for incoming SMS message notice
- Pairing request appears on APP when bluetooth connected with iOS system smart phone, please select "pair" to get messages push on the device, select "no" for no need messages push.
- For Android system smart phone, turn on Message function to get message push.

#### 4. User Info:

Set the information of the users.

UserInfo	
Goal	10000 steps
Height	165 cm
Weight	65 kg
Age	30 years
Gender	Male
BMI	23.88



#### Sleeping Monitor

Device will automatically monitoring sleeping quality from 9:00pm---- 9am, it is better check the sleeping data after 9:00 on the App dashboard.

#### Real Time Heart Rate & All Day Heart Rate

Long press and hold the touch button to turn on/off the real time heart rate on the device, when heart rate turn on the icon flickering (the heart data will display after 15 seconds)

All day heart rate only can turn on /off the App, After all day heart rate turn on, heart rate function will work every ten minutes, please kindly know all day heart rate consume more power, and please make sure all day heart rate had been turn off when you want to remove Bluetooth connection from the mobile phone.