

TRAIL CAMERA

HC801G

HC801M



USER MANUAL



1080P full
hd

0.3s

Fast trigger
time

120°

Detection angle



Rugged
waterproof

PACKING INCLUDES



◀ Camera

Manual ▶



◀ Mounting Strap

USB Cable▶



◀ High gain
Antenna

SPECIFICATIONS

Cellular/Wireless

Frequency	2G(GSM) HC801M
	3G(WCDMA) HC801G

Photo recording

Photo resolution	16 MP
File format	JPG
Time lapse mode	5min/30min/60min
Multi-shot mode	Up to 9 photos per detection
Stamp (photos and video)	Date, time, temperature (°C/°F) and moon phase
Capture mode	Color by day, black and white by night

Video recording

Video resolution	1920 x 1080/30fps (FHD)
File format	AVI/H.264
Sequence length	Adjustable from 10 to 90 s
Capture mode	Color by day, black and white by night

Audio

Sound recording	N/A
(automatically recorded in video mode)	

Memory storage

Support	•Internal memory: none •External memory : SD/SDHC card (up to 64 GB)
---------	---

Viewing

Built-in screen	TFT 2.4"
-----------------	----------

Power source

Alkaline or lithium batteries	8 x AA
Lithium battery pack	Rechargeable battery pack(LIT-801)
External (3.5X1.5mm Jack)	DC12V 1000mA ,(6V~12V)

Detection system

Motion sensor	3xPIR
Detection angle	120°
Detection range	Adjustable from 1 to 80 ft
Trigger speed	0.3 sec
Delay between each detection	Adjustable from Instant to 30 min

Night time illumination system

LEDs	36 LEDs
Flash range	< 90 ft
Exposure	Automatic infrared level adjustment

Optical field of view

120°

Dimensions


135mmX90mmX76mm

Recommendations

Operating temperature	(-30 °C to + 50 °C) (-22 °F to +122 °F)
Storage temperature	(-40 °C to + 60 °C) (-40 °F to +140 °F)

THE SIZE LIST FOR TRANSMITTING TYPE

Version Function	4G	3G	2G
MMS	<100KB(Default), Options:200KB/100KB/50KB (depend on the limit of the local operator)		
SMTP	<40MB (Picture and Video)	<1MB (Picture only)	Same with MMS
FTP	<40MB (Picture and Video)	Not support (need to be customized)	Not support (need to be customized)
SIM	Support		
Live Show	Under development (Only in 4G camera)		

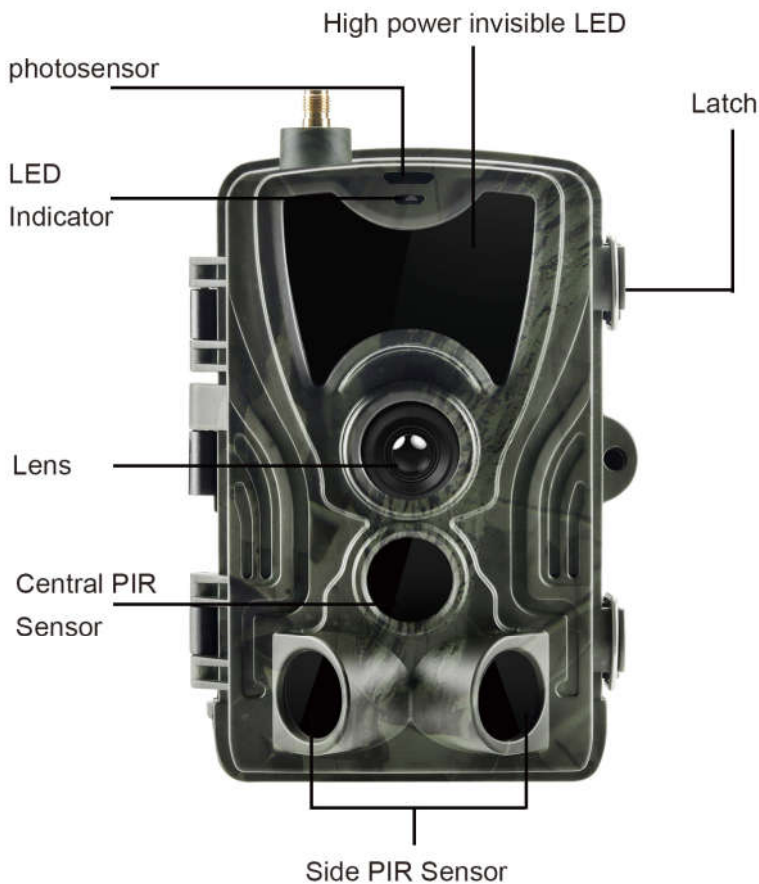



INSTALLING BATTERIES



IF USING AA - ALKALINE BATTERIES

1. Pull the gap lightly and open battery compartment.

2. Reference the battery icons located on the inside of the battery compartment. Insert the batteries according to the positive and negative battery icons.



3. Close the battery compartment to resist water and dust.



NOTE: Installing any of the 8-AA batteries in the wrong direction may cause the batteries to leak acid and could possibly explode, causing camera failure and damage to the battery compartment.

BATTERIES CONT.....

IF USING 12V DC POWER SOURCE


1. Remove the rubber port cap at the bottom of the camera . Using a universal 12V DC cord, plug in to the bottom port option.



2. Run the cord to the side of the camera where there is a hook provided behind the hinge of the camera door. This will support the power cord and take pressure off of the connection point



3. When not in use, replace the rubber port cap at the bottom of the camera to protect the 12V DC universal plug-in port.

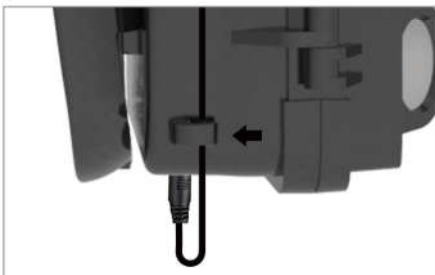


MEMORY CARD INSTALL

INSTALL MICRO-SD CARD

1. Insert the Micro SD card with the contacts facing away. The Micro SD card should slide in freely with little resistance. Continue pressing the card inward until you hear a click. This means the Micro SD card is locked in place and ready for use.




2. To remove Micro SD card, press the card inwards to release.

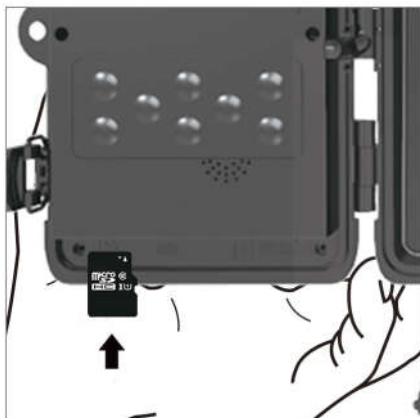

QUICK START

Enter to TEST mode

Slide the mode switch from OFF to TEST position to activate the camera and view the user setup screen.

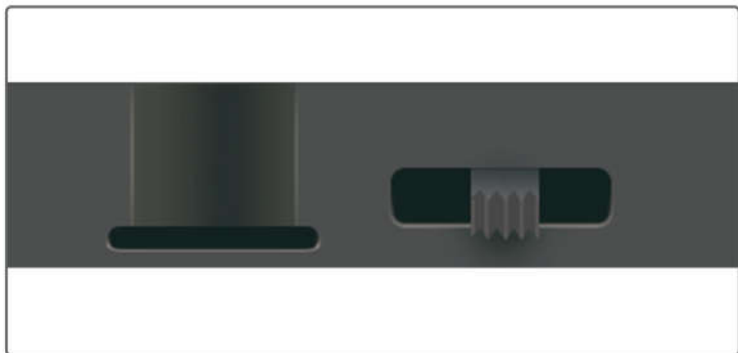


A SIM card is needed(basic model HC800A, does not need SIM card). Make sure your SIM card supports Short Messaging Service (SMS), Multimedia Messaging Service (MMS) and data traffic service.

When SIM card recognized by camera, the camera display will show carrier's icon.

There is a control panel with 8 keys when you open the camera.

OPERATING BUTTONS

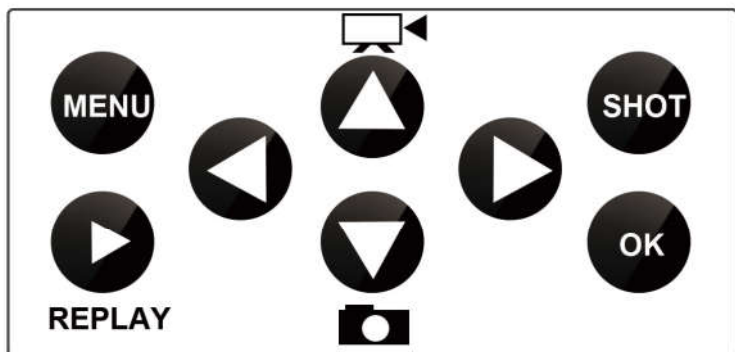

MENU: Open the Settings menu using the MENU button

REPLAY: Press this button to start the replay mode



: Change to the manual recording mode for video recordings




: Change to the manual recording mode for taking photos

SHOT: Manually take a video or photo depending on the set recording mode. Video recordings are ended by pressing the SHOT button

ok, ◀, ▶ : No function(in recording mode)

The best position to place the camera could be found through this TEST mode. Generally, it is recommended to place the camera at the height of 3 to 6 feet (1 to 2 meters) to the ground.

Press  directly to get the IMEI (in the TEST mode).






Enter to ON Mode

After you complete all the setting, slide power switch to ON to enter to auto working mode. The motion indicator will flash red for about 5 seconds and the camera starts working after that. It will immediately take pictures or record videos when person or animal enters into the area of the PIR sensor.

- **Cautions:** To avoid potential false triggers due to temperature and motion disturbances, please do not aim the camera at a heat source (e.g.: the sun, heated stone or metal) or nearby tree branches and twigs. The ideal direction to aim at is the north and the open place without heat source. Also, remove any twigs close to the front of the camera.

Advanced Setting

Menu list

				
Camera	Video	Setup	MMS	SMTP
Resolution	Resolution	Mode	MMS ON/OFF	SMTP ON/OFF
Sequence	Video Length	Language	Country	Country
ISO	Record Audio	Timelapse	MMS Phone	SMTP Email
Delay		Image Size	MMS Email	
Camera ID		TV mode		
		Date/Time		
		Timer		
		Password		
		Format		
		Default Setting		
		Version		

Camera Menu setting



Camera	Sub menu	Description
Resolution	16MP, 12MP, 8MP	Photo Size
Sequence	1/3/6/9	Number of photos taken every time
ISO	Auto, 100, 200, 400	The camera exposure level
Delay	1/5/10/30 sec/min	Waiting time from the last taking
Camera ID	0-0-0 0-0-0	Camera ID




Video	Sub menu	Description
Resolution	1080P, 720P, WVGA, VGA	Video size
Video Length	10S, 30S, 60S, 90S	The time length of video
Record Audio	On, Off	If On, Video sound is recorded



Setup	Sub menu	Description
Mode	Camera, video, camera& video, Timelapse	Taking picture, video, picture and video, taking picture regular
Language	English, Francais, Deutsch and so on	Camera Menu language
Timelapse interval	5/30/60 Min	Taking picture or video every 5/30/60 minutes constantly
Image Size	Small/Normal/Big	Size for transmitting picture Small <100KB Normal <150KB Big <200KB
TV Mode	NTSC, PAL	TV play mode


Setup	Sub menu	Description
Date/Time	2018-09-03 16:37:25	Year-Month-Date Hour: Minute:Second
Timer	ON, OFF	If On, the camera only works in the period
Password	****	4 digital numbers(1314 Universal password)
Format	SD Card	All files of memory card will be deleted
Default Setting	return menu setting to defaults	Cancel/OK
Version	03/09/2018 16:37:25	Camera version

MMS Menu

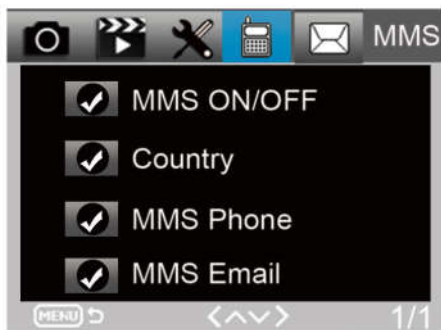

MMS	Sub menu	Description
MMS ON/OFF	Off/On	MMS Off/On
Country	Set in MMSCONFIG	Operator name
MMS Phone	Set in MMSCONFIG	Receiver's phone of mms
MMS E-mail	Set in MMSCONFIG	Receiver's mail of mms

SMTP Menu

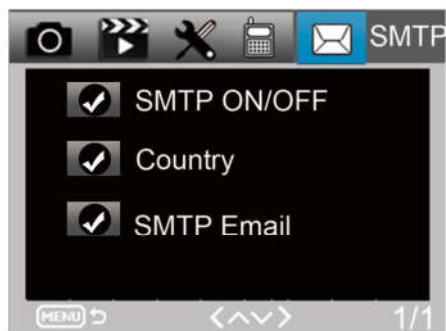


SMTP	Sub menu	Description
SMTP ON/OFF	Off/On	SMTP Off/On
Country	Set in MMSCONFIG	Operator name
SMTP E-mail	Set in MMSCONFIG	Receiver's mail of picture

MMSCONFIG SETTING

➡ Load CD into the computer

➡ Click the MMSCONFIG.exe file from MMSCONFIG folder



➡ Fix Camera, Video and System Menu Setting (the second way to set the menu)

Note: If you have done the menu setting by remoter in TEST mode, you can skip.

➡ Fix MMS Setting

Auto MMS Mode:

In Auto MMS Mode, there is configured information for selection

- a. Choose Country
- b. Choose Operator
- c. Fill in the phone number in the right-side blank column as receiver
- d. Fill in the email address for photos receiving

Camera Parameter Setting

Menu MMS SMTP FTP

Mms Setting

MMS ON/OFF: ON

MMS MODE: Auto

Country: Germany

Operator: E-Plus

Picture No./day: 99

Gprs Setting

APN: mms.epplus.de

Account: mms

Password: epplus

Server Setting

MMSC: http://mms/epplus

IP: 212.23.97.153

Port: 8080

Phone Setting

Phone1:

Phone2:

Phone3:

Phone4:

Email Setting

Email1:

Email2:

Email3:

Email4:

Save Default Load About

Manual MMS Mode:

If there is no configured information for selection, please choose Manual MMS Mode.

Firstly, User need to choose manual and contact SIM card carrier to get and fill in the APN, Account, Password, MMSC, IP and Port information. Secondly, fill in receiver phone number or E-mail address at right side.

Camera Parameter Setting

Menu **MMS** SMTP FTP

Mms Setting

MMS ON/OFF: ON

MMS MODE: Manual

Country: Other

Operator: Other

Picture No./day: 99

Gprs Setting

APN:

Account:

Password:

Server Setting

MMSC:

IP:

Port:

Phone Setting

Phone1:

Phone2:

Phone3:

Phone4:

Email Setting

Email1:

Email2:

Email3:

Email4:

Save Default Load About

Fix SMTP Setting

This way of sending pictures is also called data transmission. It's highly popular now, the picture is sent from email to email, only charging the data cost.

Auto SMTP Mode:

In Auto SMTP Mode, there is configured information for selection

- a. Choose Country
- b. Choose Operator
- c. Choose Type of email
- d. Add sending email address on the left
- e. Add sending email address password on the left
- f. Add receiving email address on the right

The screenshot shows a 'Camera Parameter Setting' window with a tabbed interface. The 'SMTP' tab is selected, showing 'Smtp Setting' and 'Gprs Setting' sections. The 'Smtp Setting' section includes 'SMTP ON/OFF' (ON), 'SMTP MODE' (Auto), 'Country' (Austria), and 'Operator' (A1). The 'Gprs Setting' section includes 'APN' (A1.net), 'Account' (ppp@a1plus.at), and 'Password' (ppp). Below these are 'Server Setting' and 'Email Setting' sections. 'Server Setting' includes 'Type' (Other), 'No SSL' (selected), 'SSL', and 'STARTTLS' options, and input fields for 'Server', 'Port', 'Email', and 'Password'. 'Email Setting' includes input fields for 'Email', 'EmailID', and 'EmailP'. At the bottom are 'Save', 'Default', 'Load', and 'About' buttons.

Menu	MMS	SMTP	FTP
Smtp Setting			
SMTP ON/OFF		ON	
SMTP MODE		Auto	
Country		Austria	
Operator		A1	
Gprs Setting			
APN		A1.net	
Account		ppp@a1plus.at	
Password		ppp	
Server Setting			
Type		Other	
<input checked="" type="radio"/> No SSL <input type="radio"/> SSL <input type="radio"/> STARTTLS			
Server			
Port			
Email			
Password			
Email Setting			
Email			
EmailID			
EmailP			

< _____ >

Save Default Load About

The screenshot shows a software window titled "Camera Parameter Setting" with four tabs: Menu, MMS, SMTP, and FTP. The SMTP tab is currently selected. The window is divided into several sections for configuration:

- SMTPSetting:**
 - SMTP ON/OFF: A dropdown menu set to "ON".
 - SMTP MODE: A dropdown menu set to "Manual".
 - Country: A dropdown menu set to "Other".
 - Operator: A dropdown menu set to "Other".
 - Picture No./day: A numeric input field set to "99".
- Phone Setting:**
 - Phone1, Phone2, Phone3, and Phone4: Four empty text input fields.
- Gprs Setting:**
 - APN, Account, and Password: Three empty text input fields.
- Server Setting:**
 - MMSC, IP, and Port: Three empty text input fields.
- Email Setting:**
 - Email1, Email2, Email3, and Email4: Four empty text input fields.

At the bottom of the window, there are four buttons: "Save", "Default", "Load", and "About".


Manual SMTP Mode:

If there is no configured information for selection, please choose Manual SMTP Mode.

Firstly, User need to contact SIM card carrier to get APN, Account, Password information and fill in; contact sending email provider to get server, port information.

- a. Add sending email address on the left
- b. Add sending email address password on the left
- c. Add receiving email address on the right

Save the file “Parameter. dat” to Micro SD card

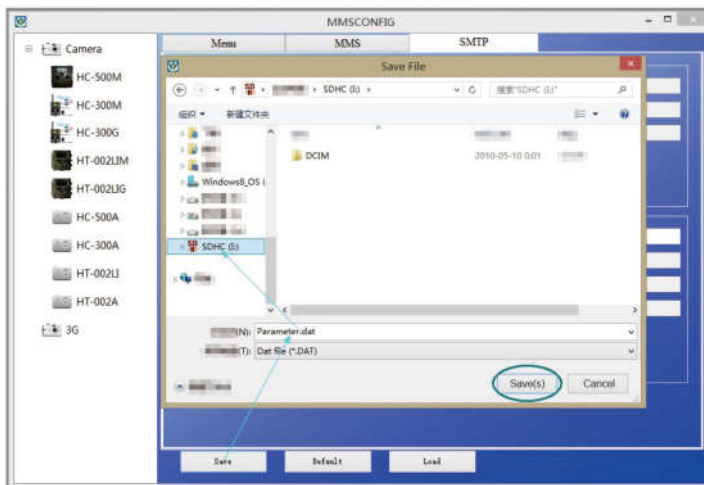

SMS COMMAND CODE

This camera support SMS remote control, control camera by sending SMS code below.

The SMS codes are:

code	Function	Meaning
530	Camera Start	Start Working
531	Camera Sleep	Stop Working
500	Capture	Camera takes a picture, then sends it to related phone or email(record on MMS,SMTP site)
505	Capture and get pic (MMS mode)	Camera take a picture, then sends it to current phone
520	Get Pic information	Camera send a a text with picture number, SD card capacity, battery lever.

TROUBLE SHOOTING

Camera Doesn't Capture Subject of Interest

- Check the PIR sensitivity. For warm environmental conditions, set the Sensor Level to “Low” and for cold weather use, set the sensor for “High”.
- Try to set your camera up in an area where no heat resources are in the camera's field of view.
- In some cases, set the camera near to water will make the camera take images with no subject in them.
- Try to aim the camera over ground.
- Try to set camera on stable and immovable objects, i.e.: large trees.
- At night, motion detector may detect beyond range of the IR illumination, reduce distance setting by adjusting sensor sensitivity.
- Rising sun or sunset can trigger sensor. Camera should be reoriented.

- If person/animal moves quickly, it may move out of the camera's field of view before photo is taken. Move camera further back or redirect camera.

Camera Stop Taking Images

- Please make sure that the memory card has enough memory storage. If the card is full, camera will stop taking images.
- Check batteries to make sure that alkaline, NIMH or lithium AA batteries left power is enough for camera to work
- Make sure that the camera power switch is at the "On" position and not at the "Off" or "Test" modes.
- When MMS/SMTP function is on, there will be around 1minute interval for camera to send out photo before camera take the next photo.
- Please format the memory card when you first time to use it or change to use another memory card

Night Vision Flash Range Doesn't Meet Expectation

- 4pcs AA batteries is not able to support camera night vision ability, please install 8 pcs AA batteries for better battery life
- make sure that batteries are fully charged or left power is enough.
- High-quality 1.5V NIMH or Lithium rechargeable AA batteries can offer much better Infra flash range than alkaline batteries.
- To ensure accuracy and quality of night image, please try to mount camera on dark environment without obvious light sources.
- To ensure accuracy and quality of night time image, please mount camera to dark environment without any obvious light sources;
- Certain surroundings (like trees, walls, ground, etc.) within flash range can get you better night time images; please do not aim camera to total open field where there is nothing within IR flash range to reflect flash back, it's like shining a flashlight into sky in night, you just can't see anything, same does camera.

Camera Take Images but won't send them to mobile phone /E-mail

- If you choose manual mode, the info you fill in may has problem, Contact SIM card carrier to confirm all the info such as Apn, server, port is correct.
- When you turn on MMS function, it doesn't need to add international phone zone number before the phone number, just fill in your mobile phone number.
- When you turn on SMTP function, please make sure that your email's server and port is correct, some email server will reject email as SPAM, you can try to find your email at SPAM box or contact seller to get test email and have a try.
- Don't rename parameter.dat, you can check your phone number or E-mail by camera menu, please save parameter.dat at the boot of memory card, otherwise camera can 't recognizes the parameter.dat

WARRANTY

With great pride and full confidence in products, we always keep our words which are given to our customers as specified warranty terms and services below. Based on a strict QC system, we initially offer all our customers one-year long time limited warranty.

Our products are warranted against defects in materials and workmanship for a period of one year from the date of original purchase. If a defect exists, we will, at our option and to extent permitted by law will

- (1) repair the product at no charge using new or refurbished parts;
- (2) exchange the product with a functionally equivalent product that is new or refurbished.

This warranty excludes damage from abuse, accident, modifications or others that are not defects in materials and workmanship. This warranty only covers failures due to defects in materials or workmanship under normal usage. To obtain warranty service, please contact us to determine the nature of problem before return the product under this warranty (with a written description of the problem and print samples) for repairing or exchanging.